
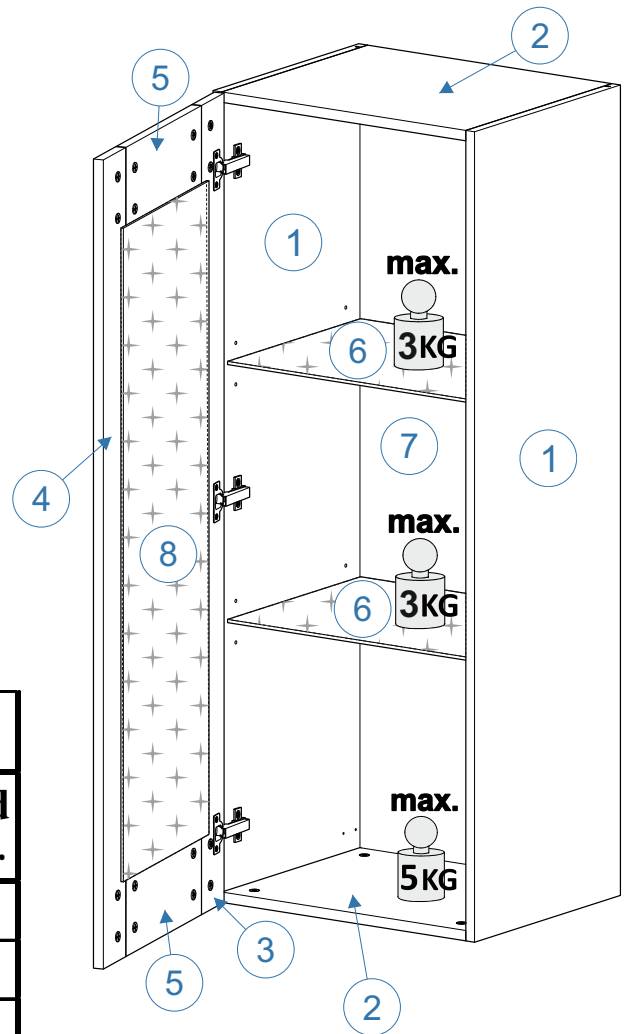


Model: Mondi Showcase

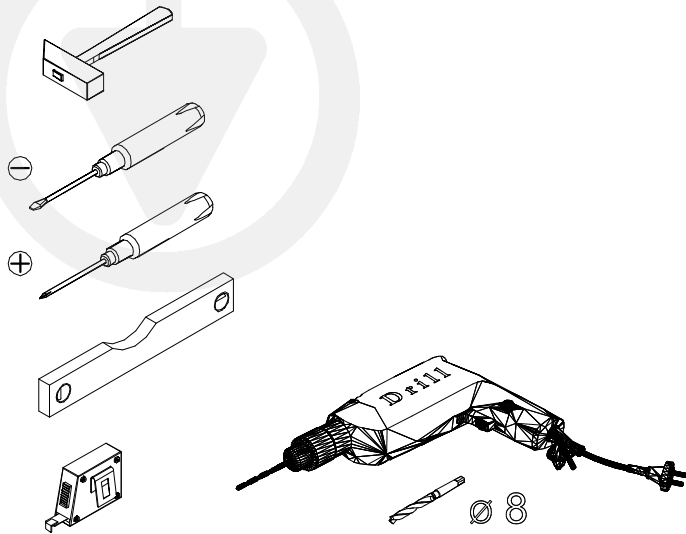

The spare parts

Part number	Lenght	Widht	Q-ty	Detailed number
1/1	1250	382	2	1
	448	382	2	2
	1248	90	1	3
	1248	90	1	4
	302	140	2	5
	446	348	2	6
	1234	464	1	7
	1008	342	1	8
Spare parts				



GENERAL VIEW OF THE SPARE PARTS

A - 12	B - 8	B1 - 8	C - 24	D1 - 16	D2 - 8	I - 1
S1 - 18	S2 - 14	S3 - 4	SW - 4	W - 4	CD - 2	CH - 1
						1x
HF - 3	SH - 6	TG - 8	R - 14	M - 3	TR - 12	

Model: Mondi Showcase



1

							
A - 12	B - 8	B1 - 8	C - 24	HF - 3	S1 - 6	CD - 2	S3 - 4

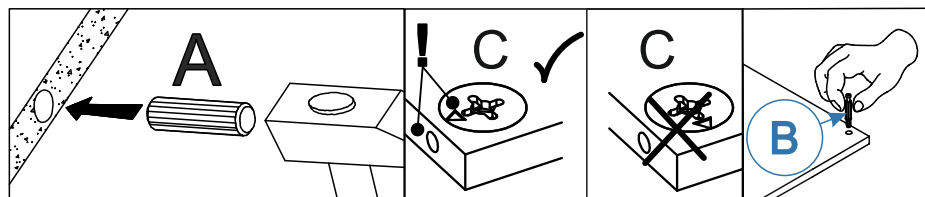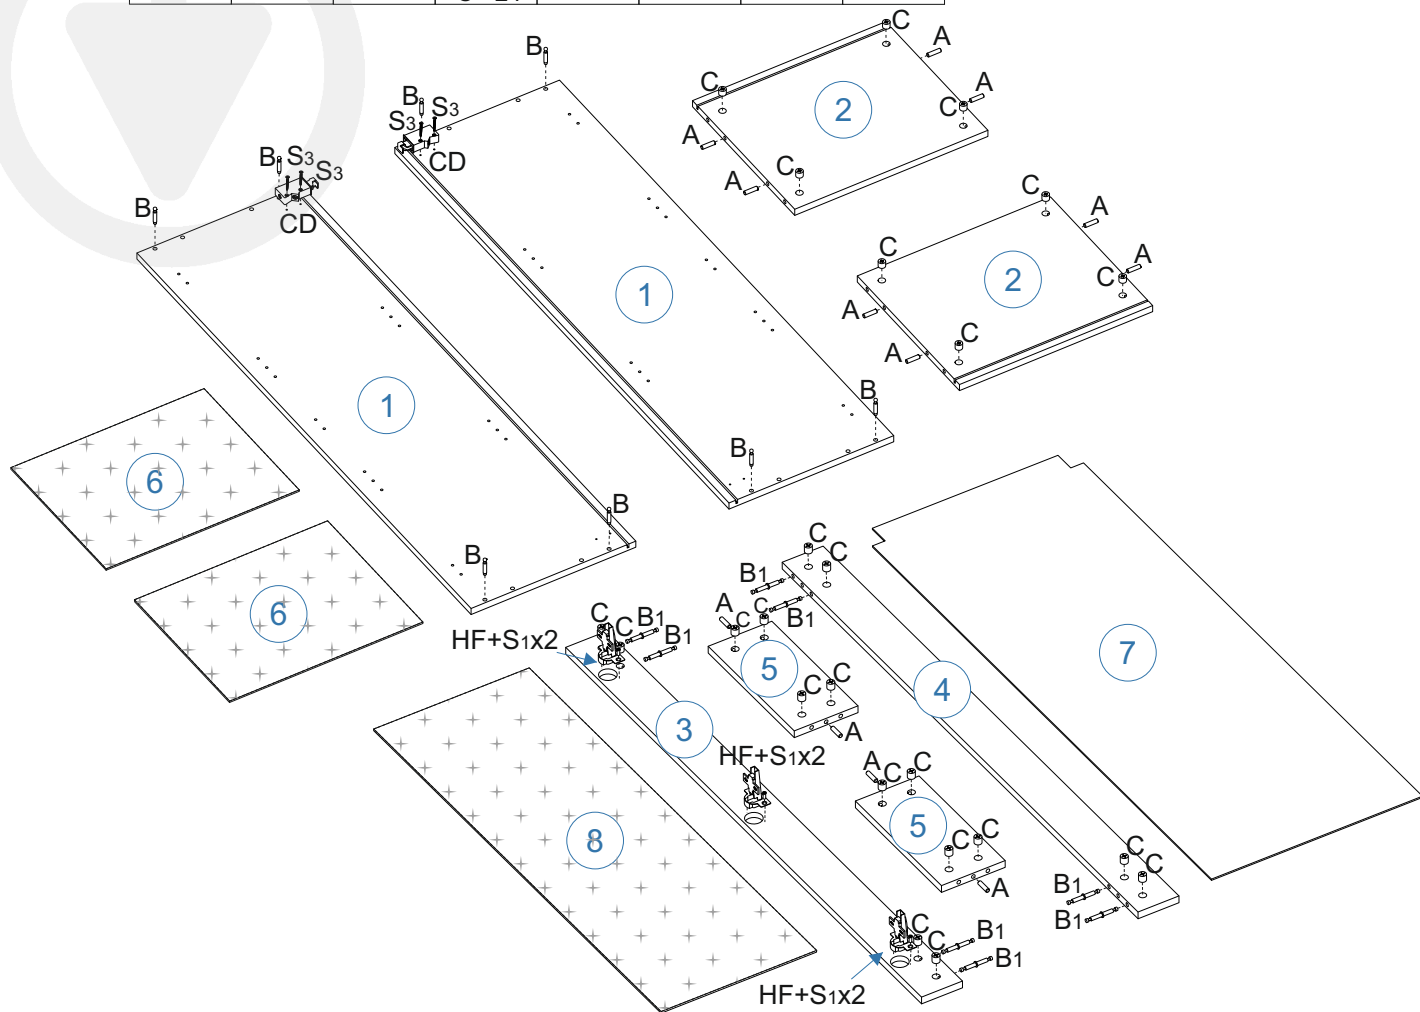

2


D1 - 8

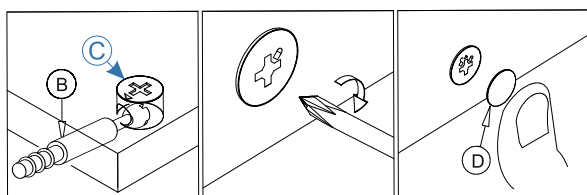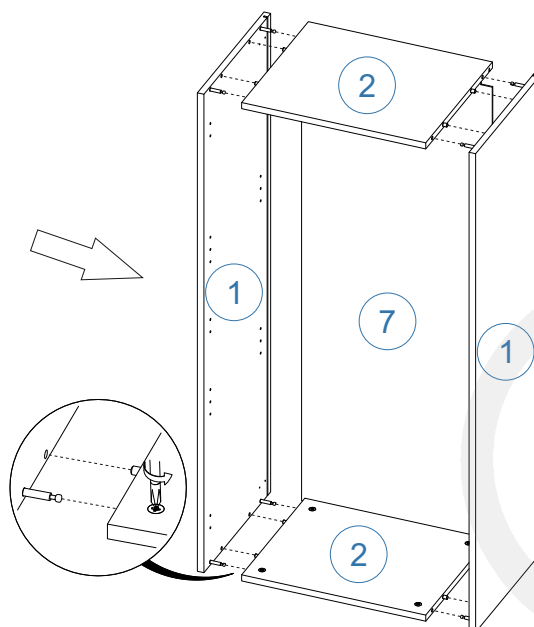

Model: Mondi Showcase

