


GBM1927

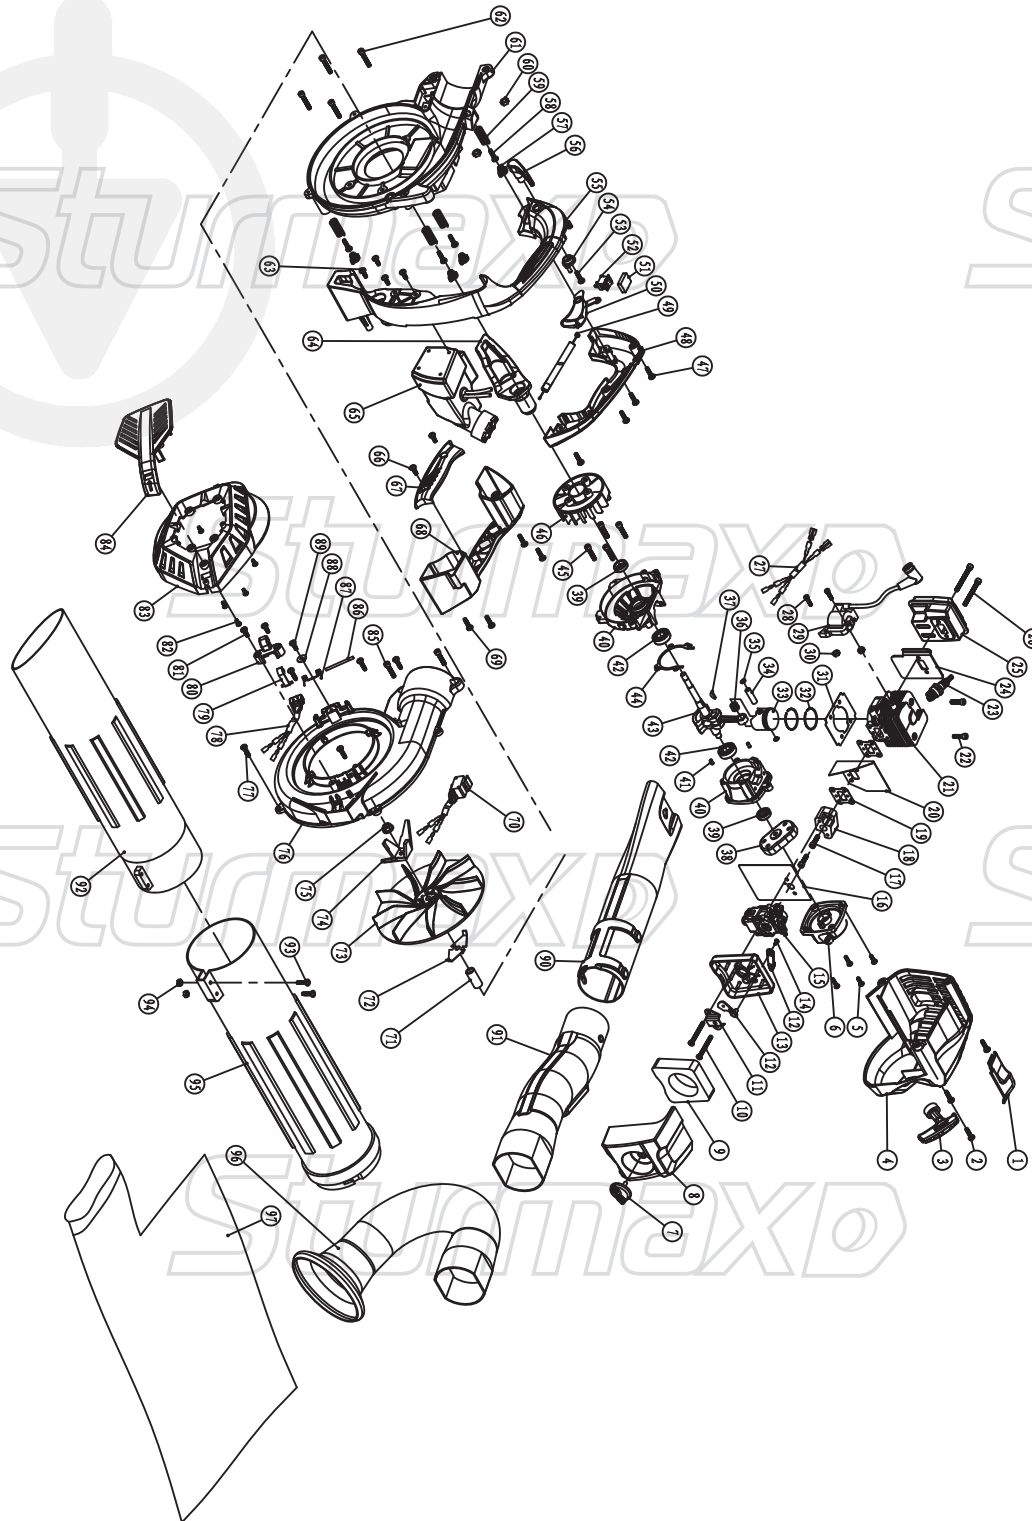

NO.	DESCRIPTION	NO.	DESCRIPTION
1	260D spark plug cover	50	260D throttle trigger
2	screw ST5*16	51	extinguishing switch dust cover
3	32 starter puller	52	extinguishing switch hull
4	260D cylinder cover	53	screw ST5*14
5	screw M4*20	54	260D Self-locking switch bushing
6	32 starter	55	260D left handle
7	knob	56	260D Self-locking switch
8	260D air filter cover	57	260D Spring seat
9	520S air filter sponge	58	screw ST5*16
10	screw M5*55	59	260D shock absorber spring
11	choke iron block	60	screw M6
12	40-5 choke components	61	260D right hood
13	40-5 air filter holder	62	screw M5*30
14	screw 3*8	63	screw M5*12
15	34 carburetor	64	260D small base
16	34 carburetor gasket	65	260D oil tank
17	screw M5*25	66	screw ST5*16
18	34 inlet pipe 30mm	67	260D Base handle cover
19	inlet pipe gasket	68	260D Base handle
20	260D Wind deflector gasket	69	screw ST5*16
21	260D cylinder	70	Micro switch
22	screw M5*22	71	9*14*32 Steel bushing
23	spark plug BM6A	72	260D Limit plate of base of wind wheel
24	34 blower mulfer gasket	73	260D blower wind wheel
25	34 mulfer	74	260 blower blade
26	screw M5*55	75	screw M8*1
27	extinguishing line	76	260D left hood
28	screw M4*20	77	screw ST5*16
29	34 ignition	78	Micro switch
30	bakelite gasket 4*10*4	79	260 Protective switch
31	32 cylinder gasket	80	260 Protective switch cover
32	34 piston ring	81	screw ST5*14
33	34 piston	82	screw ST4*8
34	piston pin 8*28.2	83	260D protective cover
35	piston circlip 8	84	260D protective cover trim
36	34 needle 8*11*11	85	screw M6*20
37	Woodruff key 3*10	86	pin 3.5*48
38	34 Aluminum dial single start	87	260 Torsion spring
39	oil seal 12*22*7	88	gasket 5*16*1.5
40	34 crank case	89	screw ST5*14
41	5*10 pin	90	260D flat pipe
42	opening bearing 6001	91	260D main pipe
43	34 blower crankshaft	92	260D Inclined suction pipe
44	34 crank case gasket	93	screw M5*20
45	screw M5*30	94	screw M5
46	34 fly wheel	95	260D suction pipe
47	screw ST5*16	96	260D dust collecting pipe
48	260D right handle	97	260D dust collecting bag
49	260D throttle line		