


!!Please take time to read and follow these instructions carefully!!

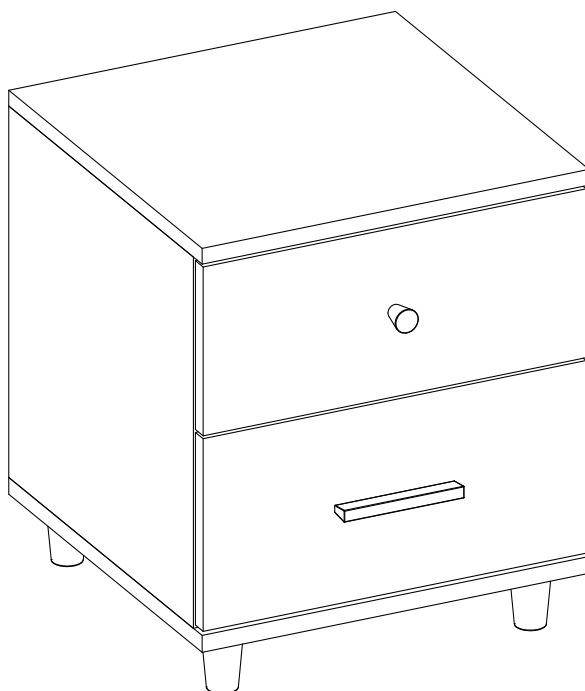

- | | |
|----------------------------------|--------------------------------|
| (D) Montageanleitung | (GB) Assembly instruction |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (TR) Montaj talimatı | (RU) Инструкция по монтажу |
| (FR) Instructions de montage | (IT) Istruzioni di montaggio |
| (CZ) Montážní návod | (RO) Instrucțiuni de asamblare |
| (HU) Összeszerelési útmutató | (SK) Montážny návod |




Fittings (Shown to scale)

Bedside Cabinet Bag 1

WARNING!


IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED




A 8x35 Wooden Dowel x12



B Locking Cam x4



C 6x30 Wooden Dowel x8




D Cam Pin x12



E 13mm Screw x8



F 20mm Screw x14




H 50 mm Screw x8



I Mini Locking Cam x8




J Insert x4

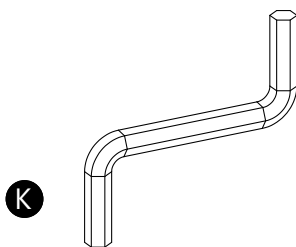

K Key 4mm x1



L 16mm Screw x9




M Plastic Wedge x4

Hardware


Bedside Cabinet

O

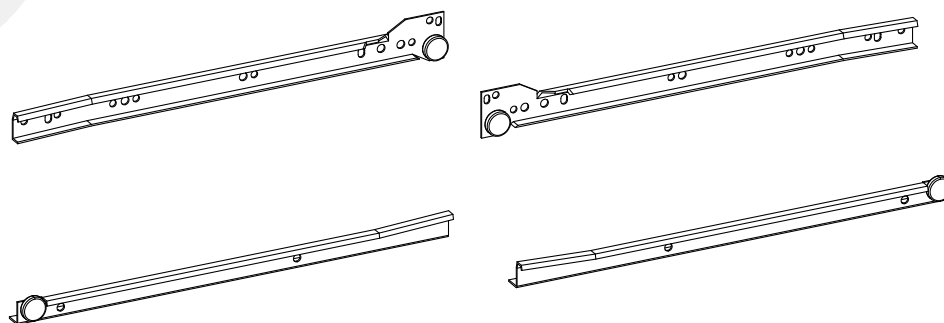

Drawer runners 350mm x2

P




Handle x 1

Q



Handle x 1

R

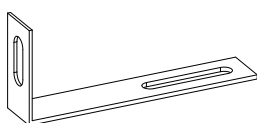


Wall Fixing Bracket x1

S



Foot x 4

T




25 mm Screw x3

Tools required




Phillips screwdriver
(small & medium)

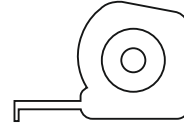


Ruler/tape
measure




Flat screwdriver
(small & medium)

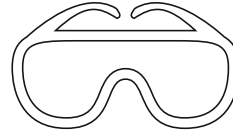

Eye protection
(when using a
hammer or glue)

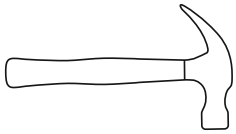

Hammer

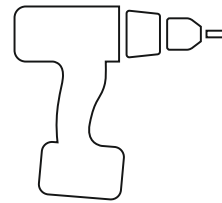

Power Drill



Pencil



Set Square




Drill Bits




Spirit Level

Panels


Bedside Cabinet

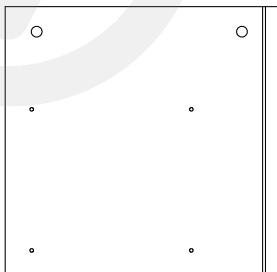


1 Left Side Panel
(376 x 382mm)

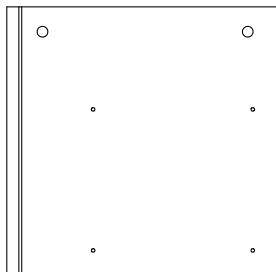


2 Right Side Panel
(376 x 382mm)

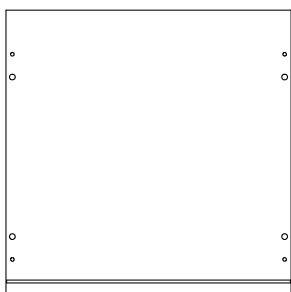


3 Top Panel
(400x400mm)

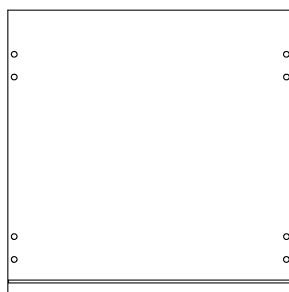


4 Bottom Panel
(400x400mm)

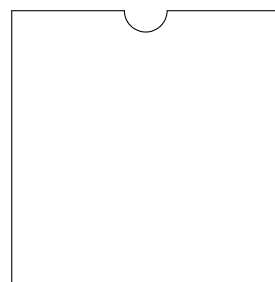


5 Back Panel
(386 x 376mm)

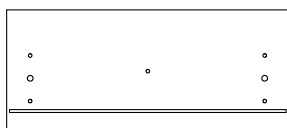


6 Top drawer front
(396 x 171mm)

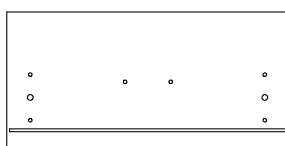

7 Bottom drawer front
(396 x 195mm)



8 Left Side Drawer (x2)



9 Right Side Drawer (x2)



10 Back Drawer (x2)










11 Drawer Bottom (x2)

Bedside Cabinet




WARNING!

IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED



1

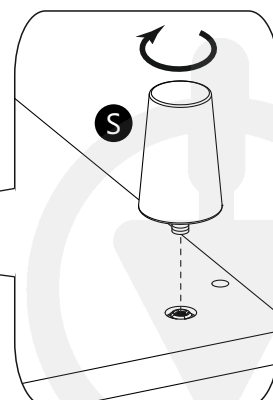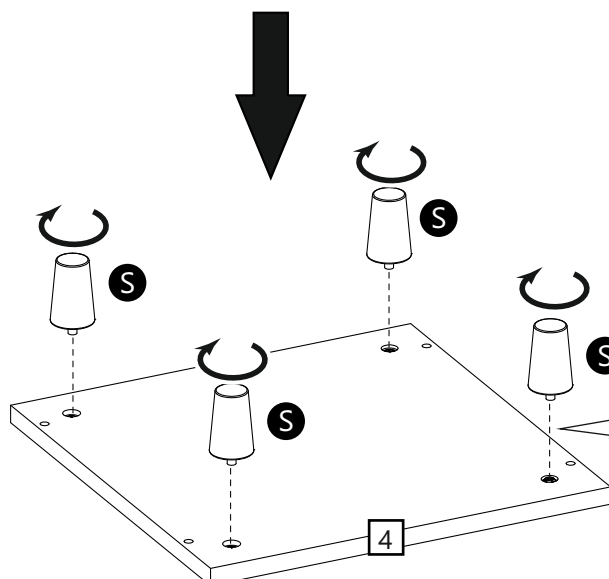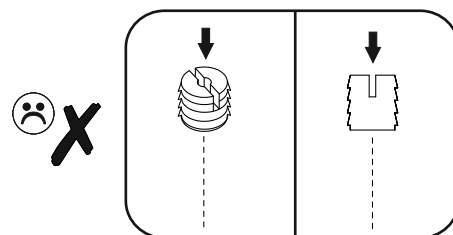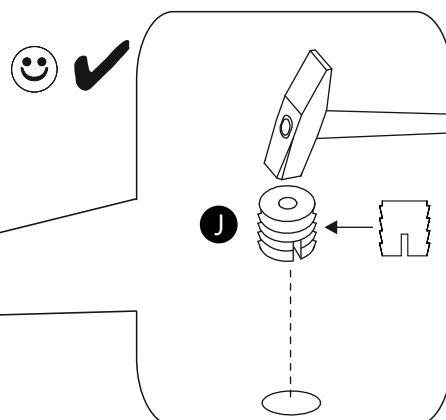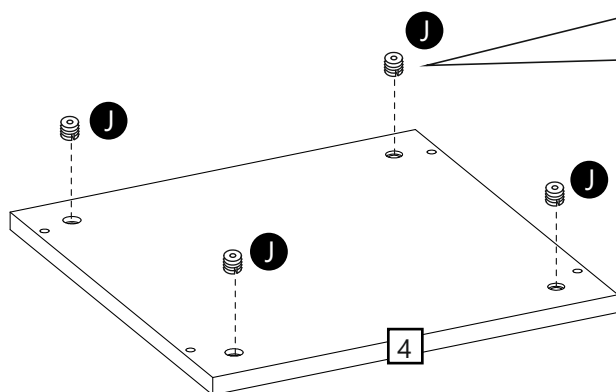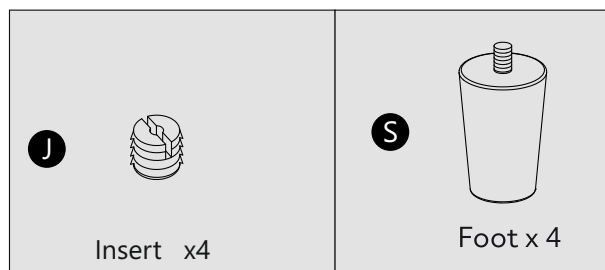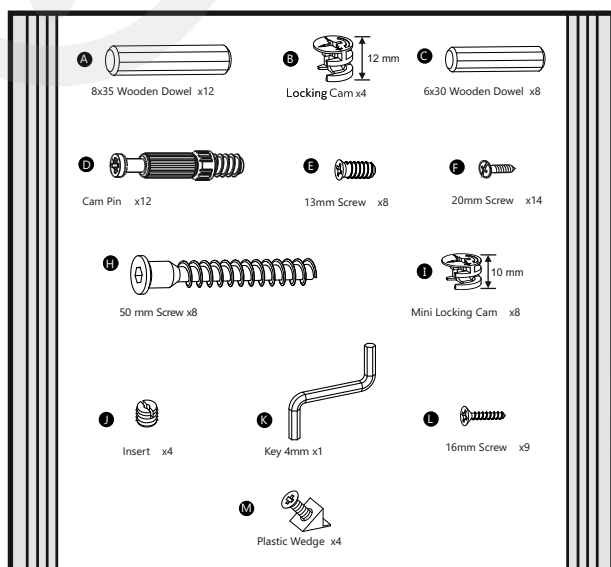



2

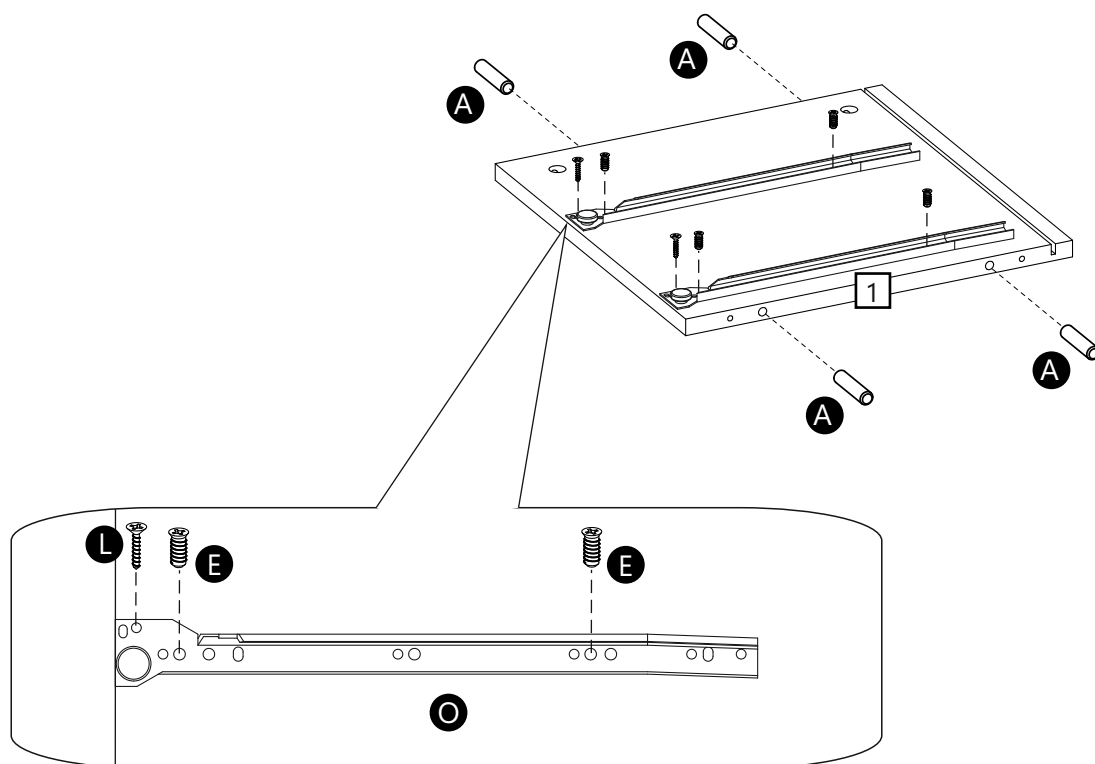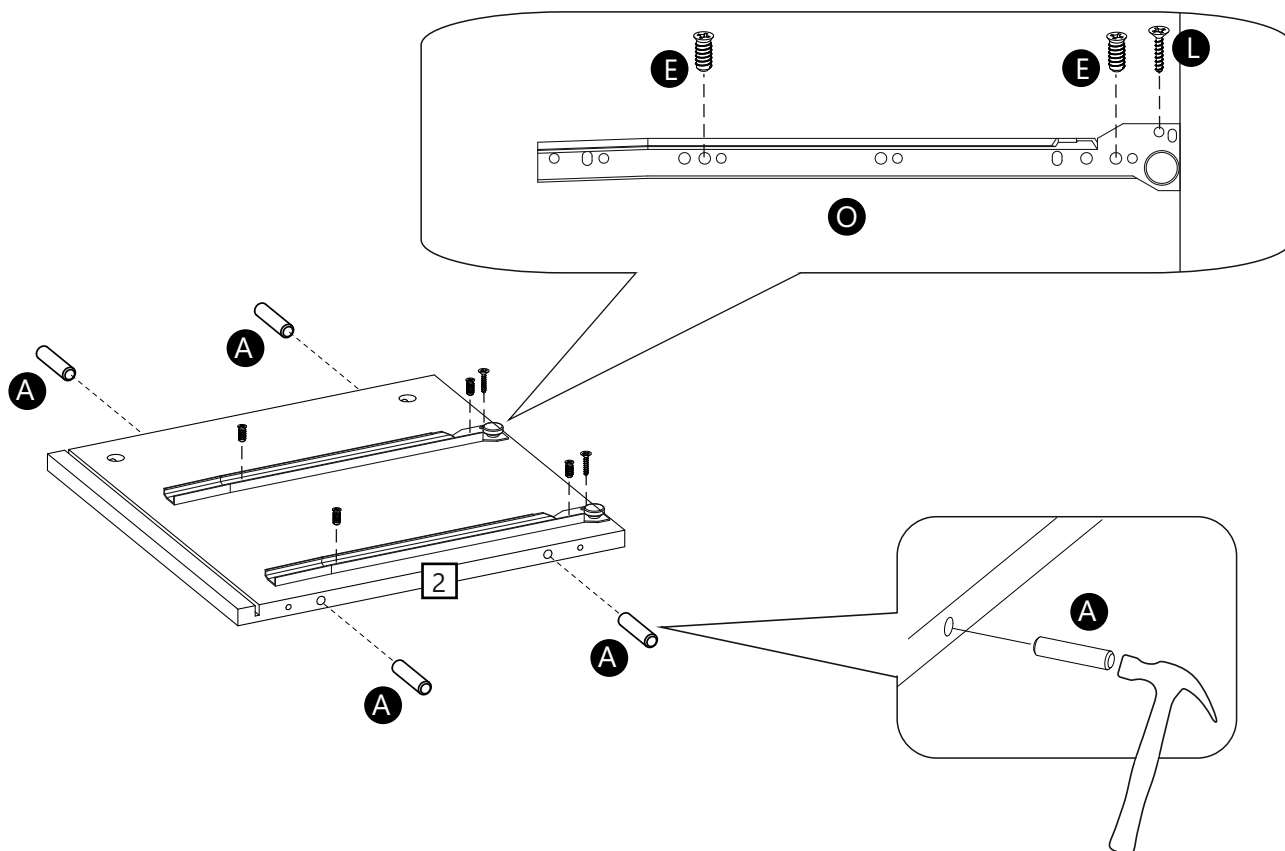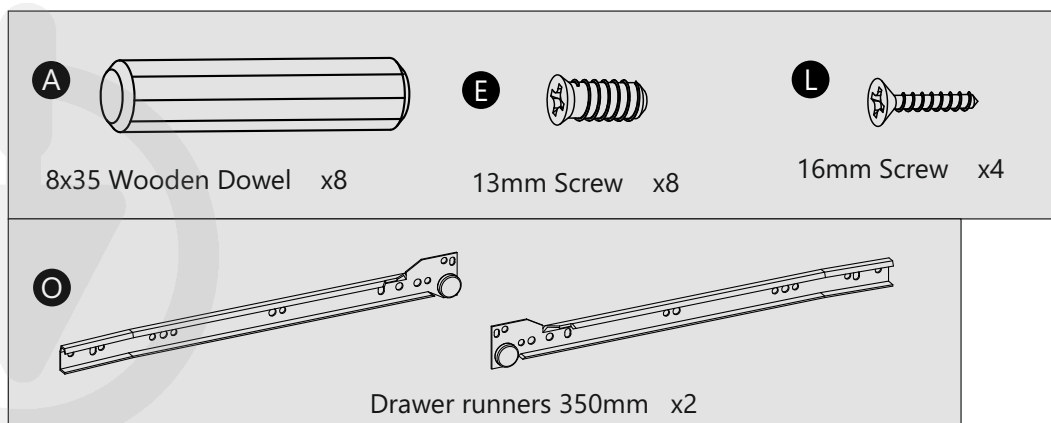


3



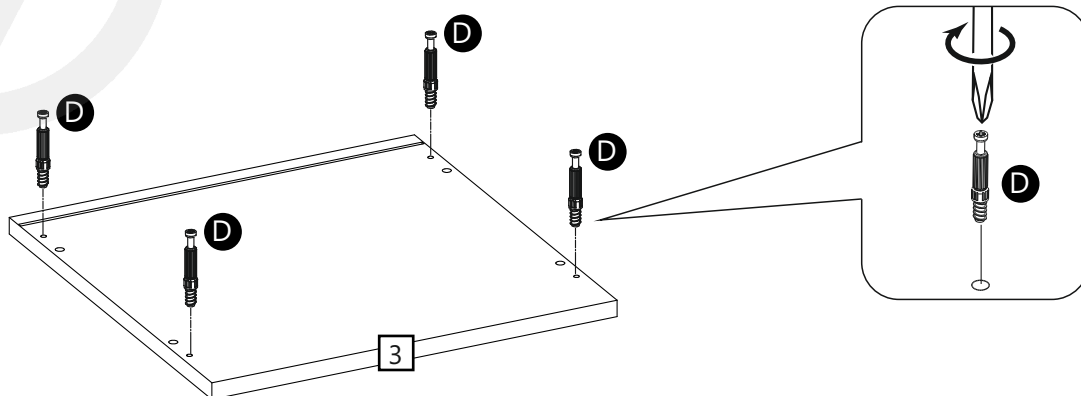
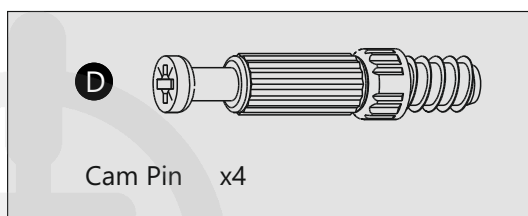


4



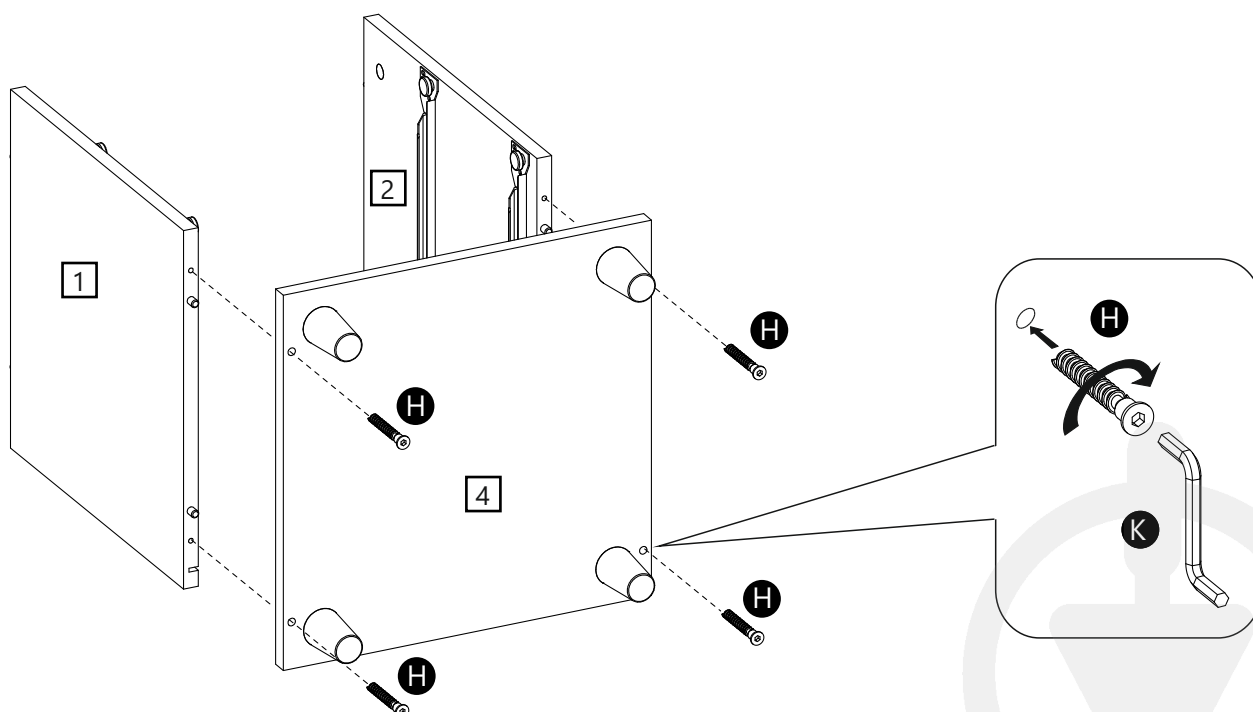
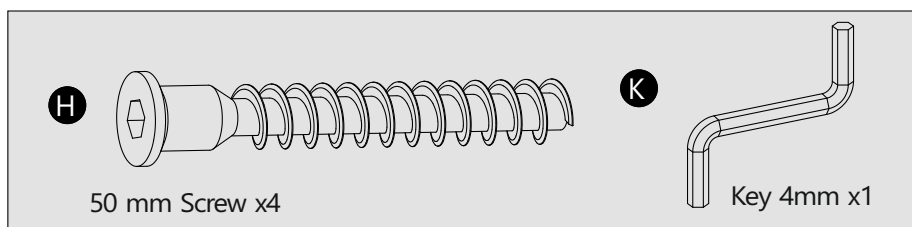


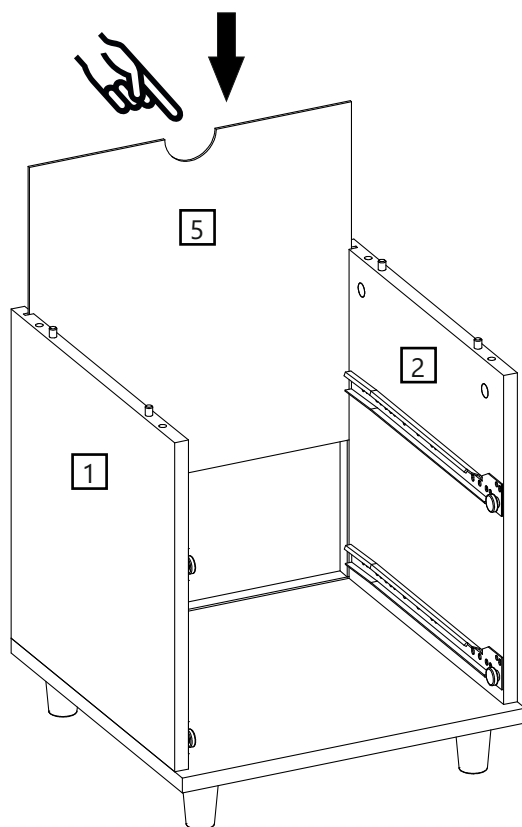



6

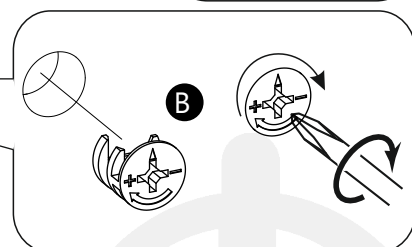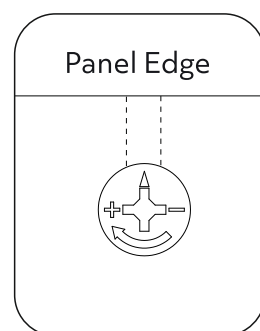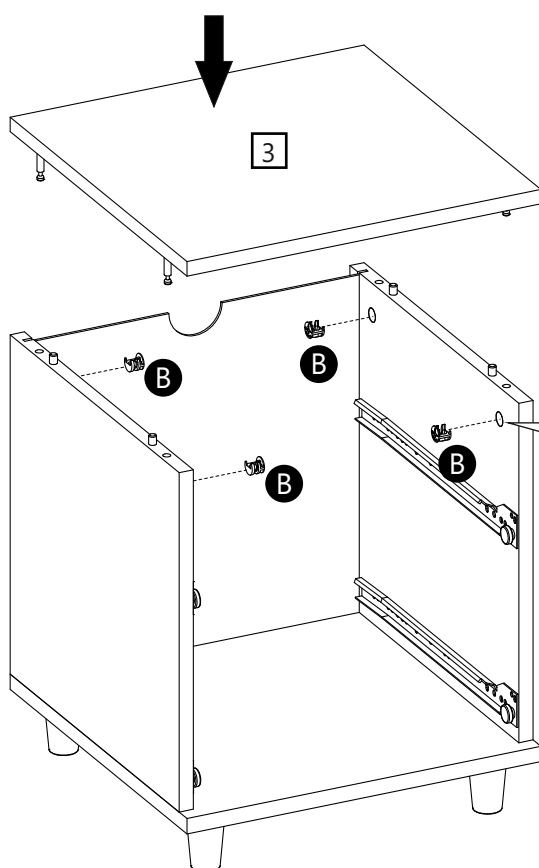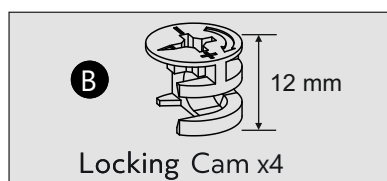




7

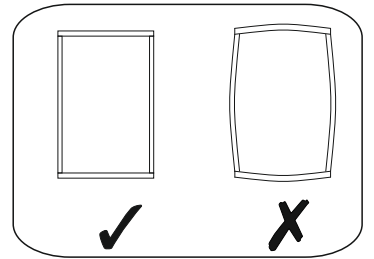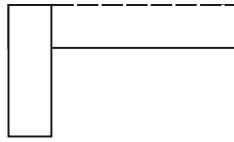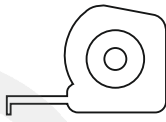


$A=B$

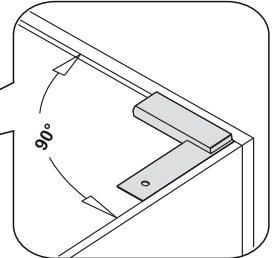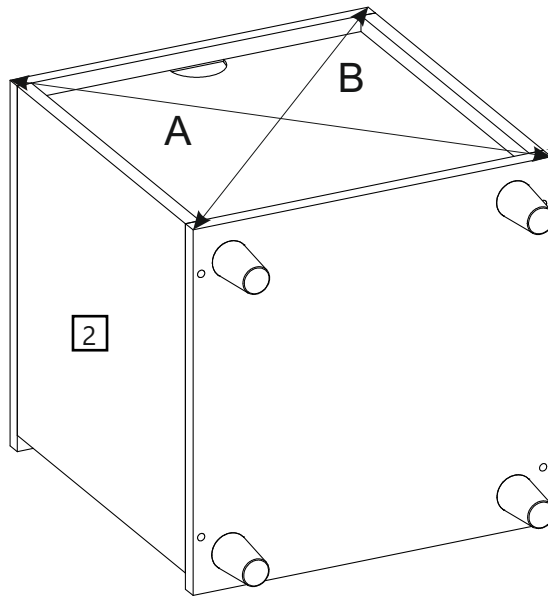

8

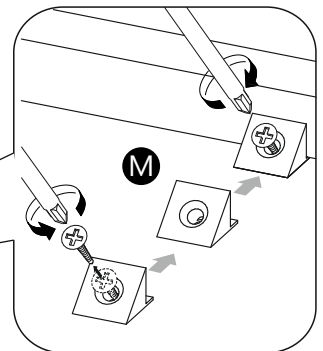
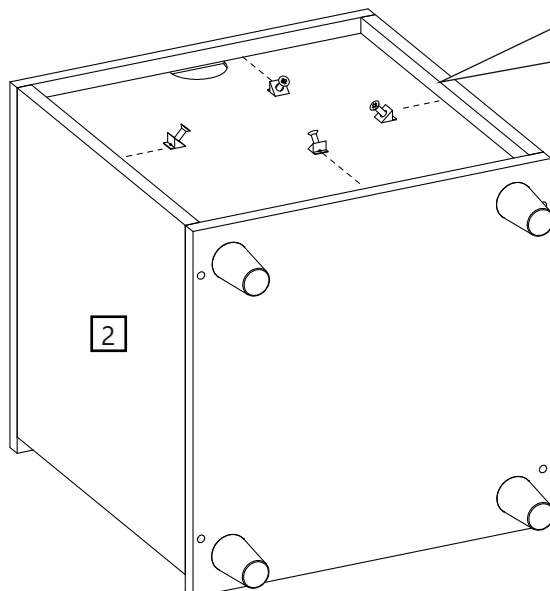
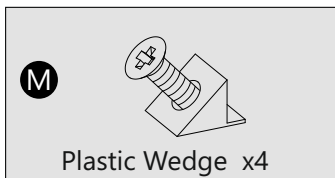


9






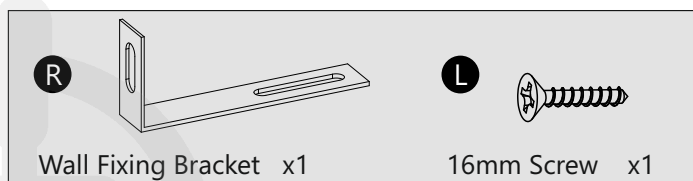


WARNING!




IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED

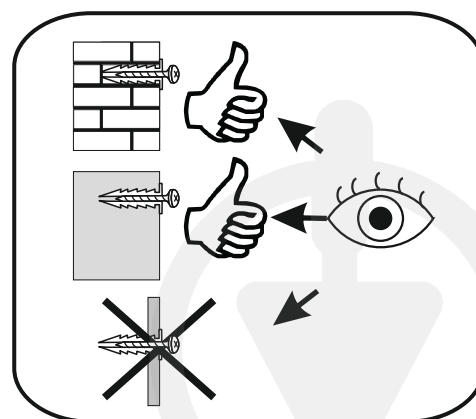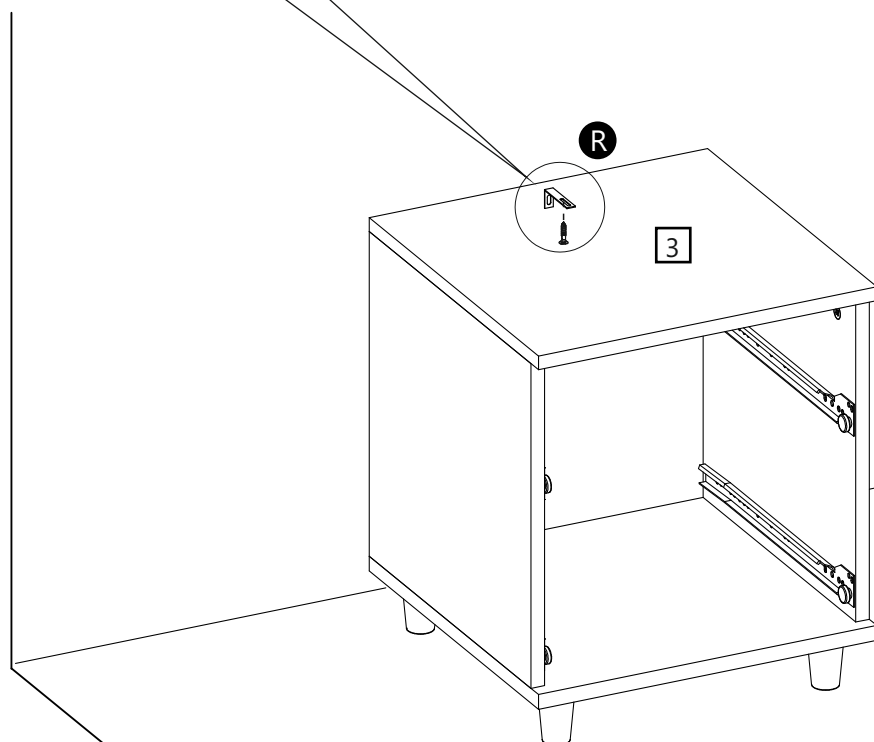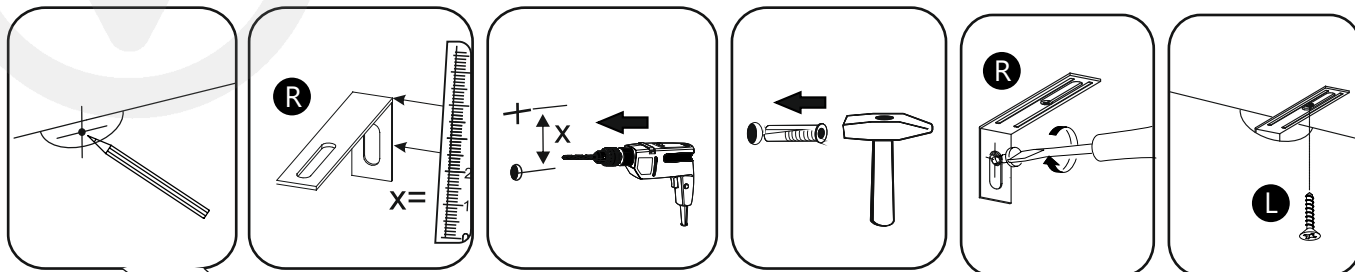






10

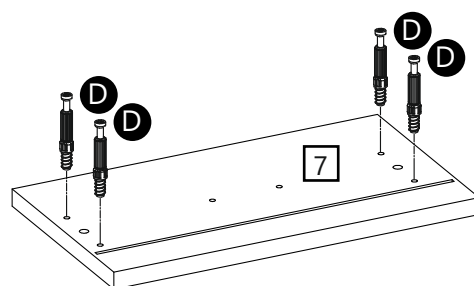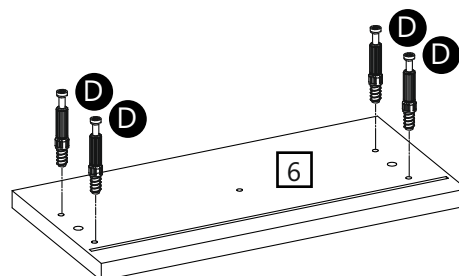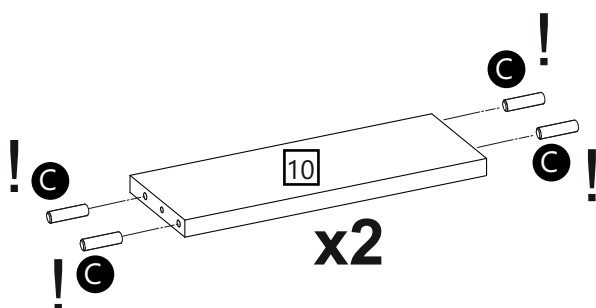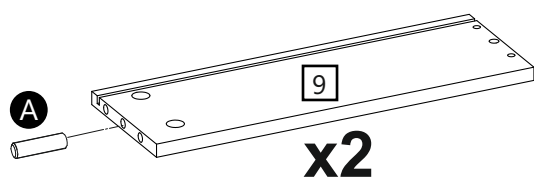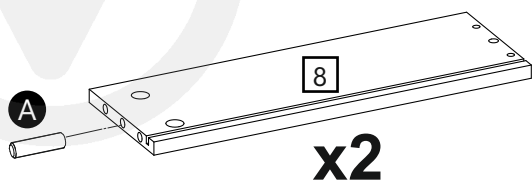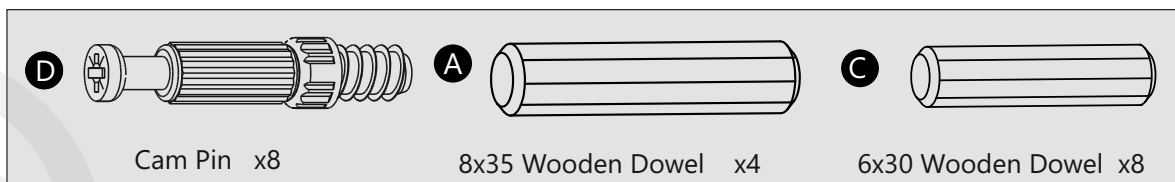



11

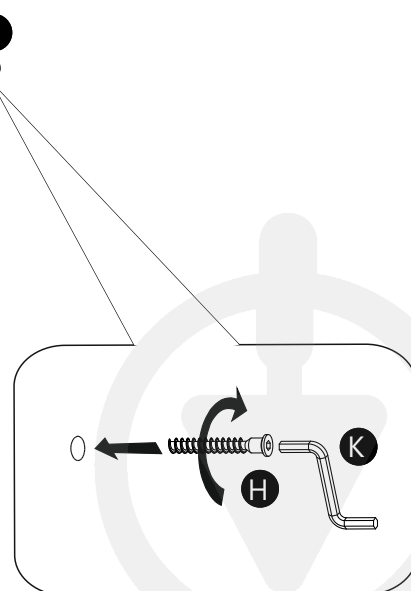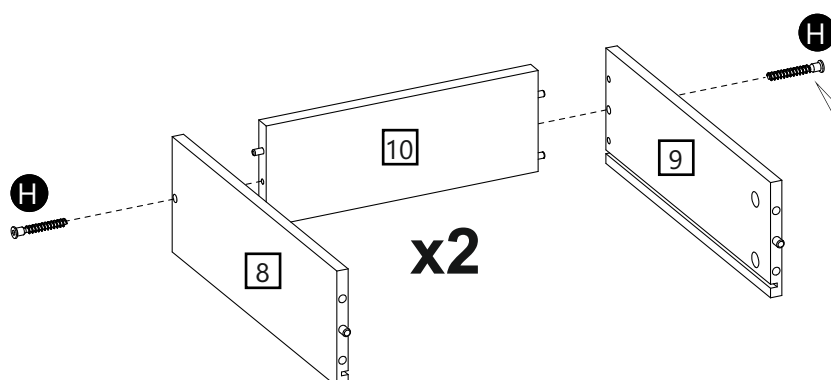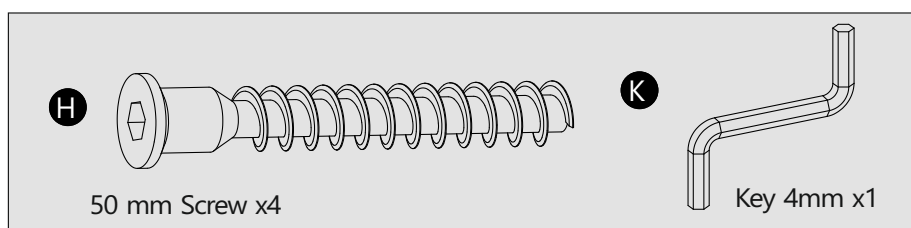



12

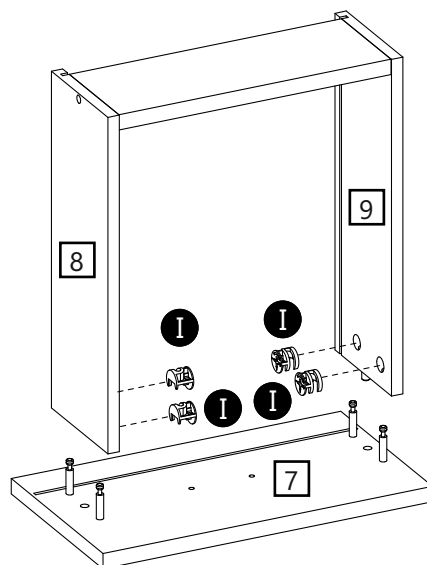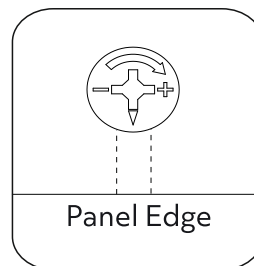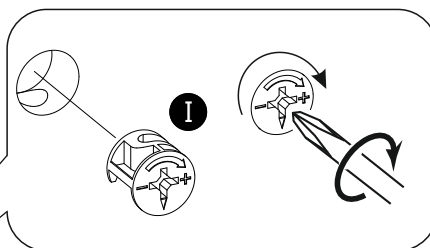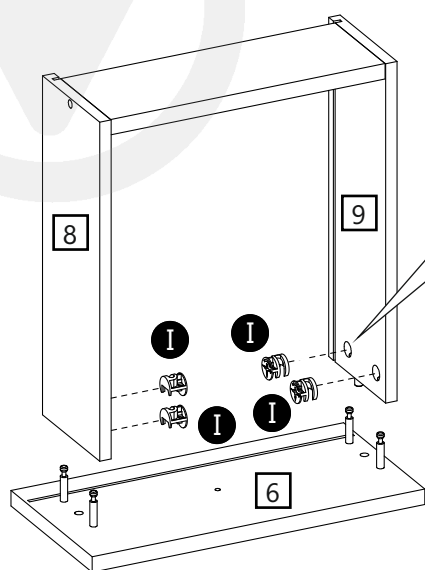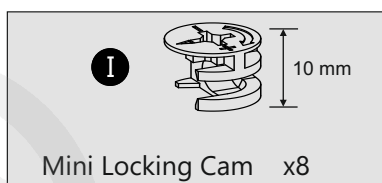




13

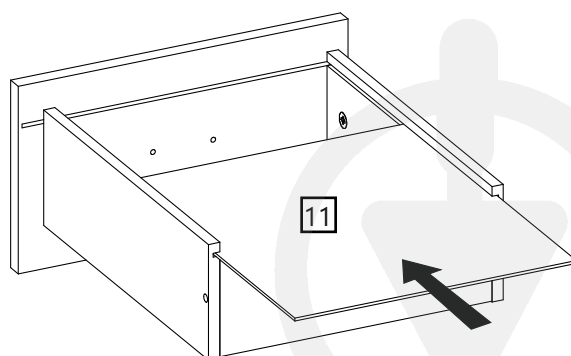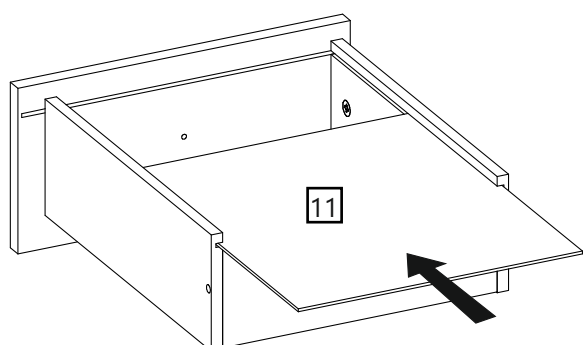

14

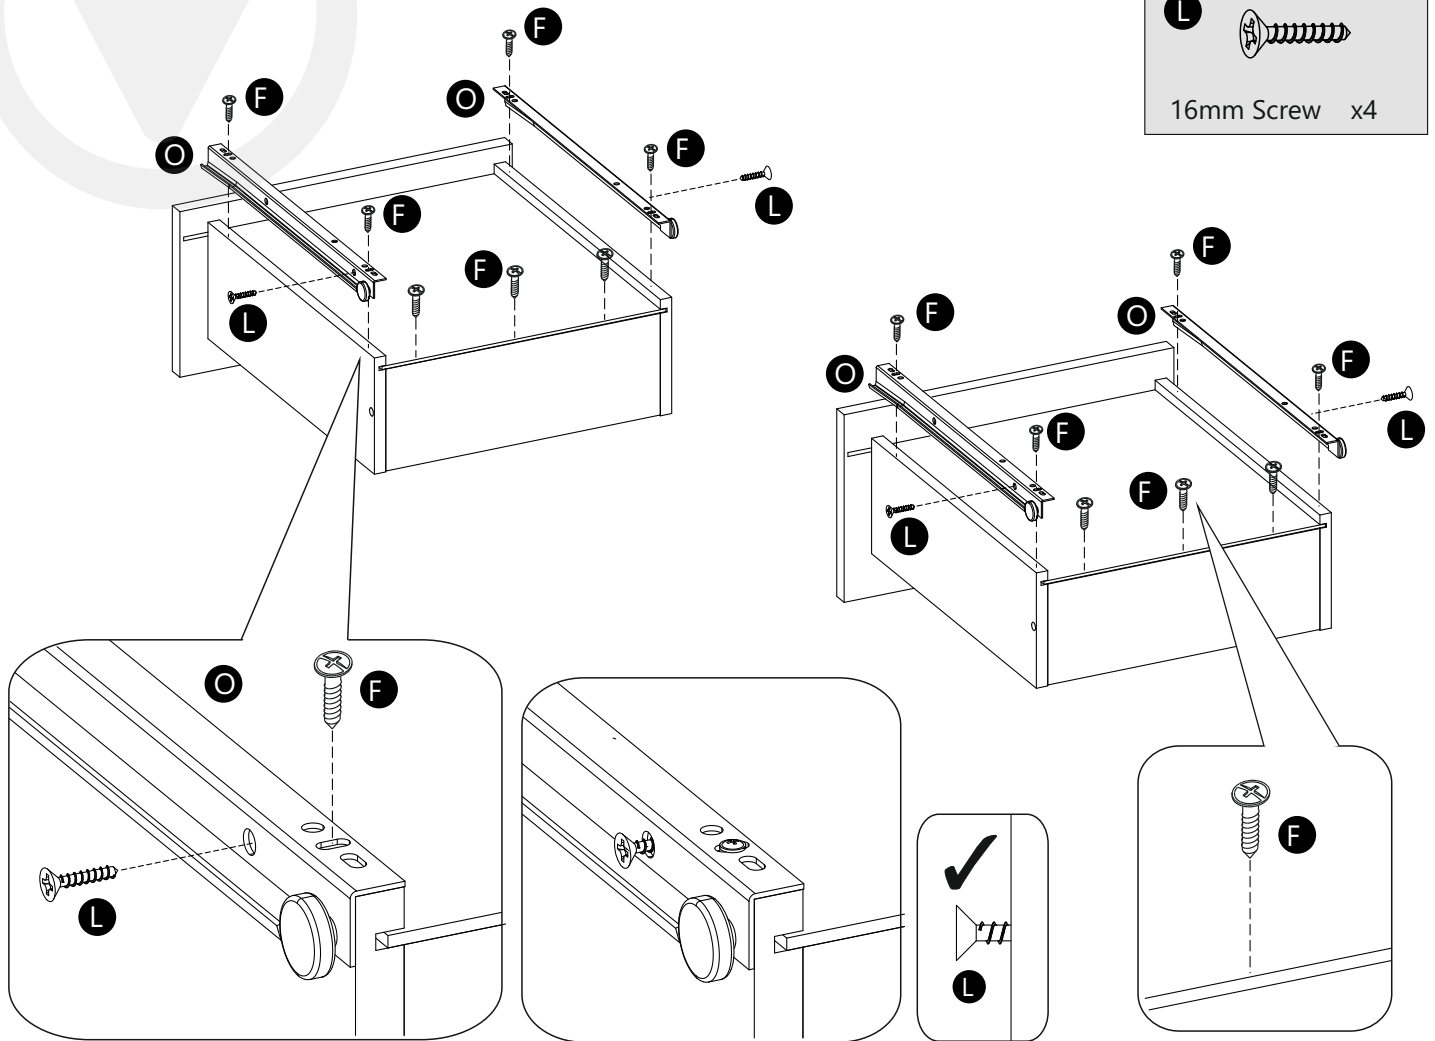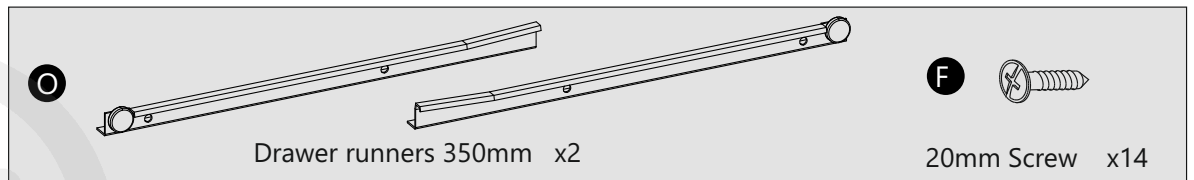

15

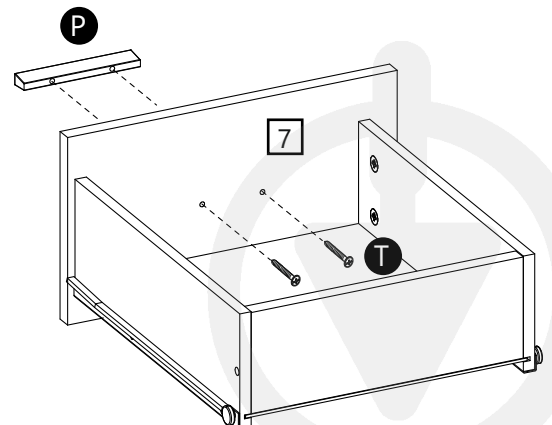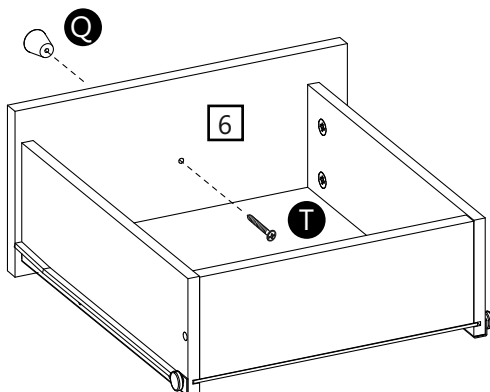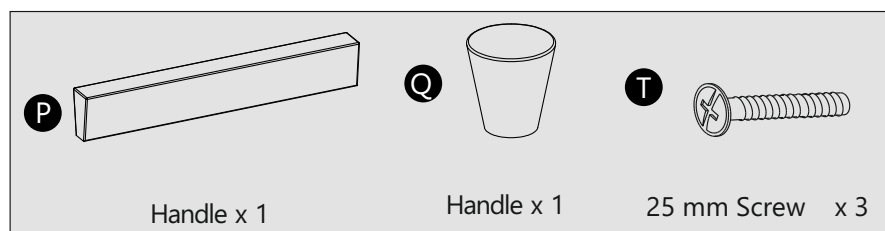

16

