



!!Please take time to read and follow these instructions carefully!!

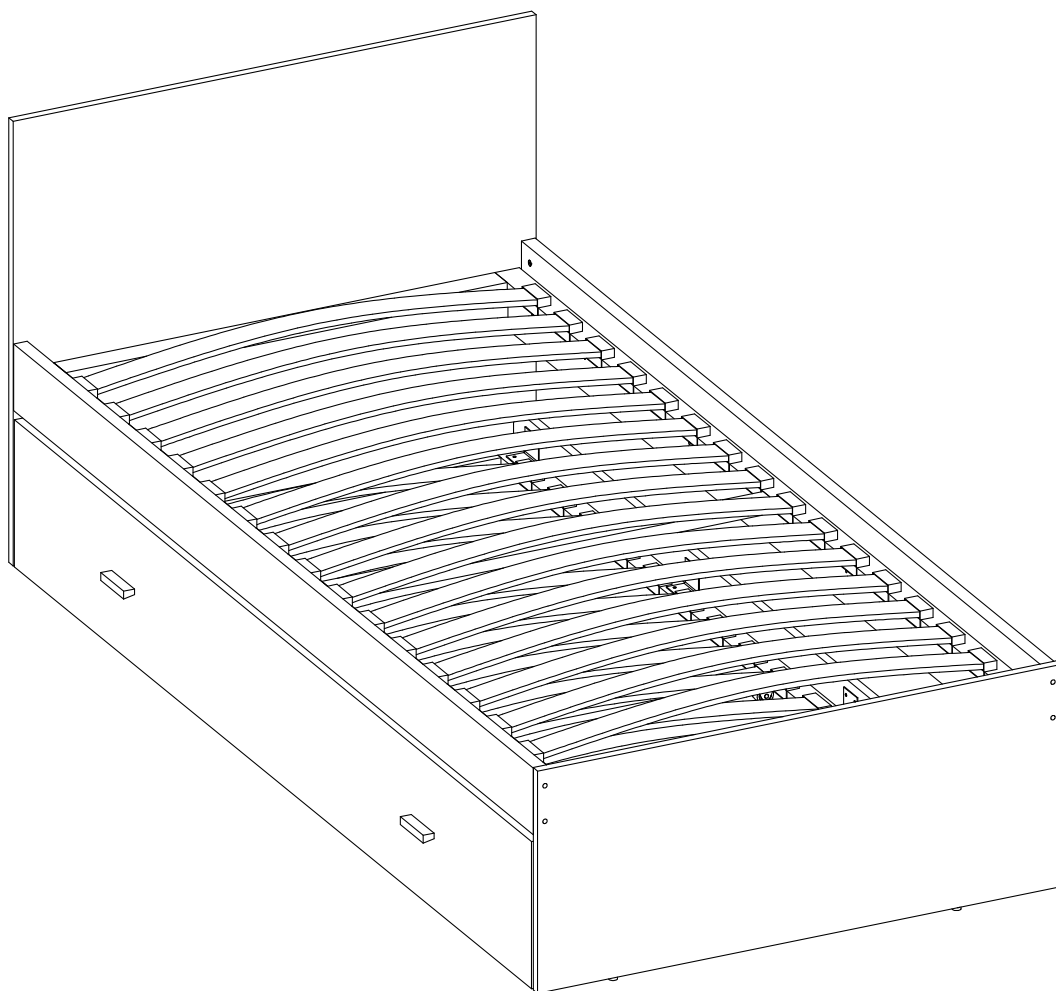

- | | |
|----------------------------------|--------------------------------|
| (D) Montageanleitung | (GB) Assembly instruction |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (TR) Montaj talimatı | (RU) Инструкция по монтажу |
| (FR) Instructions de montage | (IT) Istruzioni di montaggio |
| (CZ) Montážní návod | (RO) Instrucțiuni de asamblare |
| (HU) Összeszerelési útmutató | (SK) Montážny návod |



Fittings



10x35 Wooden Dowel x8



16mm Screw x36




13mm Screw x16




22 mm Screw x4




Roller Nut x8




40mm Screw x20




60mm Screw x8

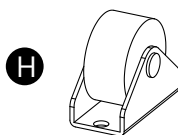


Drawer Wheel x6




Foot x4

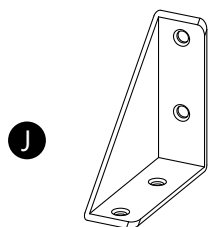


Angle Iron x2

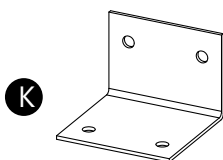

Angle Iron x8




Handle x 2

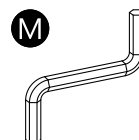


Key x 1

Tools required



Phillips screwdriver
(small & medium)

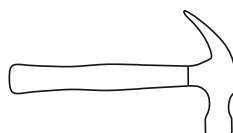

Hammer

Panels


Bed



3 Side Panel
(1908 x 120mm) (x2)



4 Rail
(1908 x 90mm) (x2)

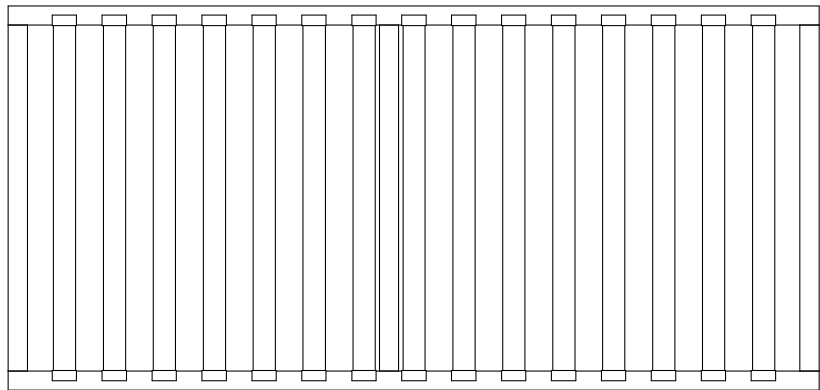


5 Top Bed Frame
(900 x 1900mm)



6 Drawer Front
(1898 x 265mm)




7 Drawer Back
(1898 x 100mm)

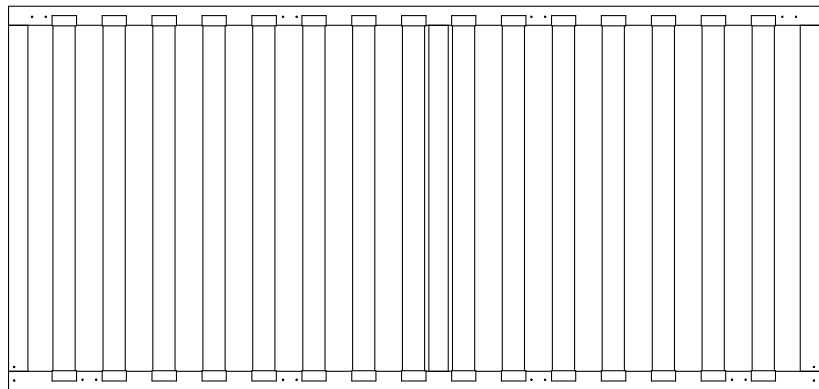

8 Bottom Bed Frame
(900 x 1900mm)






1 Front Panel
(960x400mm)

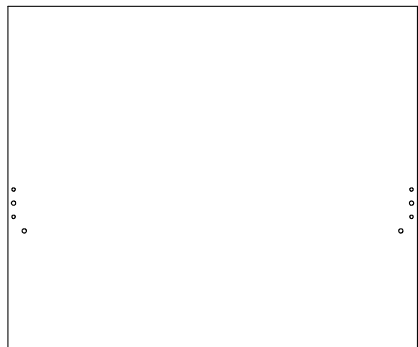

2 Back Panel
(960x800mm)

1

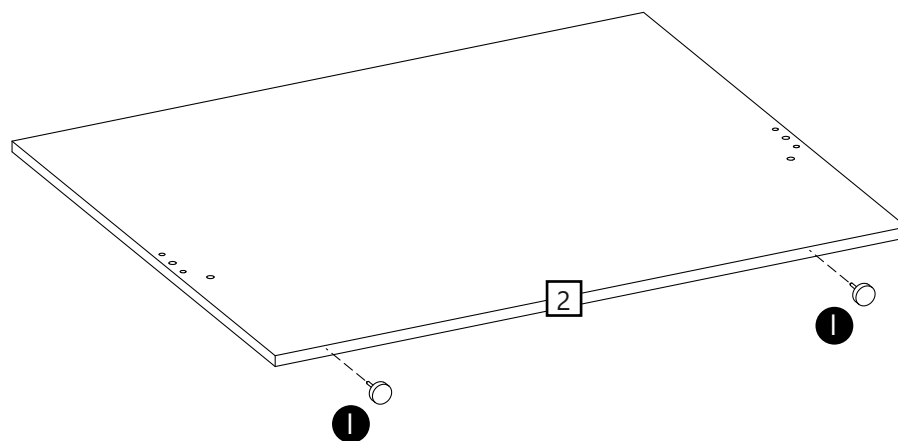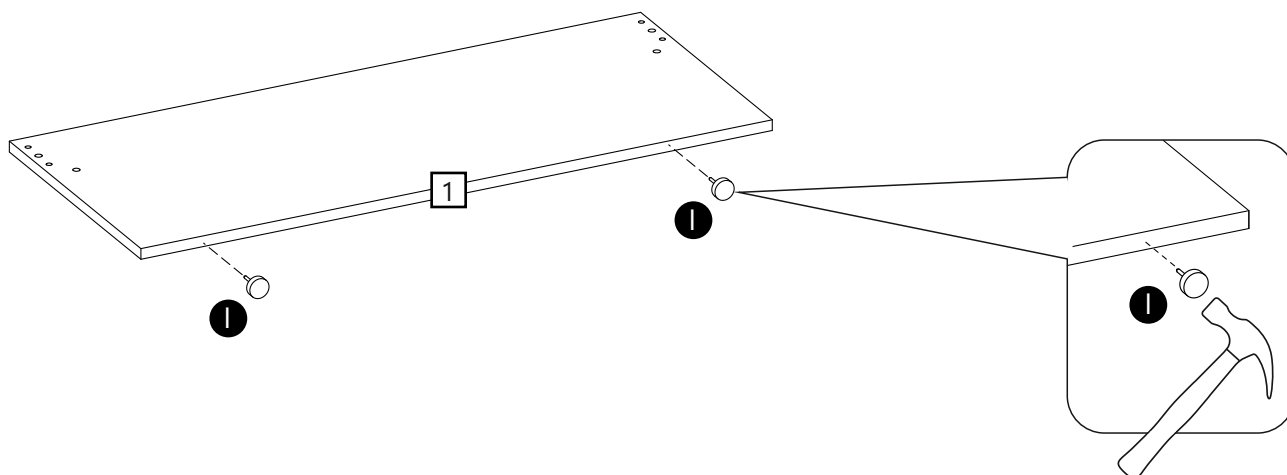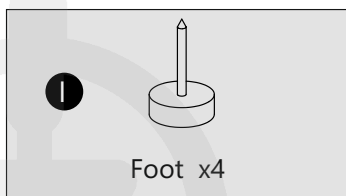

2

A




10x35 Wooden Dowel x8

E




Roller Nut x8

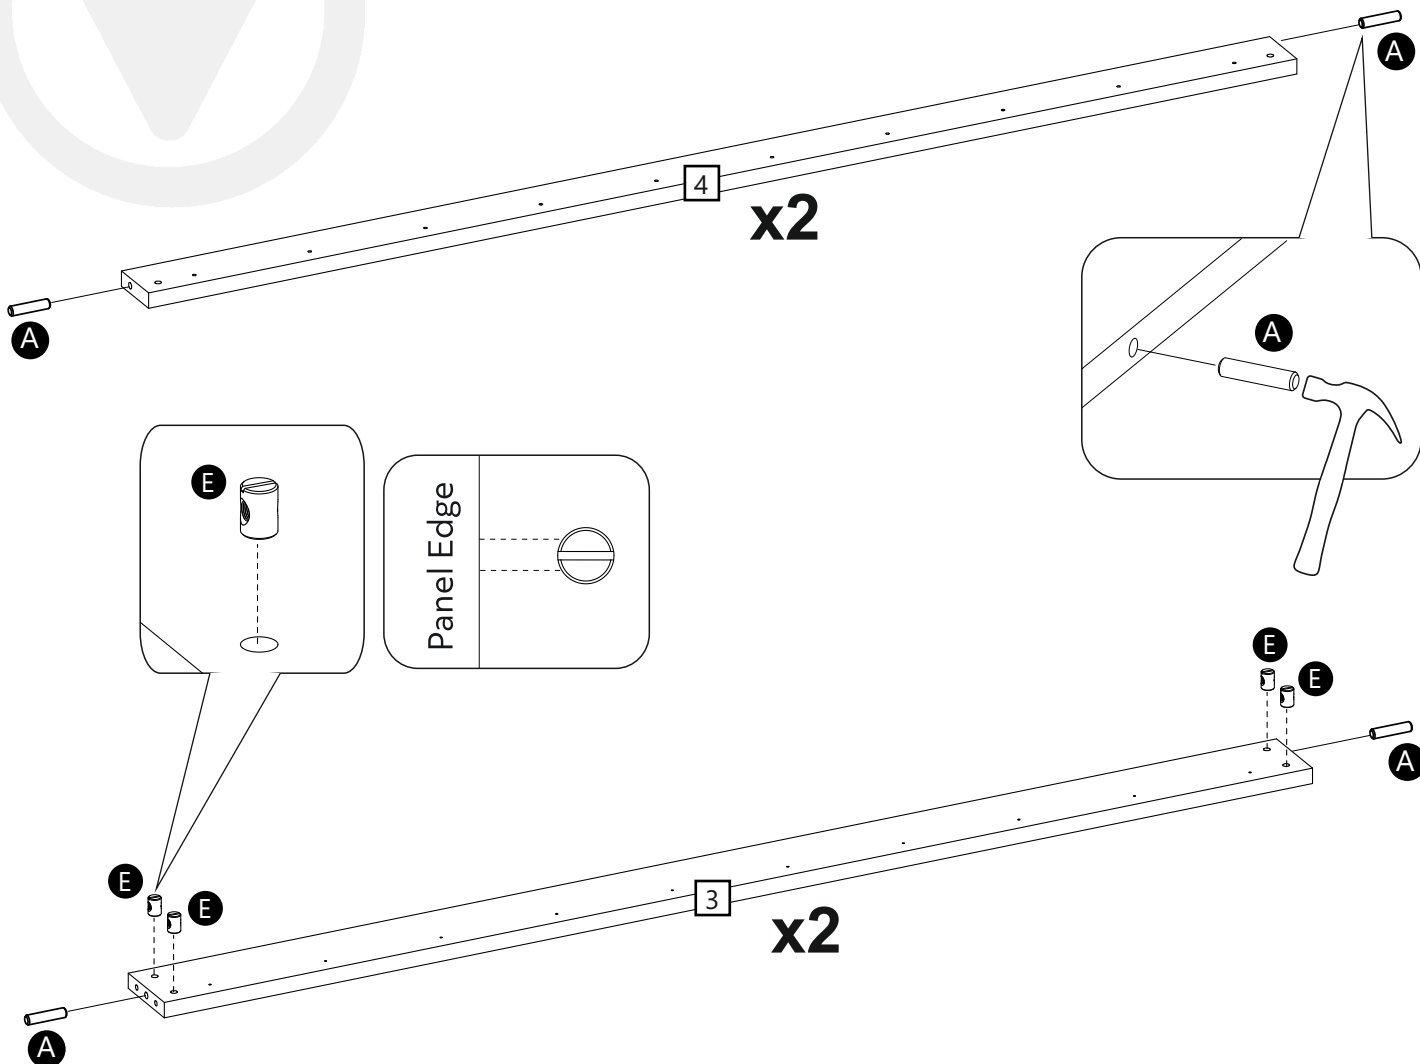


3

F




40mm Screw x20

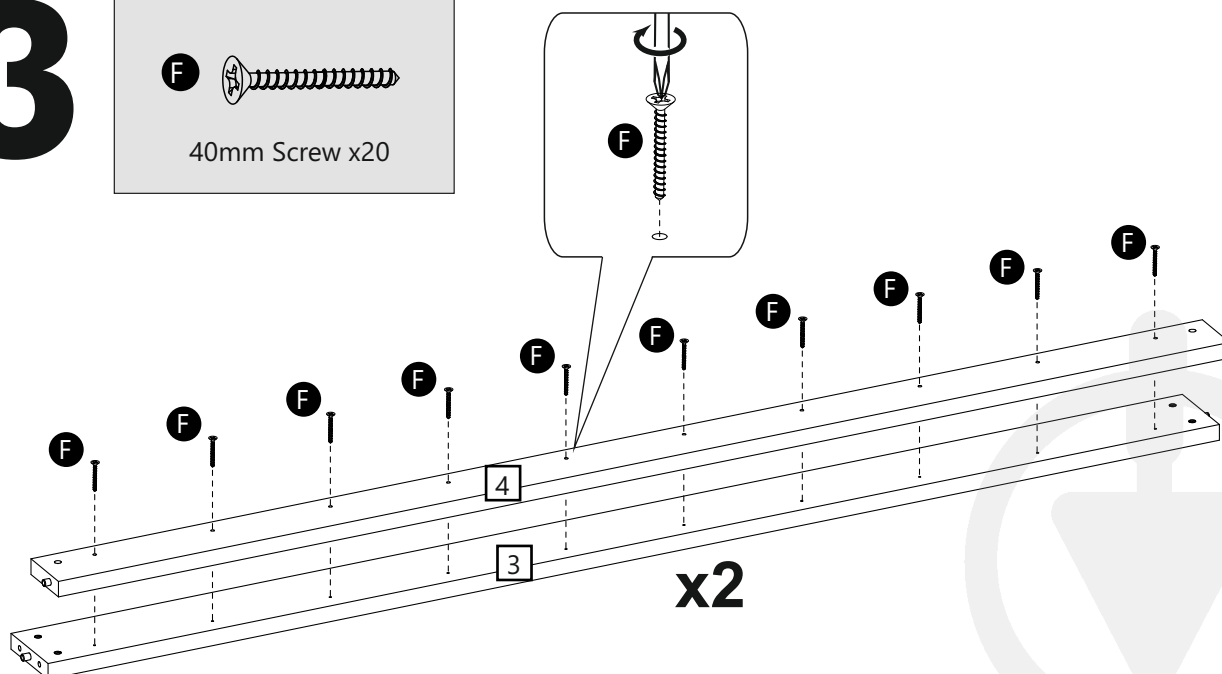

4

G




60mm Screw x8

M



Key 4mm x1

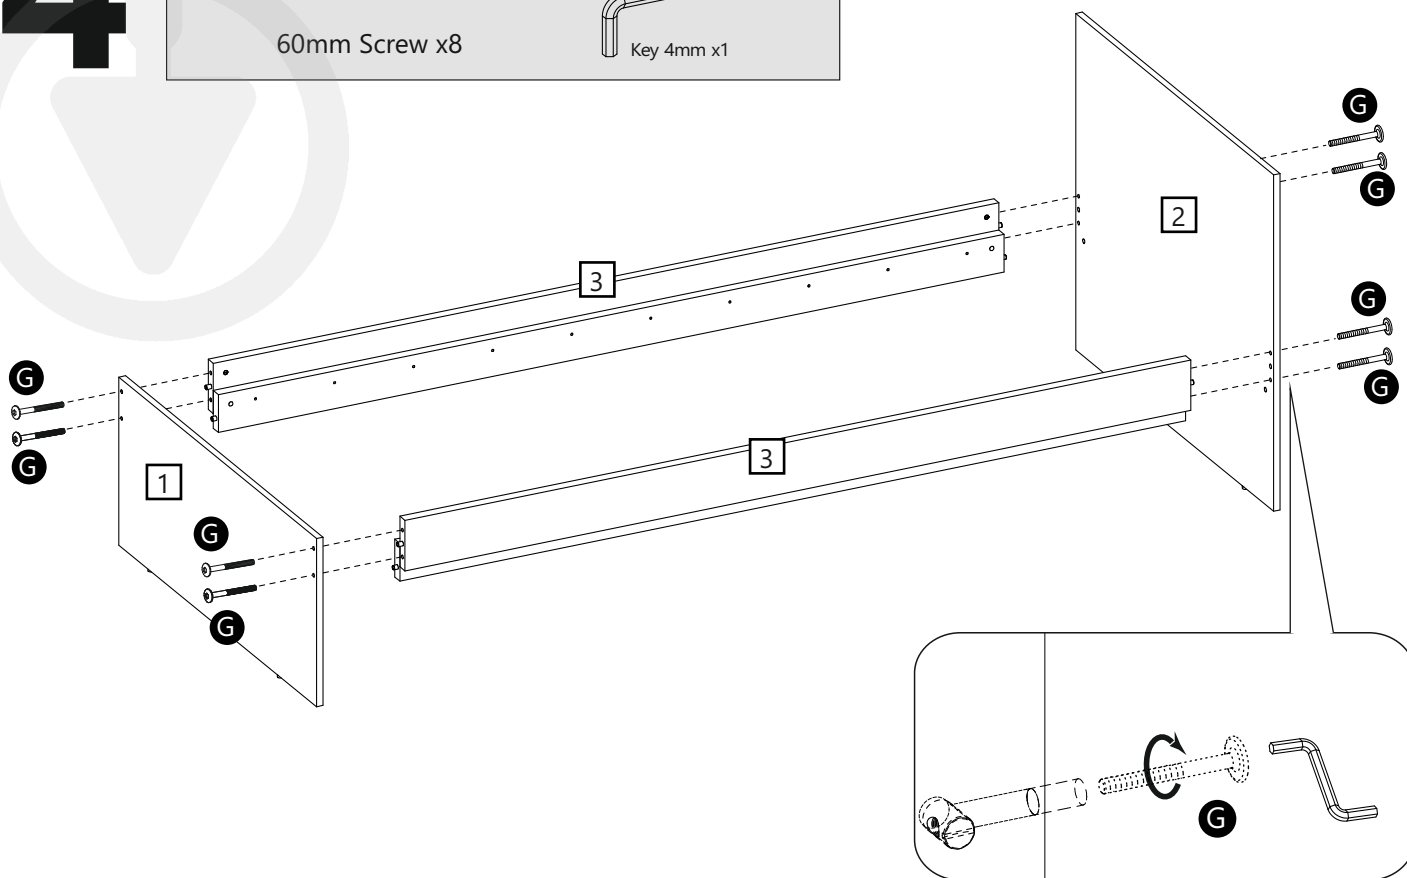


5

C




13mm Screw x16

K

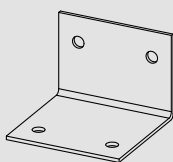

Angle Iron x8

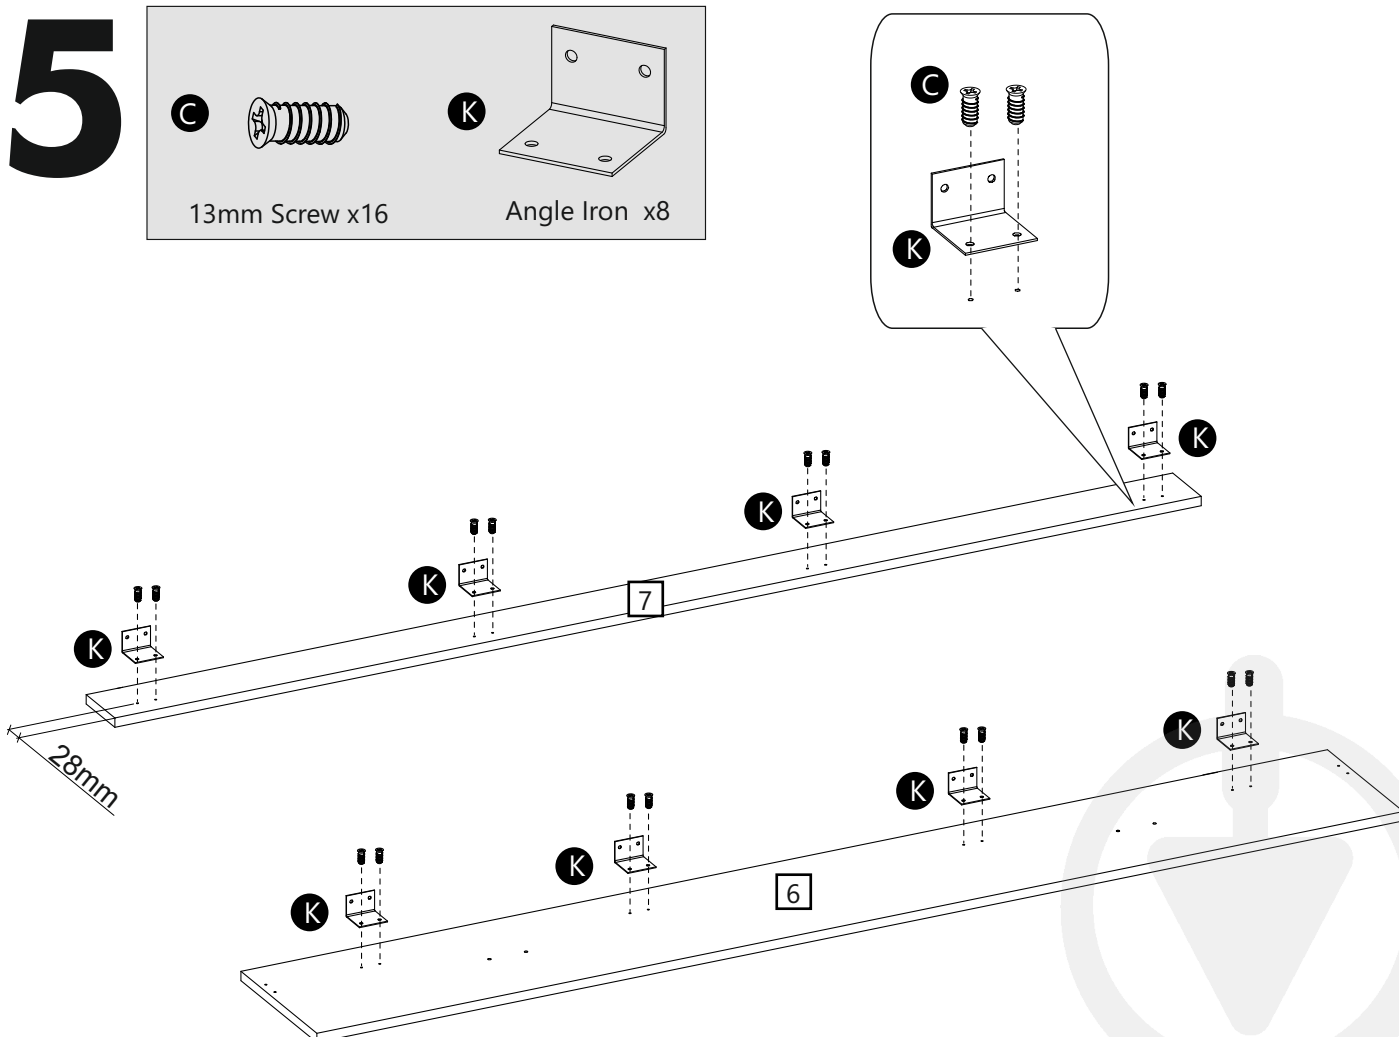


6

B




16mm Screw x12

H



Drawer Wheel x6

Assembly Instructions for the mattress support frame are included in Box 3

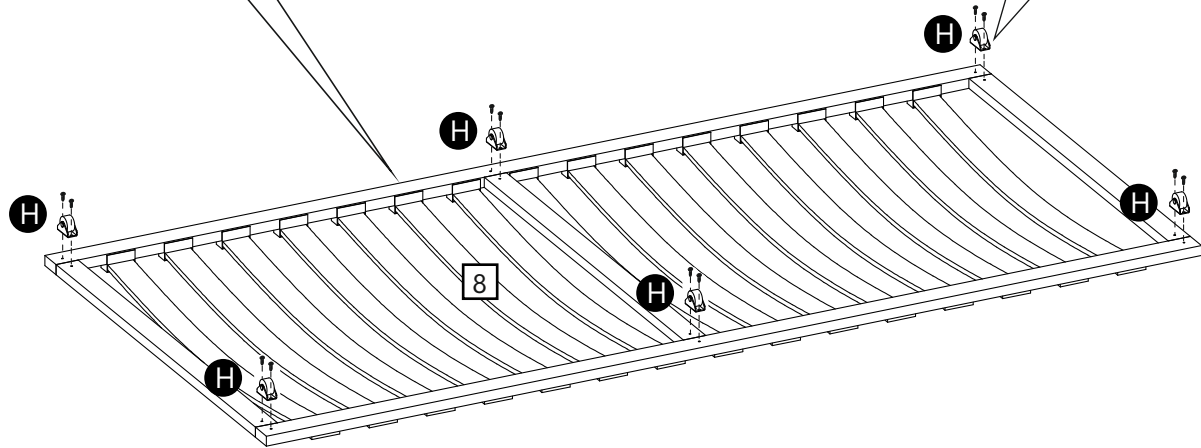


7




B





16mm Screw x8

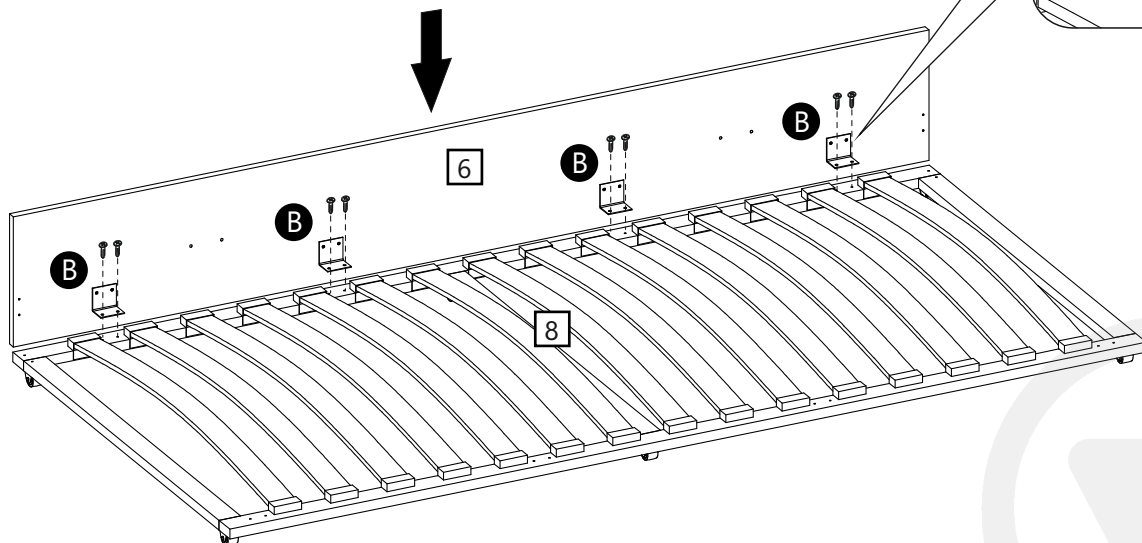


8

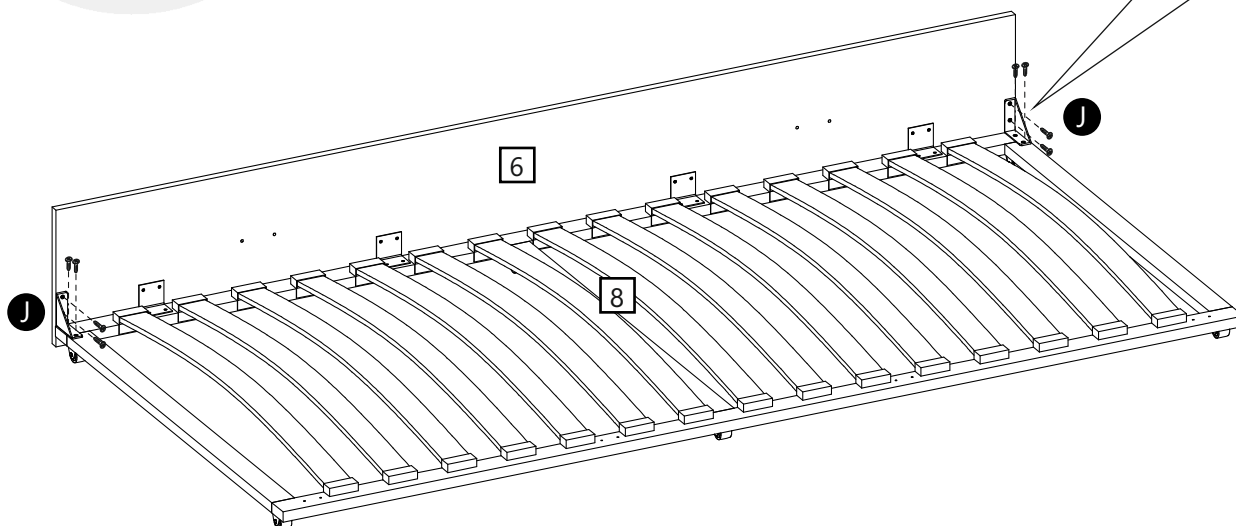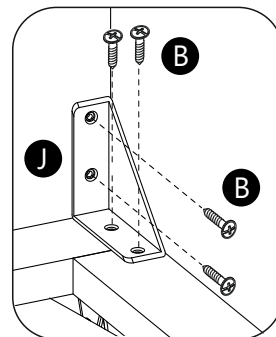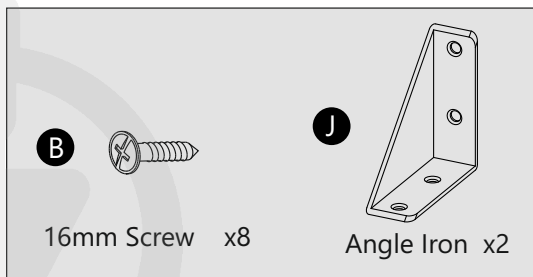

9

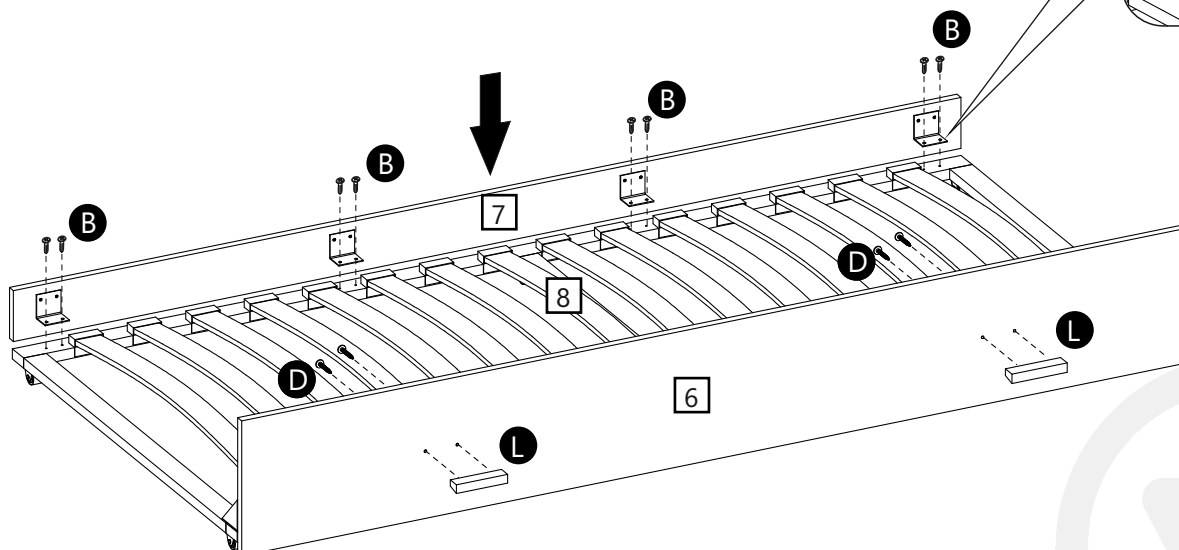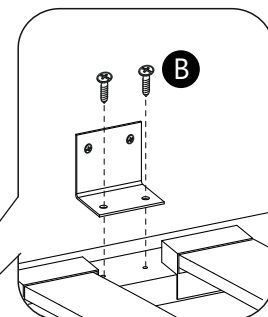

10

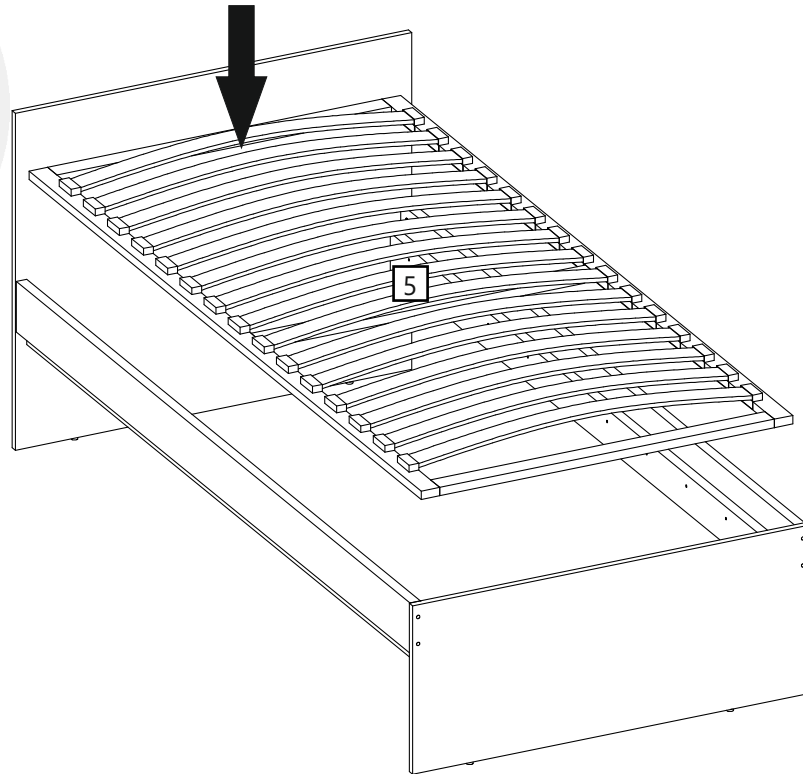

11

RECOMMENDED MATTRES
HEIGHT- 15cm

