



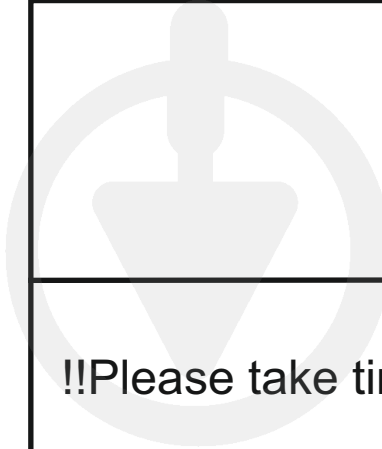

!!Please take time to read and follow these instructions carefully!!

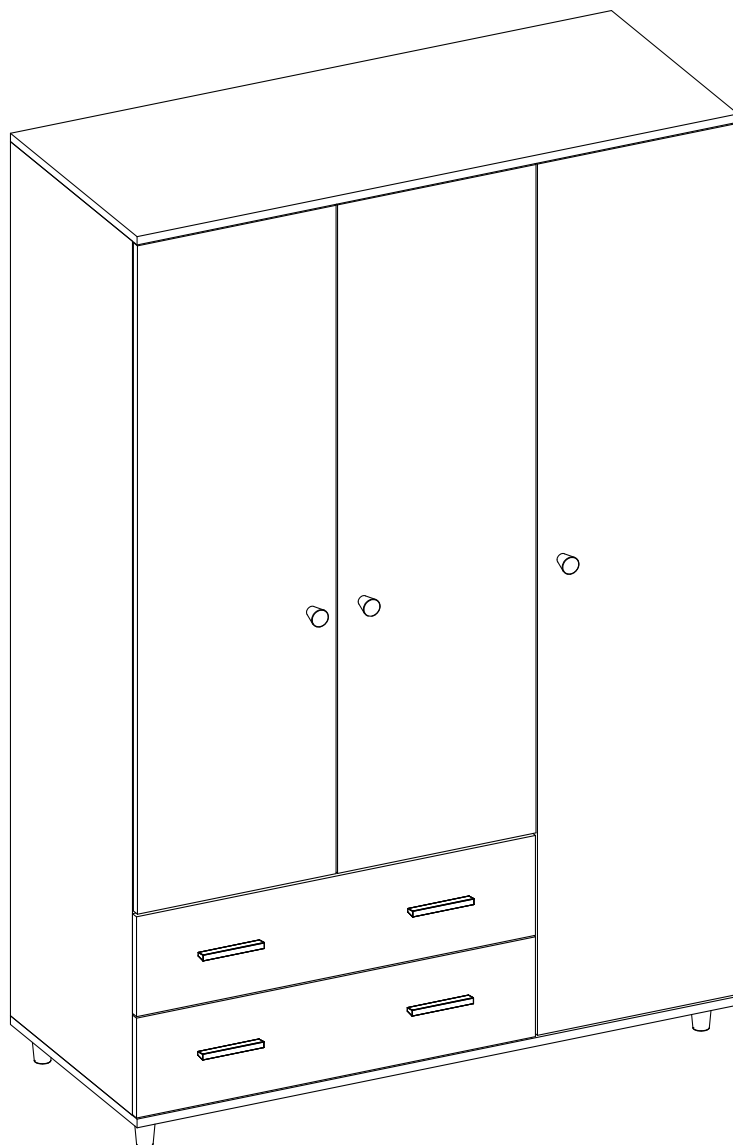

(D) Montageanleitung

(NL) Handleiding voor de montage

(TR) Montaj talimati

(FR) Instructions de montage

(CZ) Montážní návod

(HU) Összeszerelési útmutató

Assembly instruction

(GB)

(PL) Instrukcja montażu

(RU) Инструкция по монтажу

(IT) Istruzioni di montaggio

(RO) Instrucțiuni de asamblare

(SK) Montážny návod




Fittings (Shown to scale)

Wardrobe


Bag 1

WARNING!


IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED




A 8x35 Wooden Dowel x22

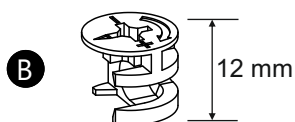

B Large Cam Lock x10



C 6x30 Wooden Dowel x8




D Cam Pin x18




E 13mm Screw x12



F 20mm Screw x36



G Shelf Support x12




H Assembly Screw 50mm x10




I Small Cam Lock x8




J Insert x5

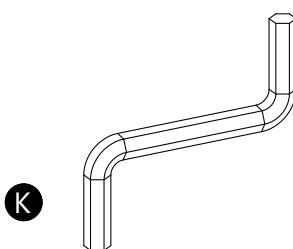

K Allen Key 4mm x1

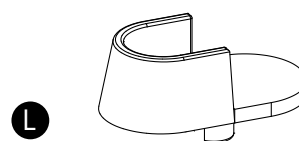

L Hanging Rail Support x2



M Plastic Wedge x12



N 16mm Screw x30



O 13mm Screw x6




P Back Panel Connector x10

Hardware


Wardrobe

Q



Handle x 4

R




Knob x 3

S




Foot x 5

T

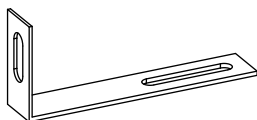

Wall Fixing Bracket x 2

U

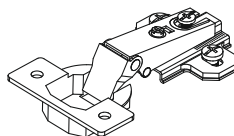


Door hinge Type 1 x 6

V




Hanging Rail x 1

W




25 mm Screw x 11

Y




Door hinge Type 2 x 3

Z

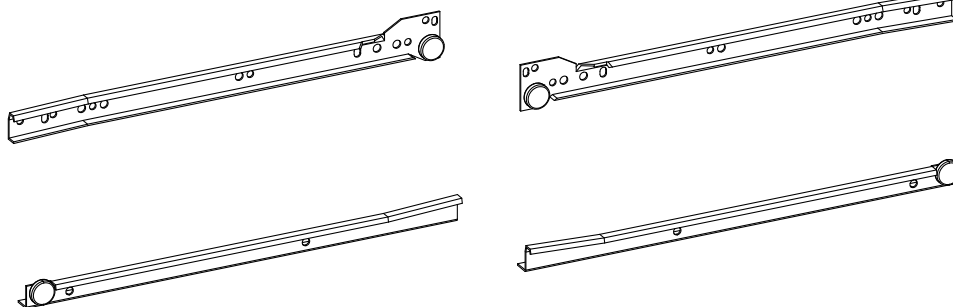


Drawer runners 450mm x 2

Tools that may be required




Phillips screwdriver
(small & medium)

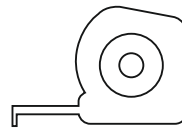


Ruler/tape
measure




Flat screwdriver
(small & medium)

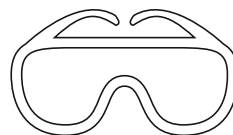

Eye protection
(when using a
hammer or glue)

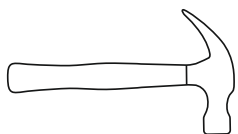


Hammer

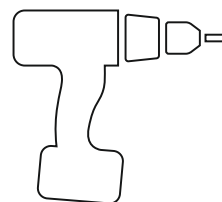

Power Drill



Pencil

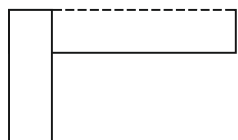



Set Square




Drill Bits



Spirit Level

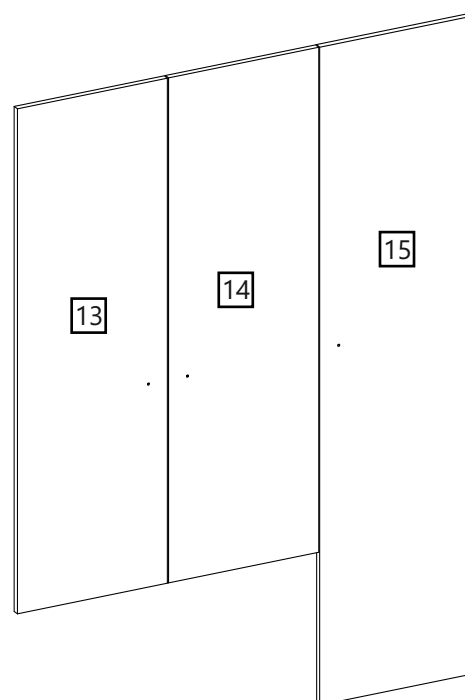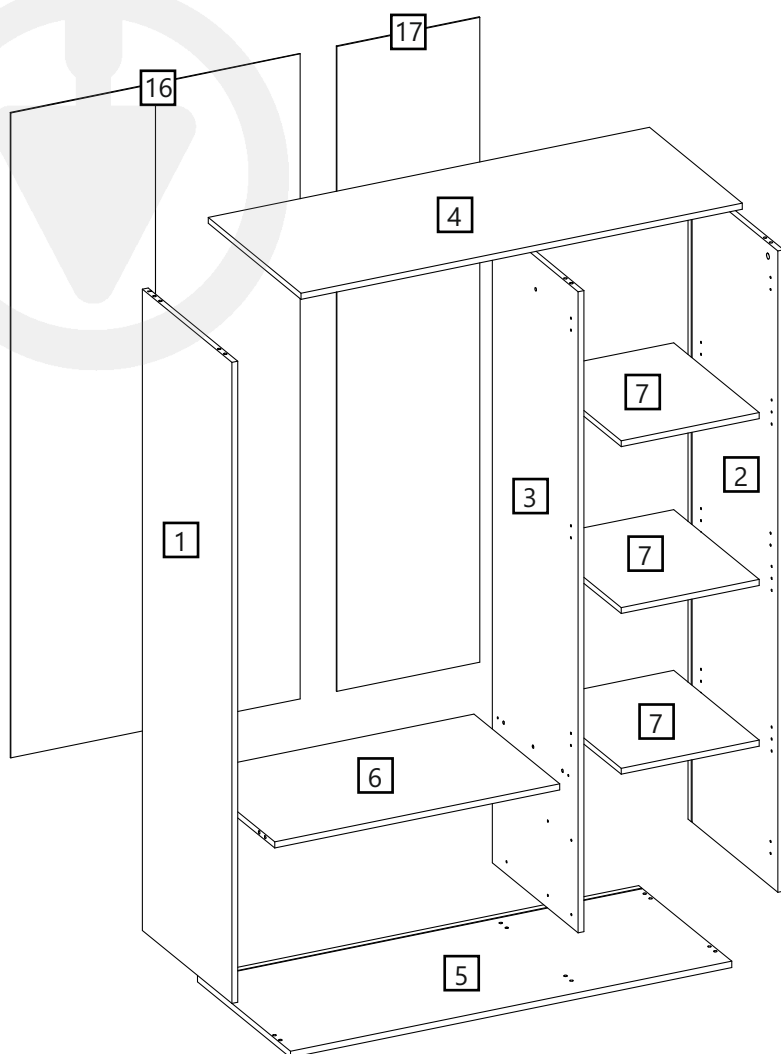


PANEL	SIZE mm	BOX 1	BOX 2	BOX 3
1	1708x487x16		1	
2	1708x487x16		1	
3	1708x466x16		1	
4	1199x505x16	1		
5	1199x505x16	1		
6	774x465x16	1		
7	375x465x16	3		
8	195x796x16			2
9	450x120x12	2		
10	450x120x12	2		
11	725x105x12	2		
12	735x457x3	2		
13	1306x396x16	1		
14	1306x396x16	1		
15	1702x396x16			1
16	1718x393x3		2	
17	1718x388x3		2	

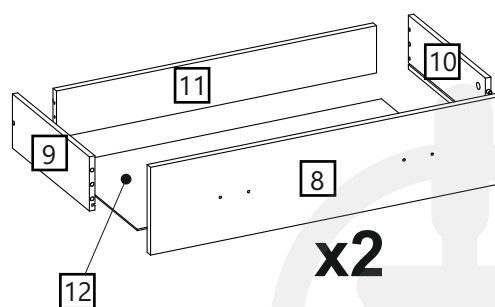


Panels


Wardrobe

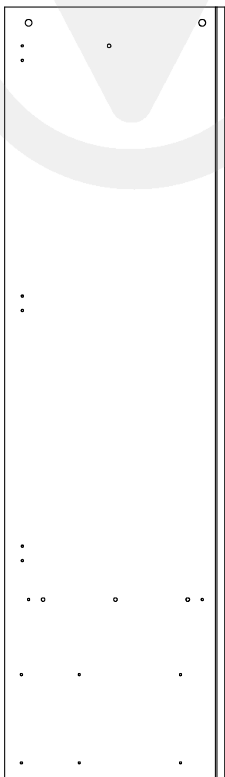


1 Left Side Panel
(1708 x 487mm)

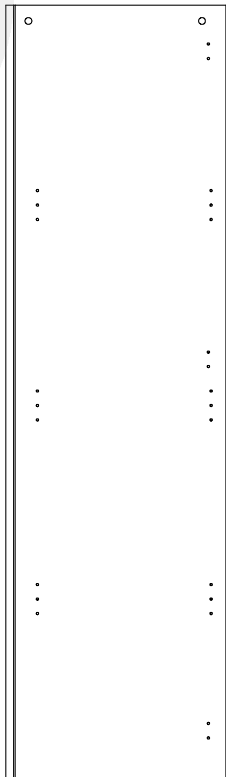

2 Right Side Panel
(1708 x 487mm)

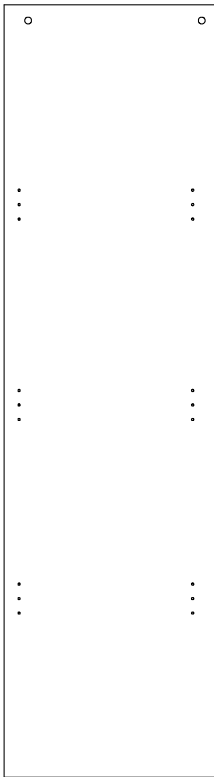


3 Upright
(1708 x 466mm)

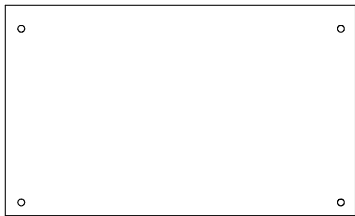

6 Fixed Shelf
(774 x 465mm)



7 Shelf
(465x375mm) ^(x3)

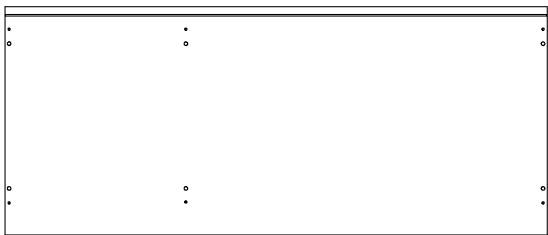

4 Top Panel
(1199x505mm)




8 Bottom drawer front
(796 x 195mm) ^(x2)




9 Left Drawer Side
(450 x 120mm) ^(x2)



10 Right Drawer Side
(450 x 120mm) ^(x2)

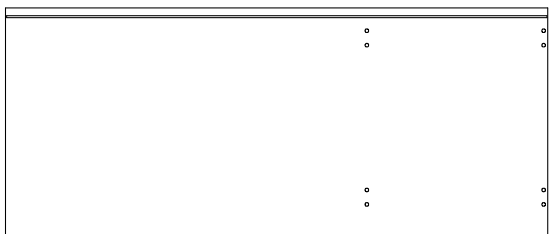

5 Bottom Panel
(1199x505mm)




12 Drawer Bottom
(735 x 457mm) ^(x2)




11 Drawer Back
(725x 105mm) ^(x2)

Panels


Wardrobe

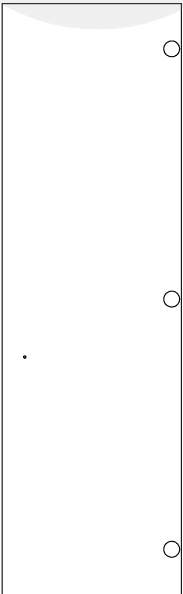


13 Left Door(use hinge Type 1)
(1306 x 396mm)

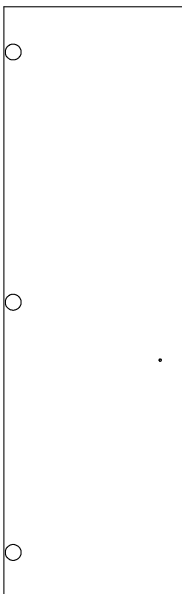


14 Middle Door(use hinge Type 2)
(1306 x 396mm)

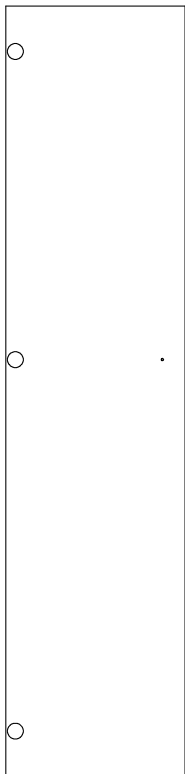

15 Right Door(use hinge Type 1)
(1702 x 396mm)



16 Back Panel Left
(1718 x 786mm)




17 Back Panel Right
(1718 x 388mm)

WARNING!





IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED

First assemble the drawers


1

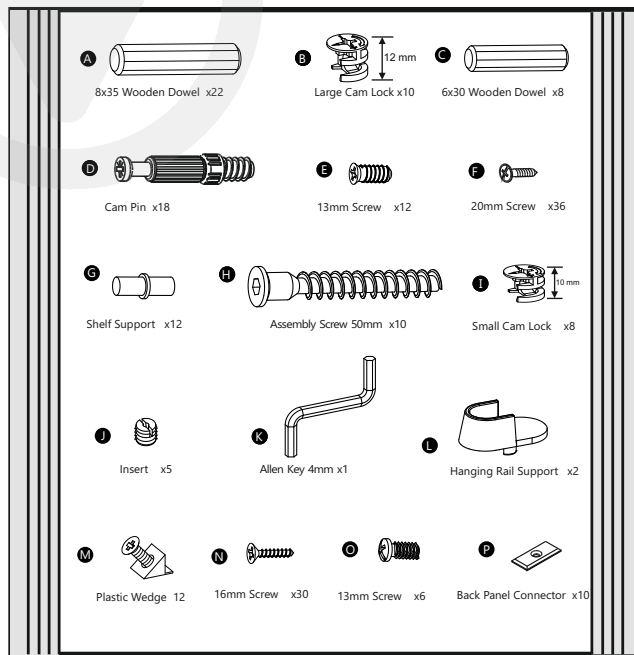

!!!

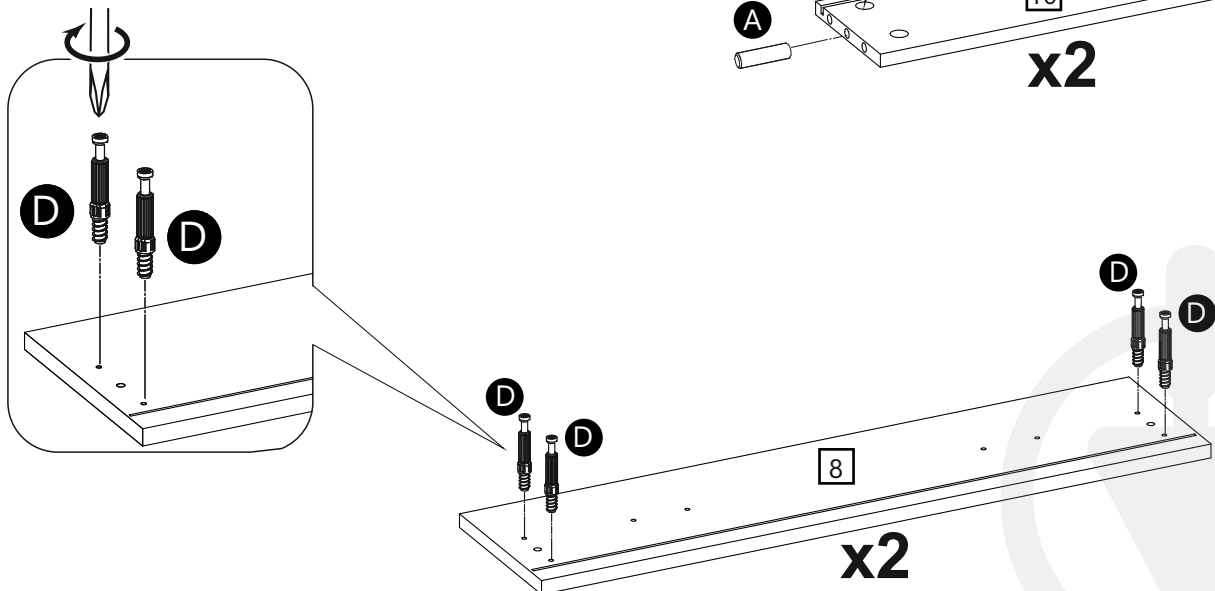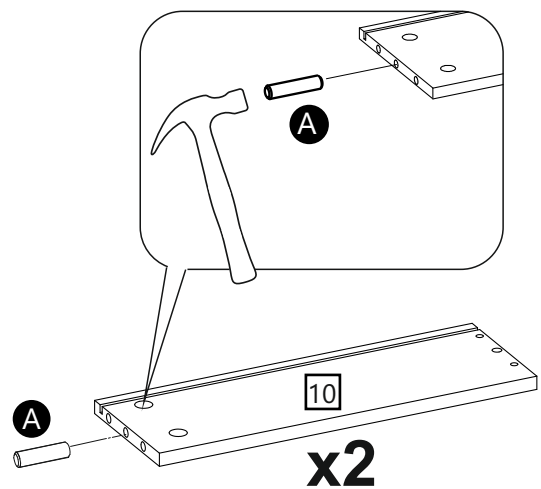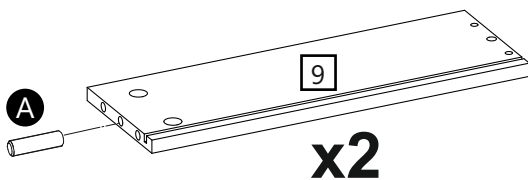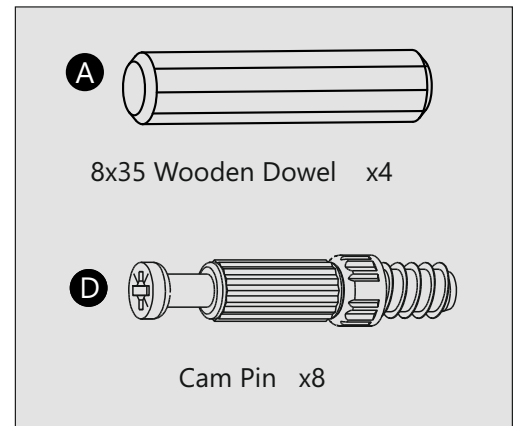


2

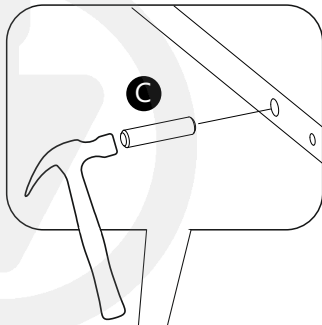


!!!

C




6x30 Wooden Dowel x8

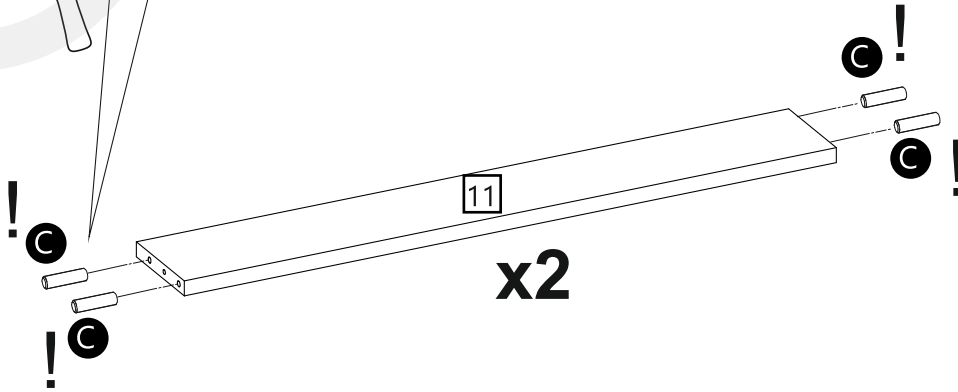


3

H











Assembly Screw 50 mm x4

K


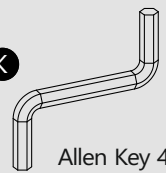


Allen Key 4mm x1

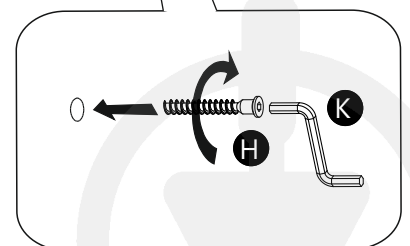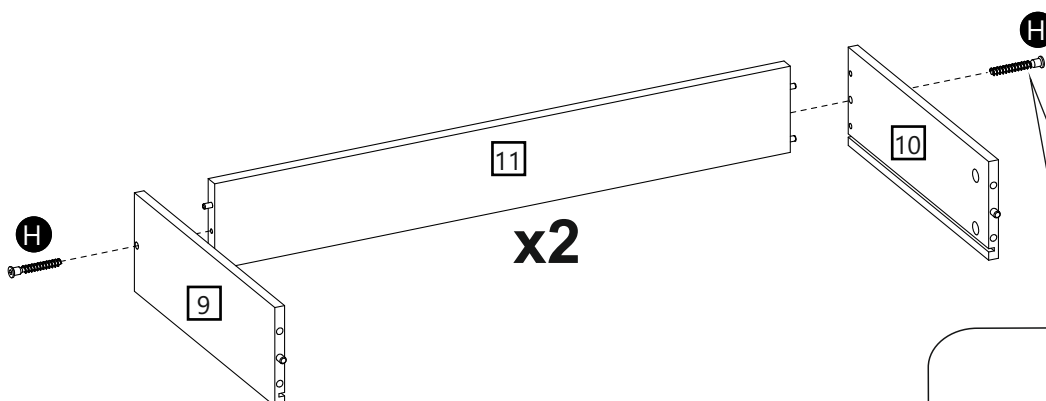

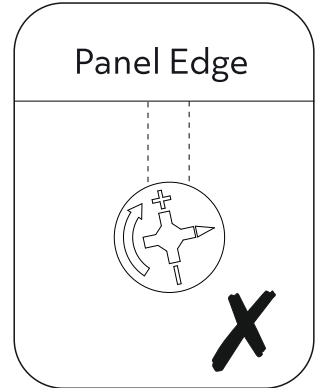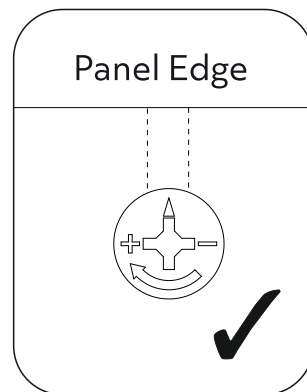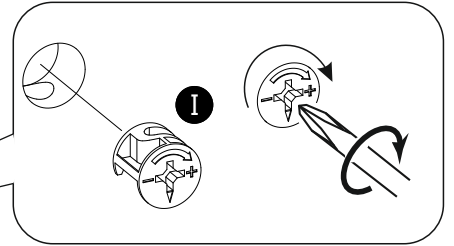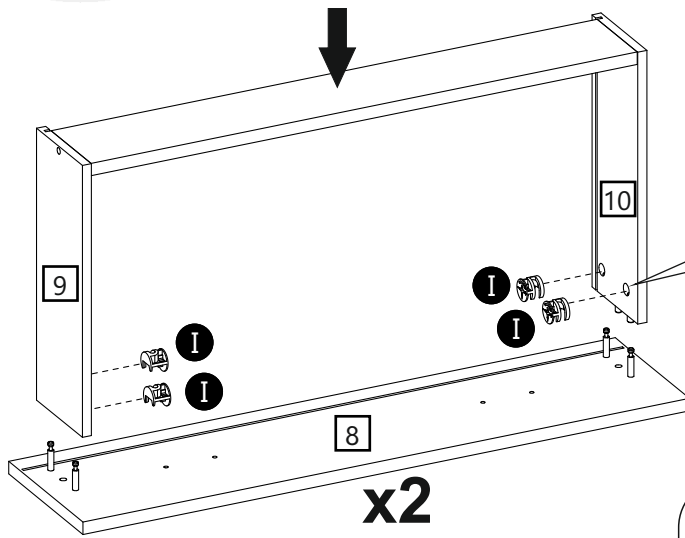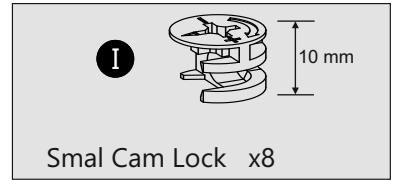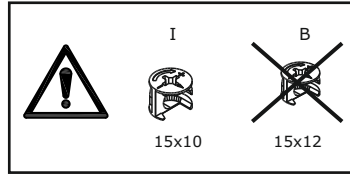


5

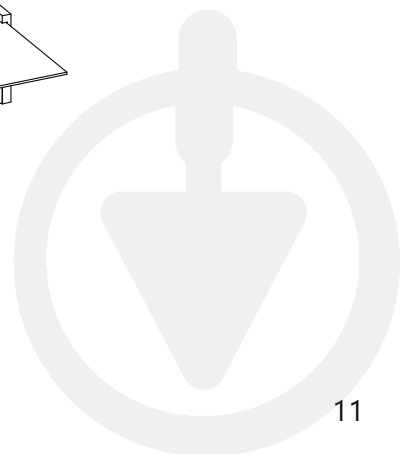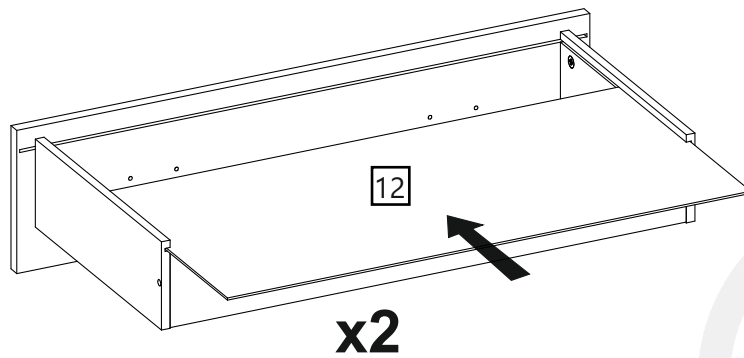


6

Z

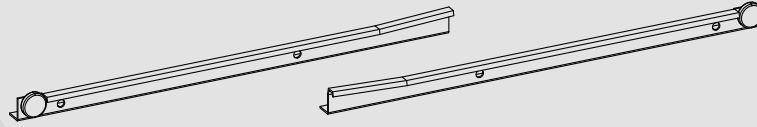


Drawer runners 450mm x2

F




20mm Screw x22





N





16mm Screw x4

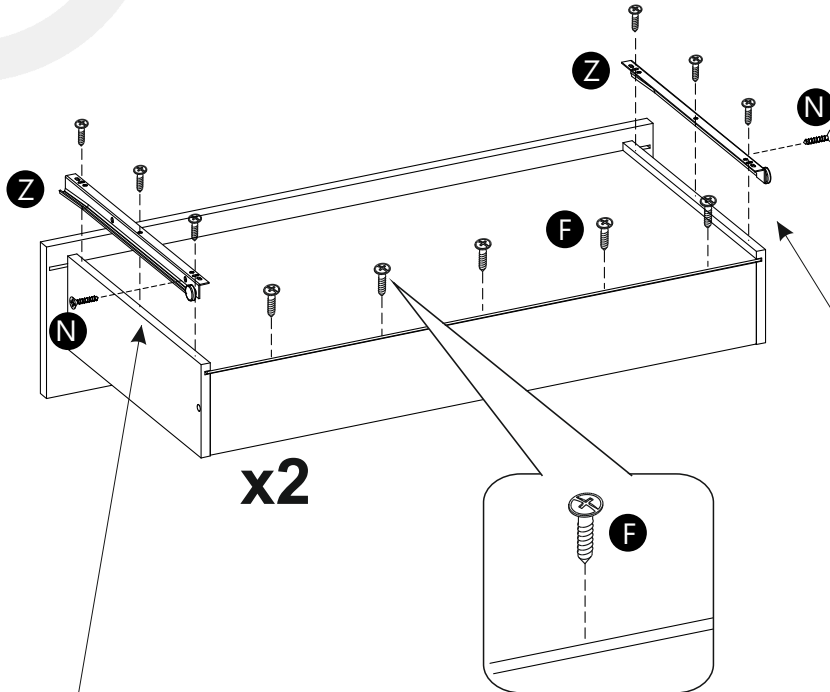

x2

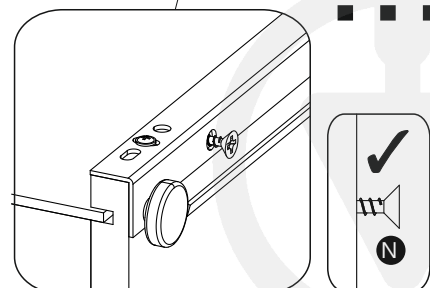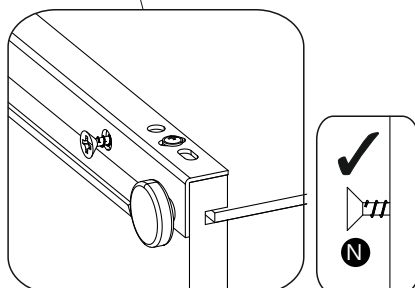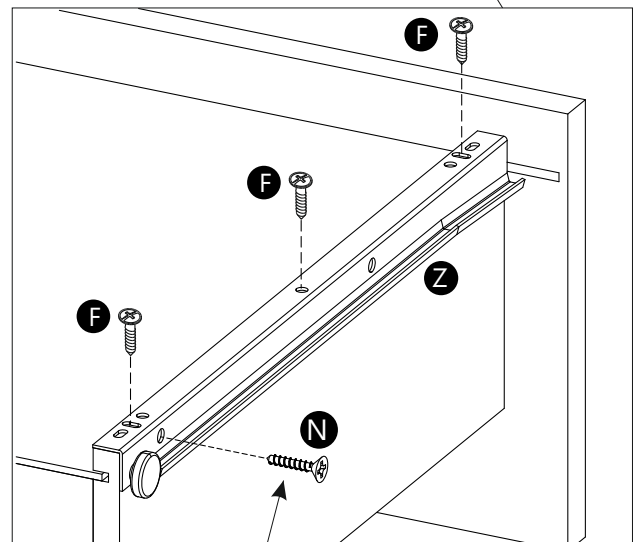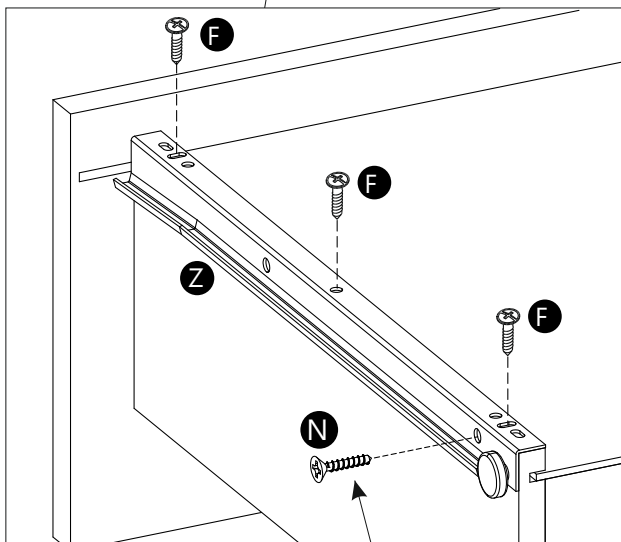



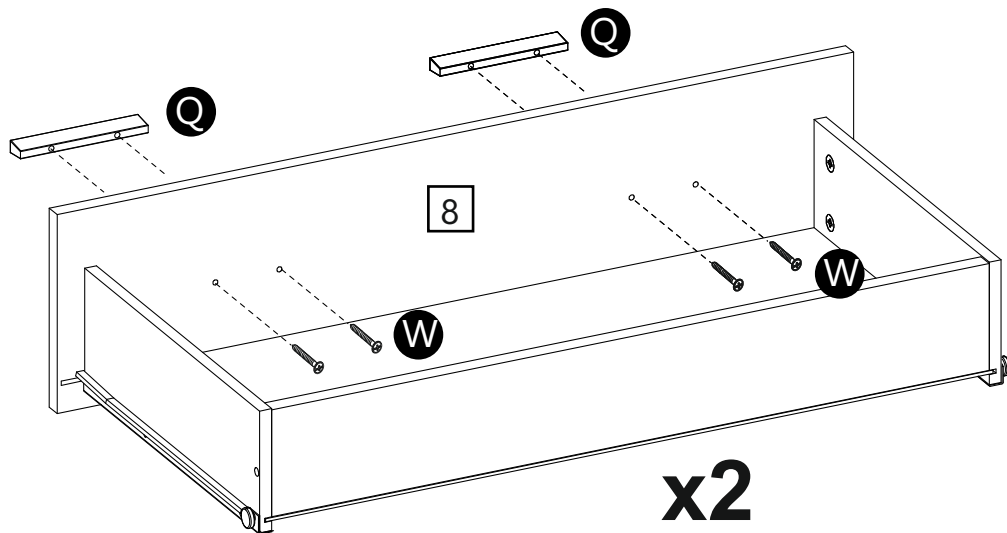
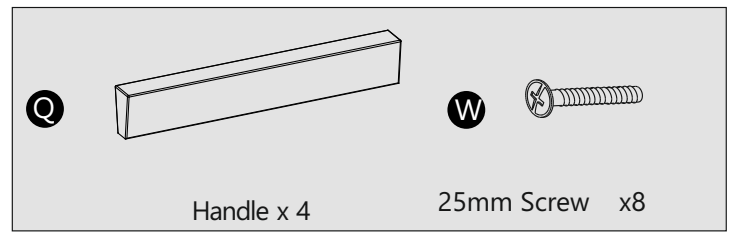


Safely set aside the assembled drawers whilst we assemble the wardrobe frame



8


Now lets assemble the frame

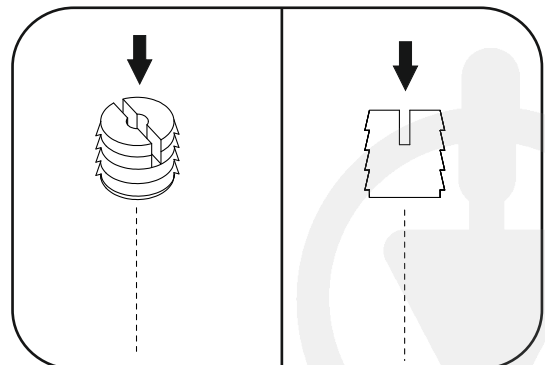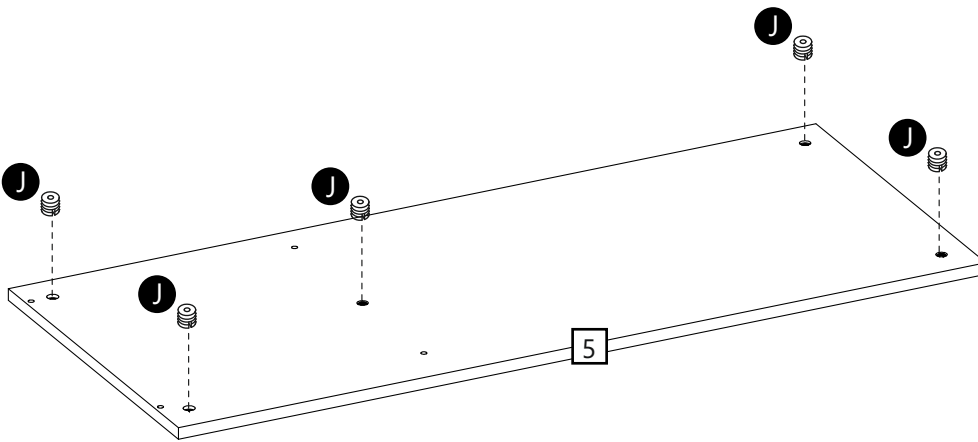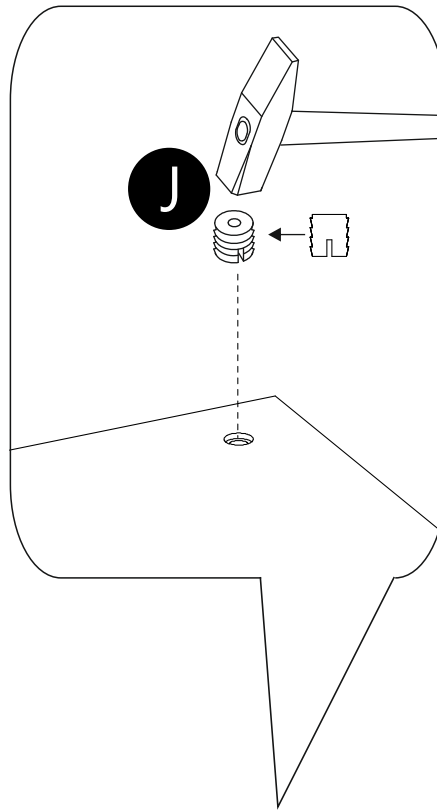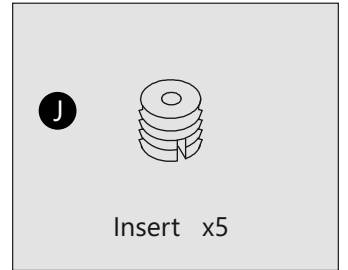

9


A

A





8x35 Wooden Dowel x4



G



Shelf Support x6

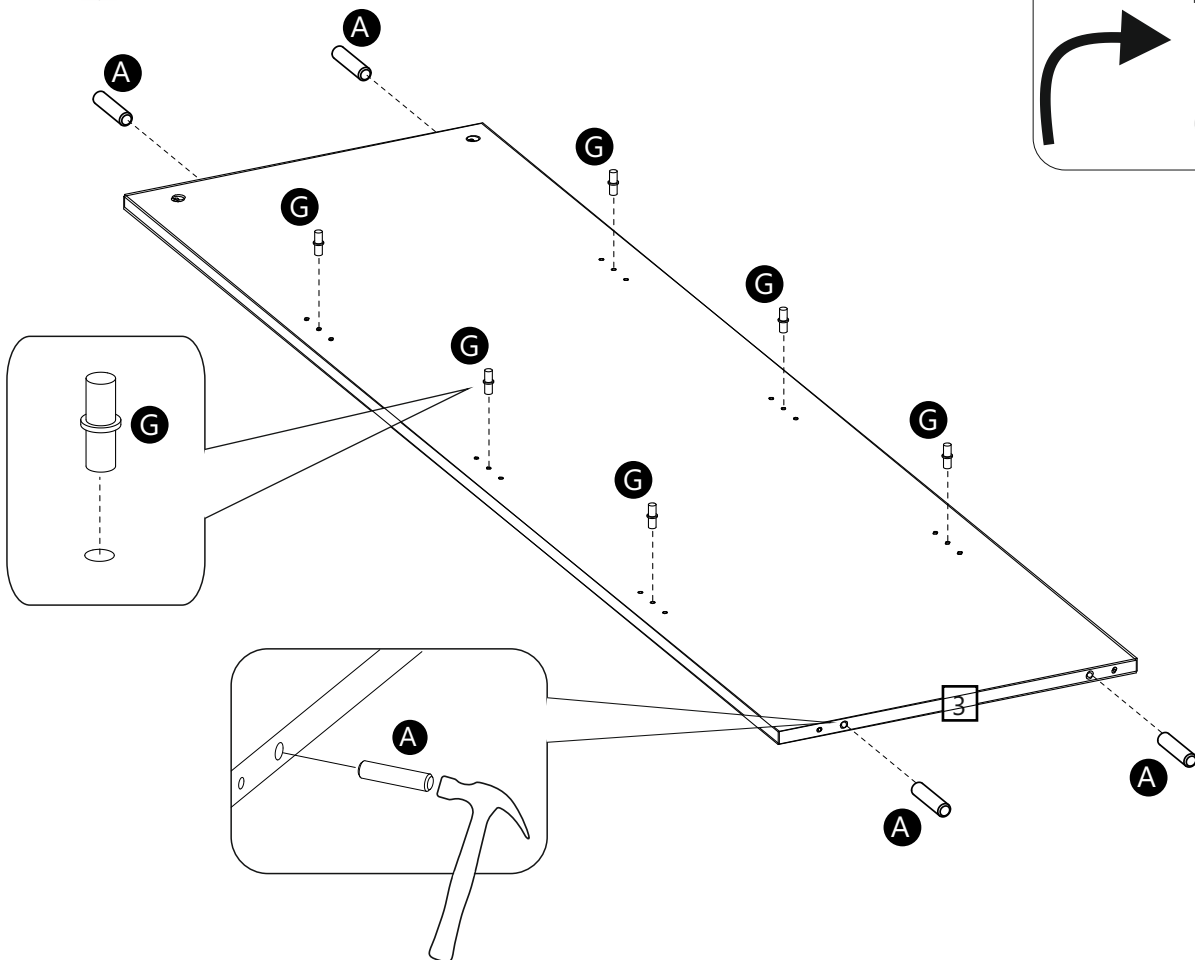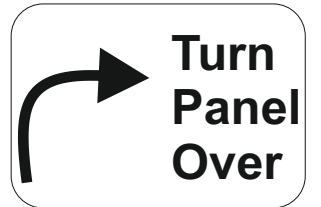


9 B

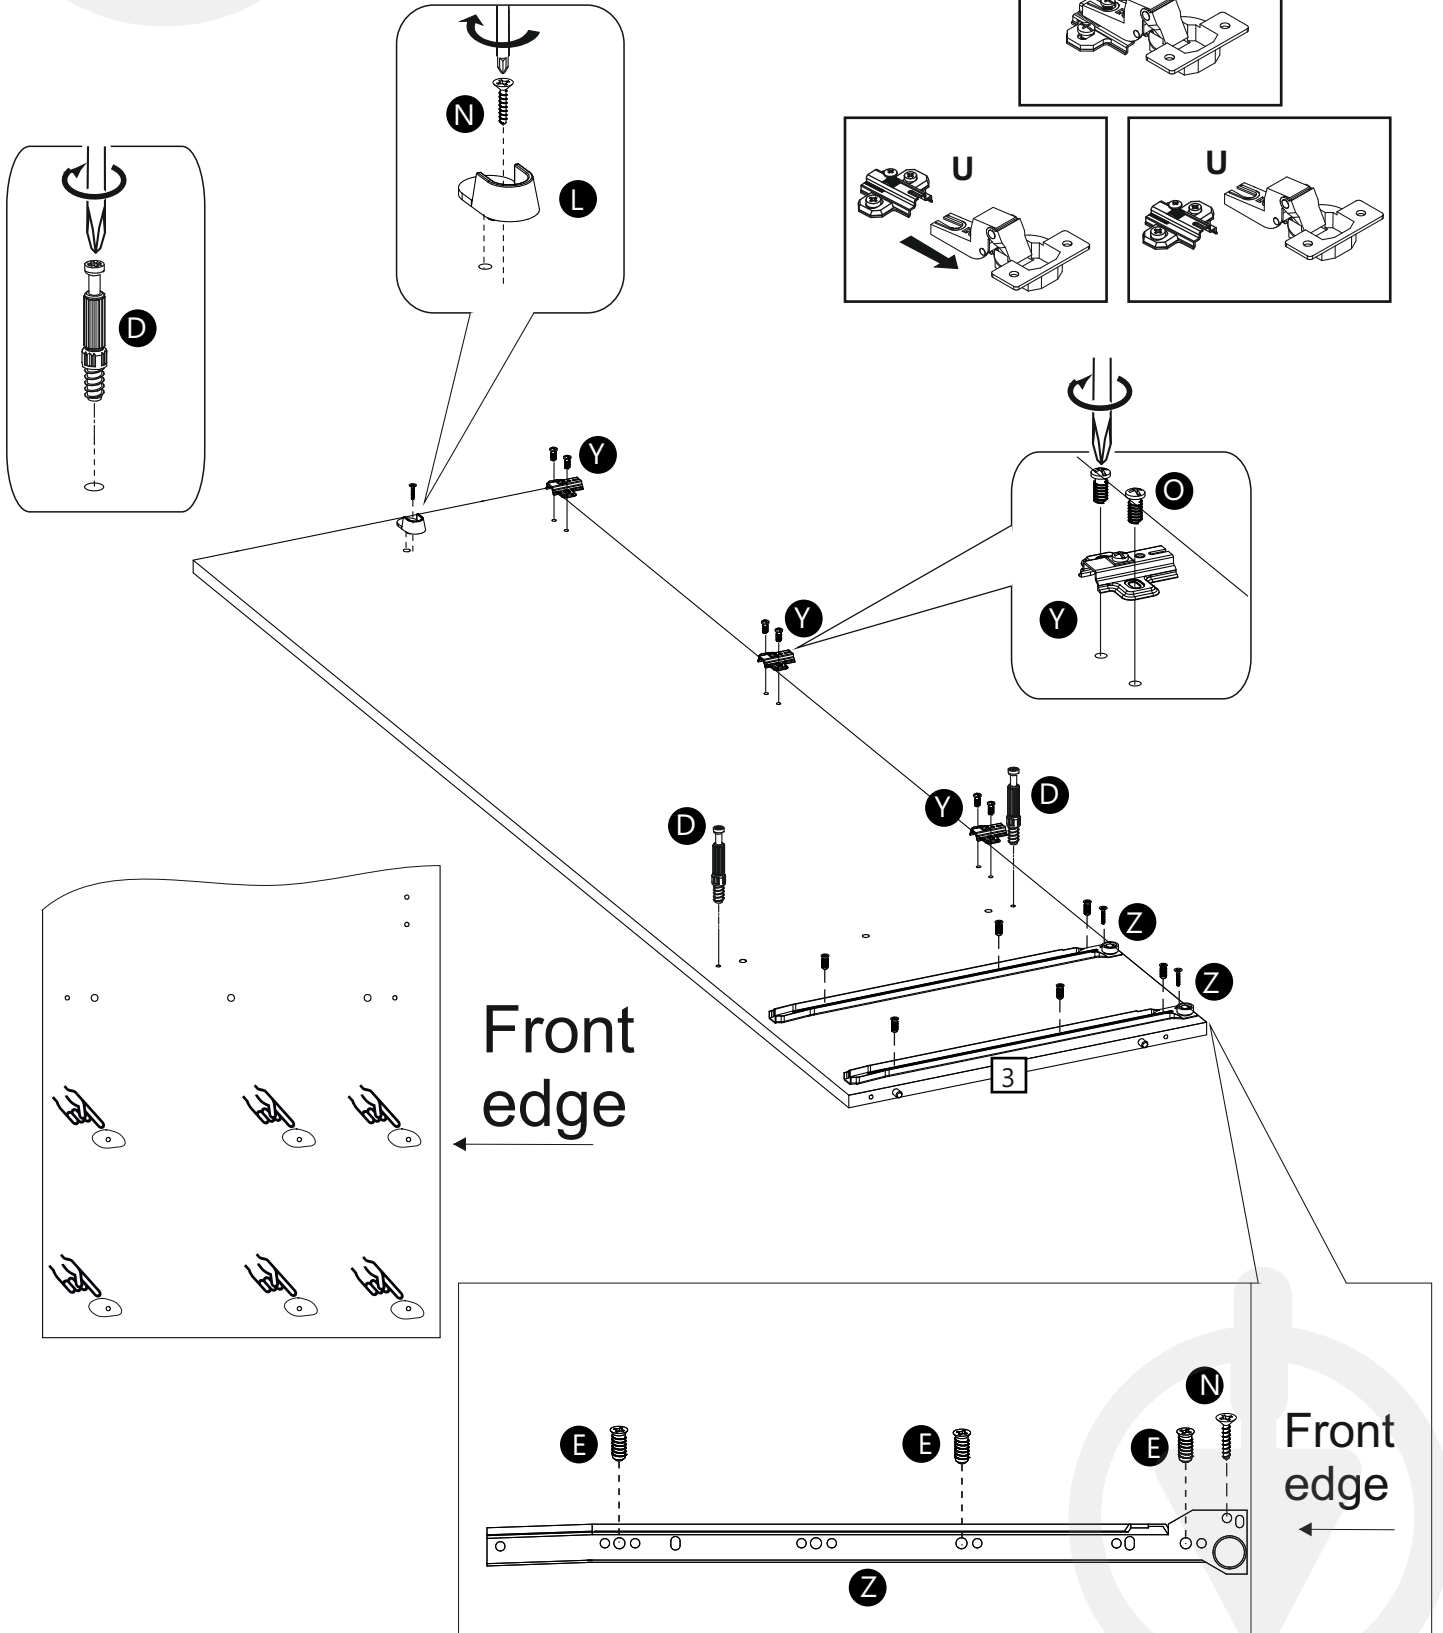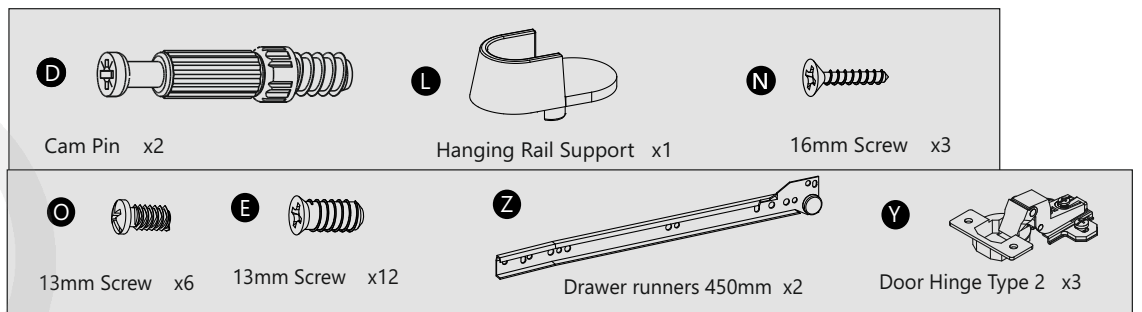


10

A




8x35 Wooden Dowel x4

Z

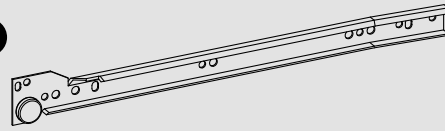


Drawer runners 450mm x2

E




13mm Screw x6

D




Cam Pin x2

L

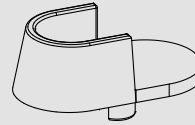


Hanging Rail Support x1

N











16mm Screw x3

Front
edge


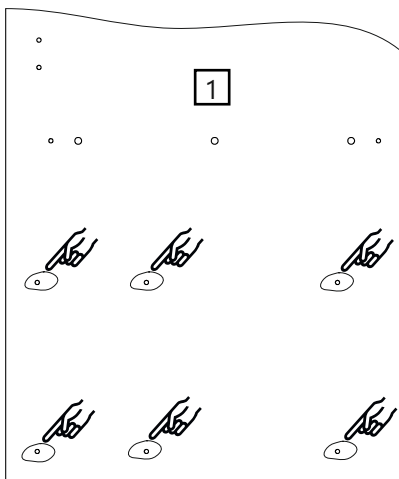


Front
edge

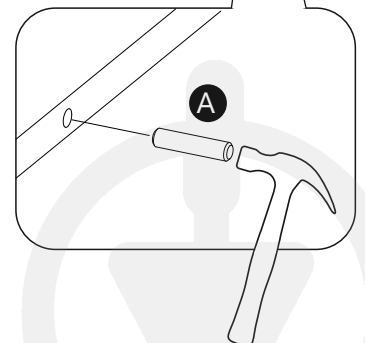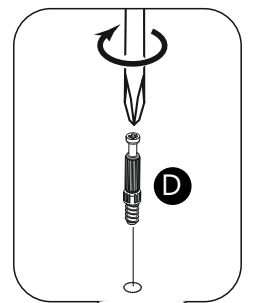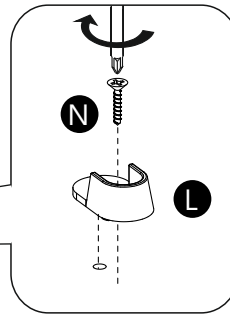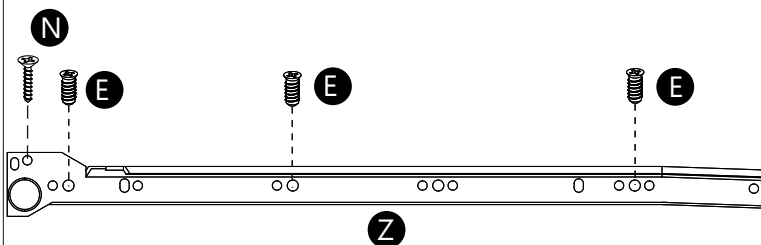

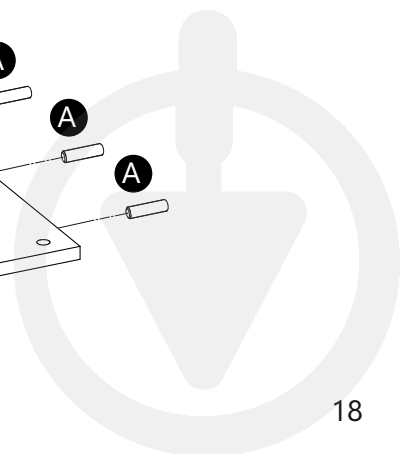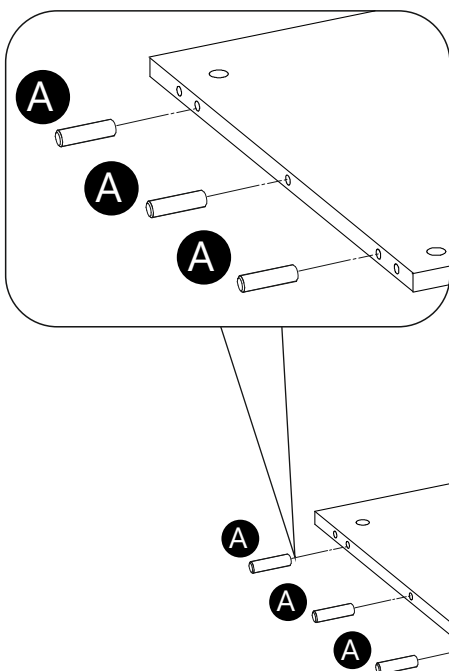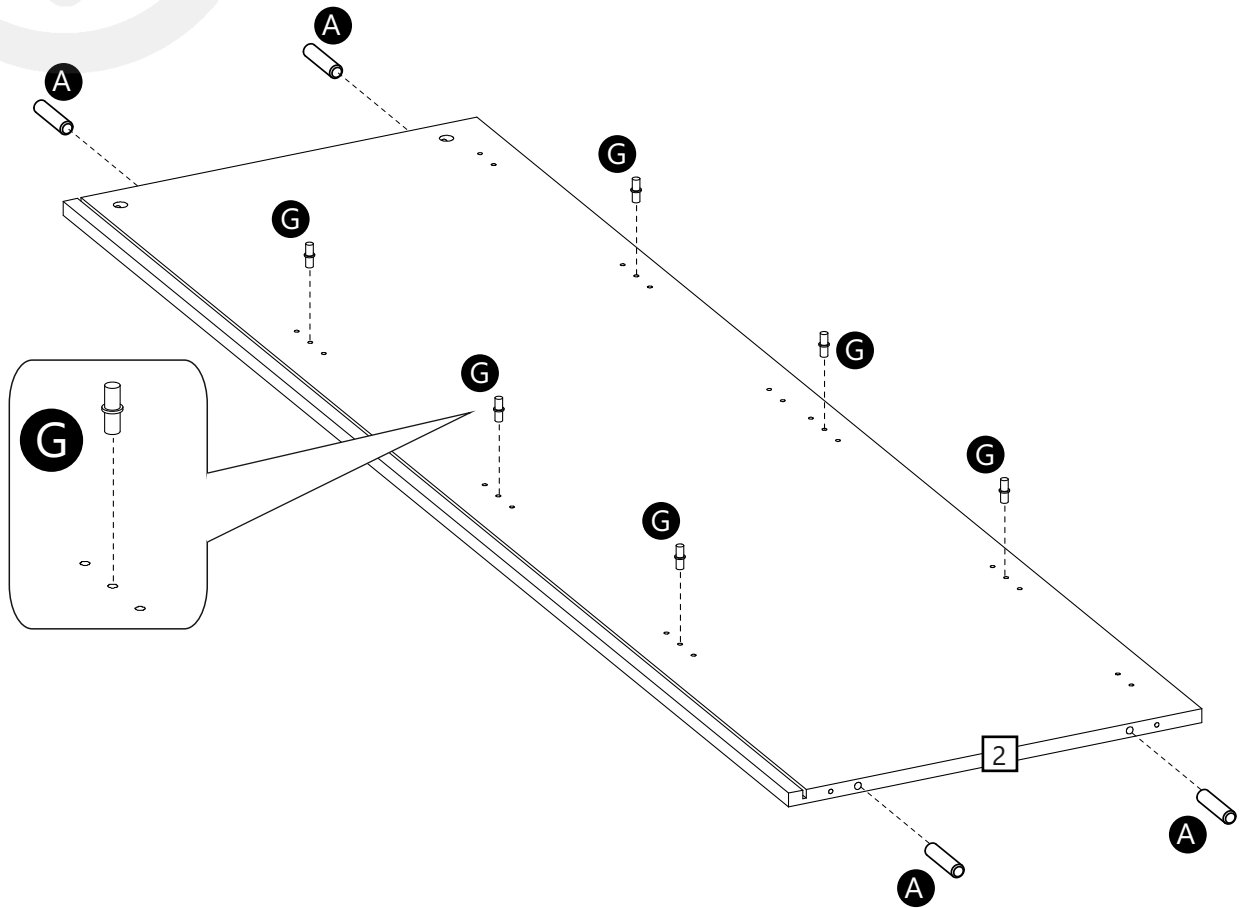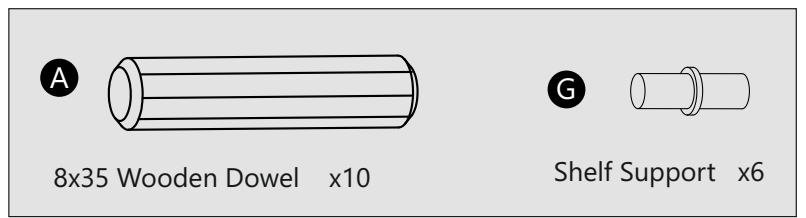


12

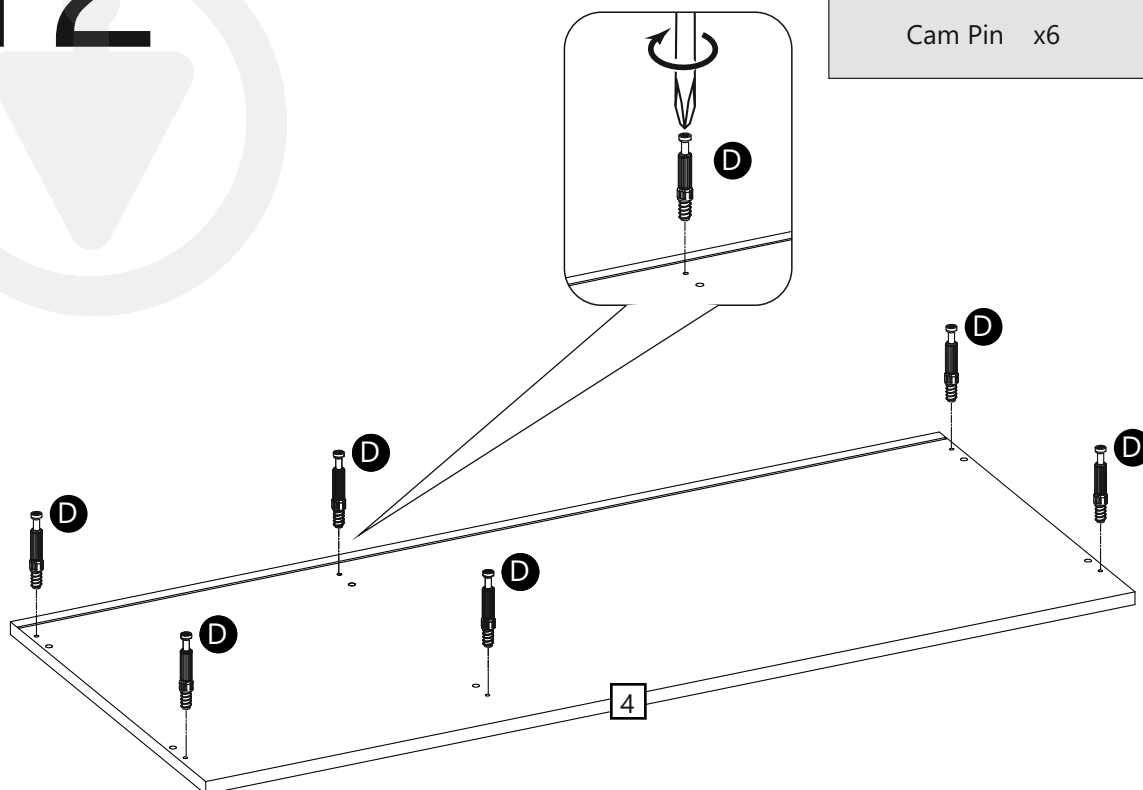


Cam Pin x6

13

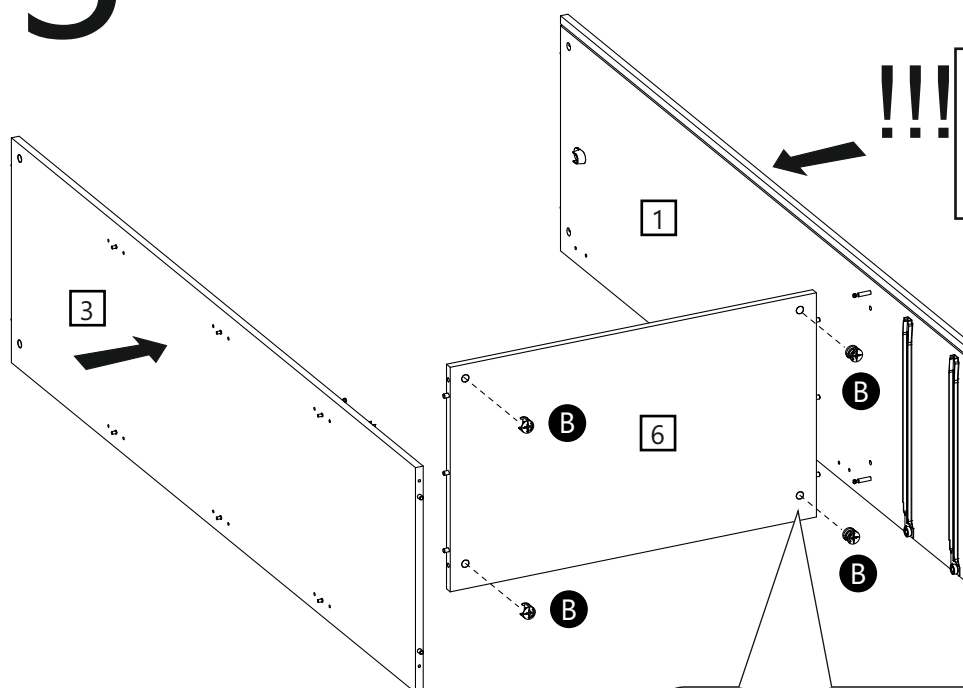

B

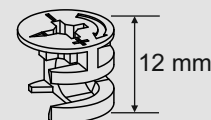

Large Cam Lock x4



B



15x12

I




15x10


Panel Edge









B

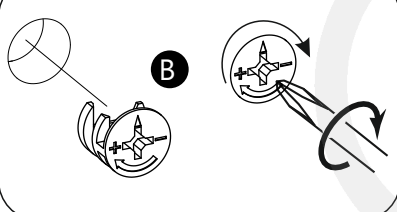

14






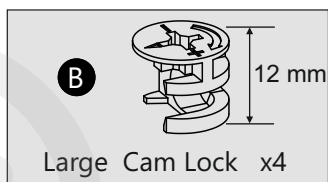


!!!

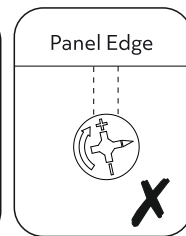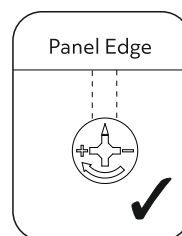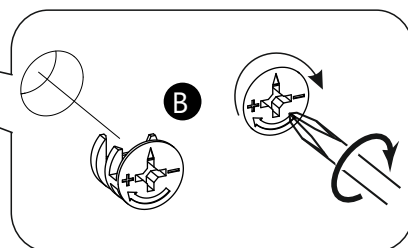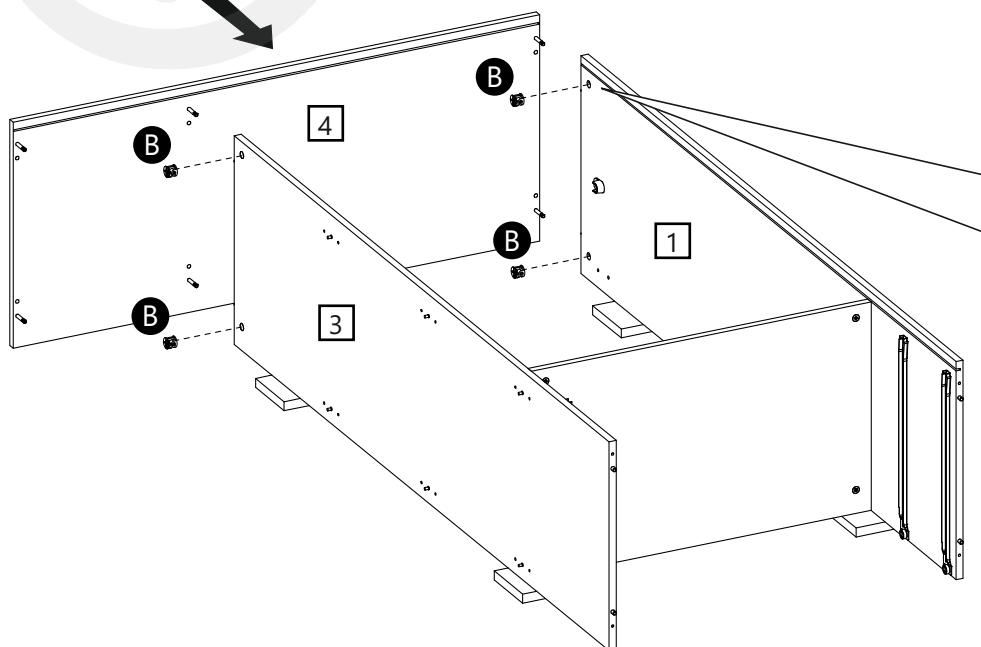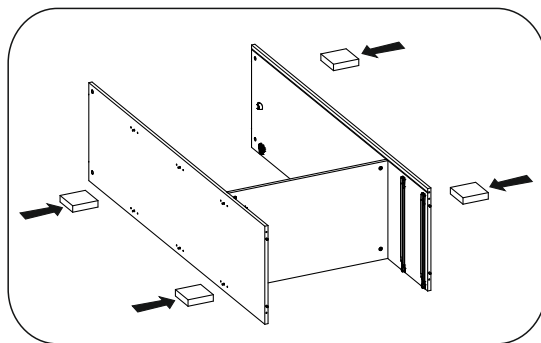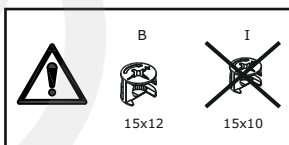


15

!!!

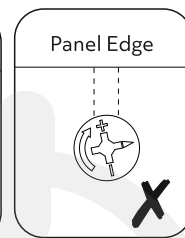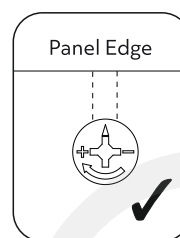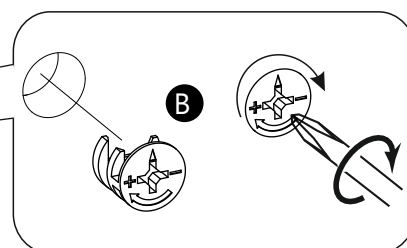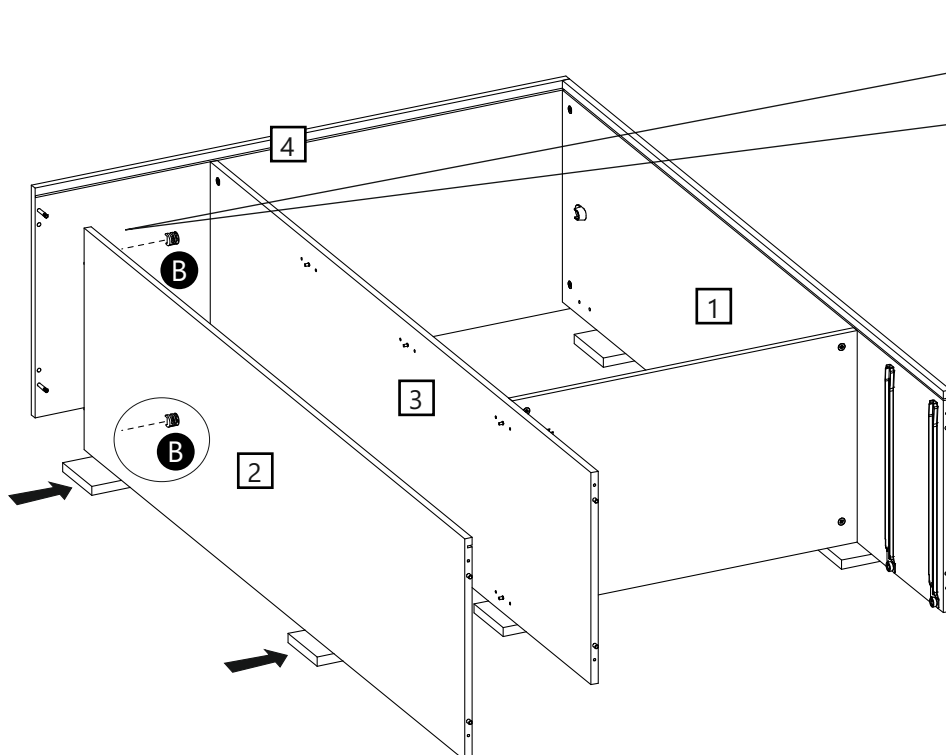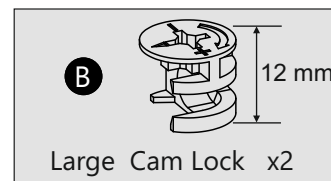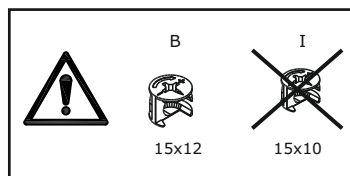


16

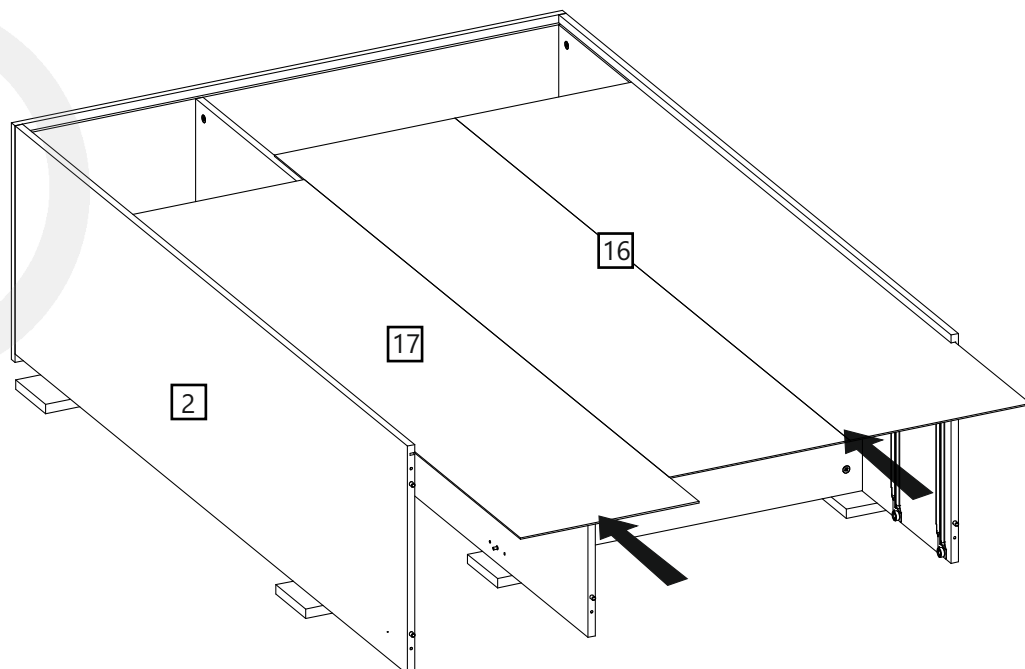


17

H





Assembly Screw 50 mm x6





K

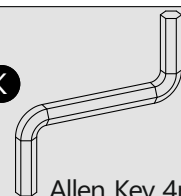






Allen Key 4mm x1

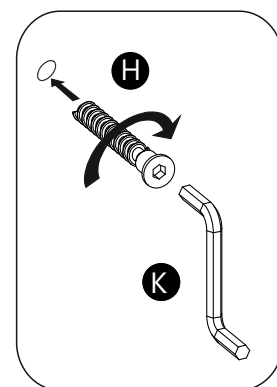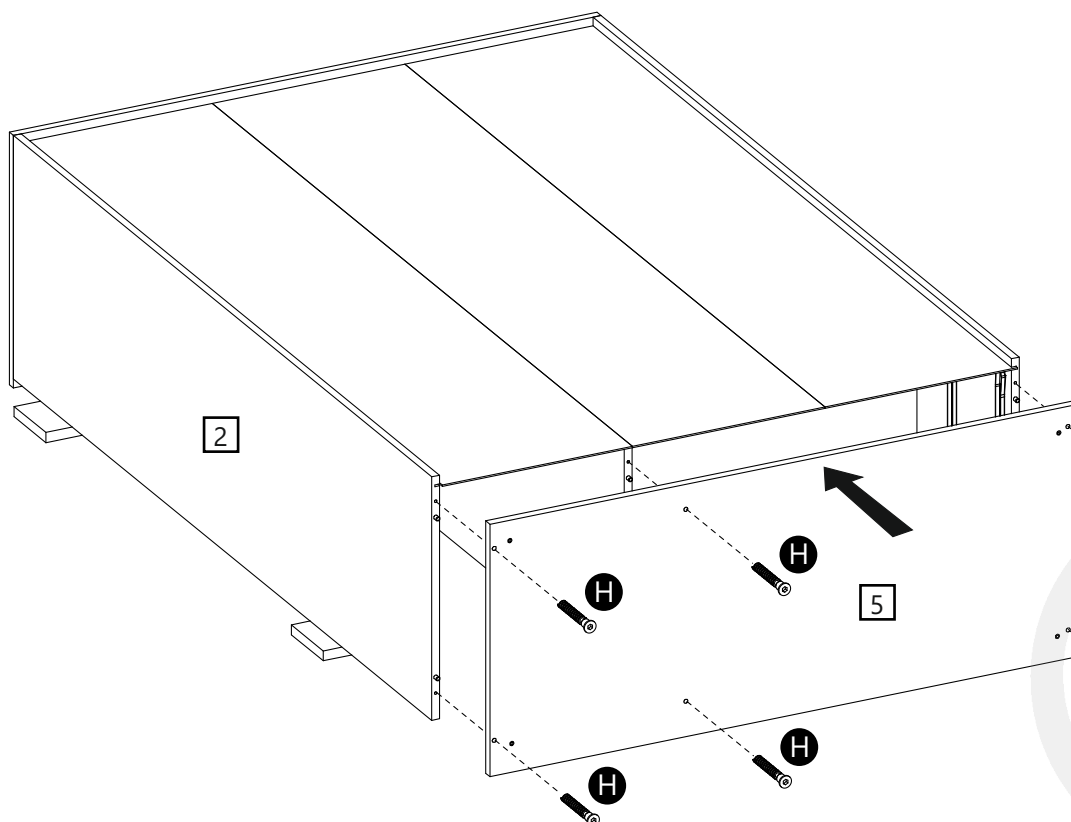

18

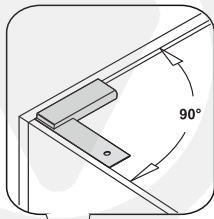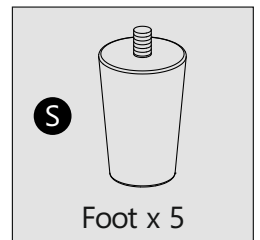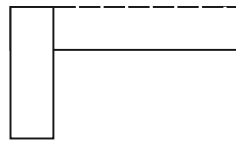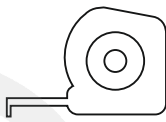


A=B

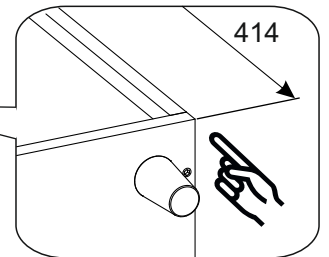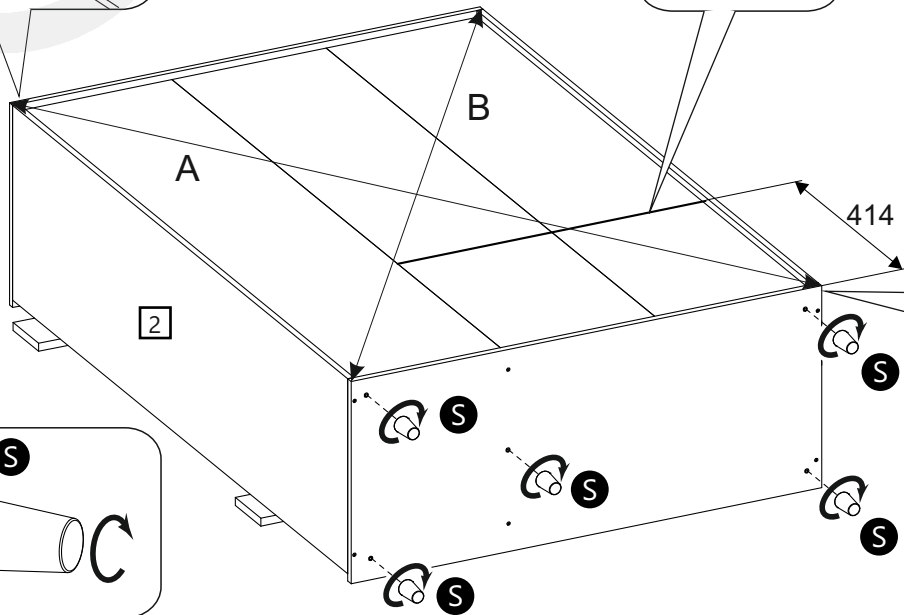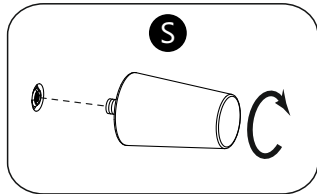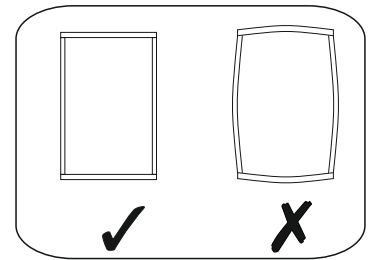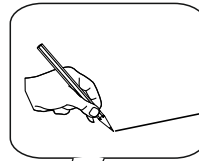

19


M



F








P



Plastic Wedge x12


20mm Screw x14

Back Panel Connector x10

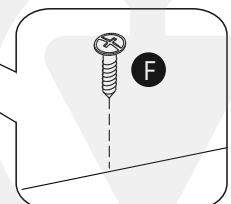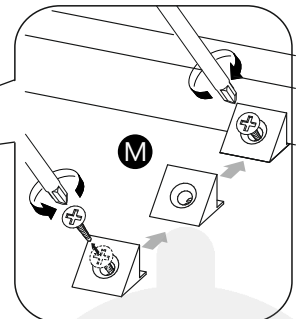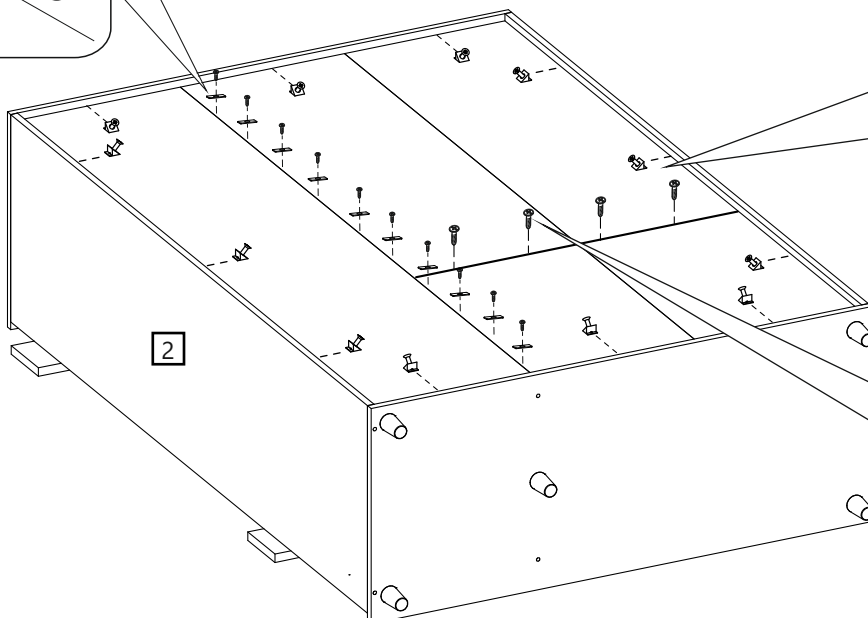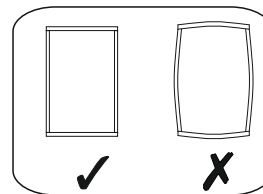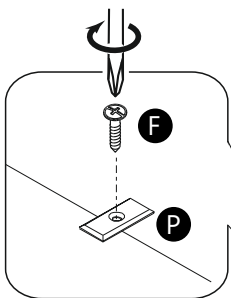


20

T

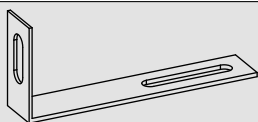

Wall Fixing Bracket x2

N




16mm Screw x2

V





Hanging Rail x1

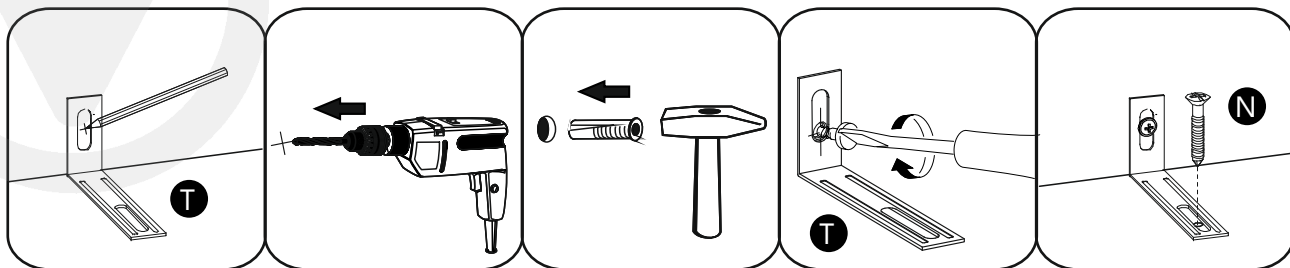


WARNING!


IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED

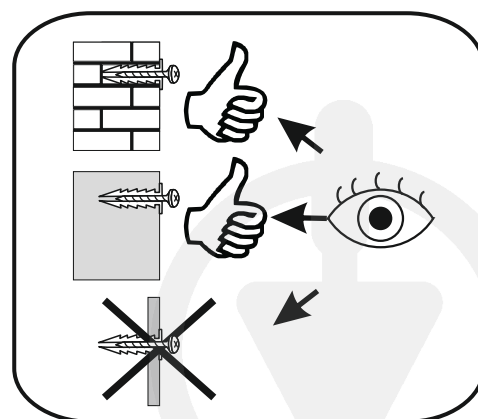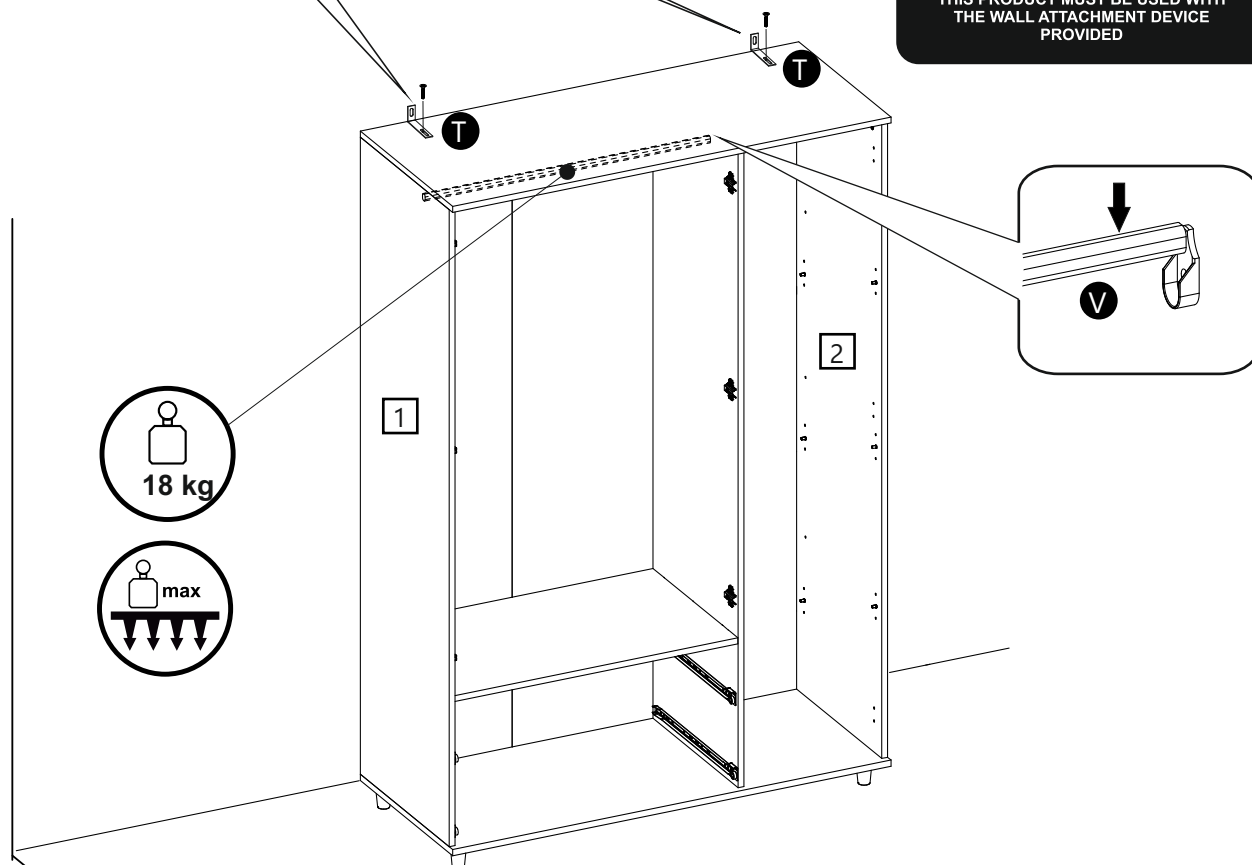




21

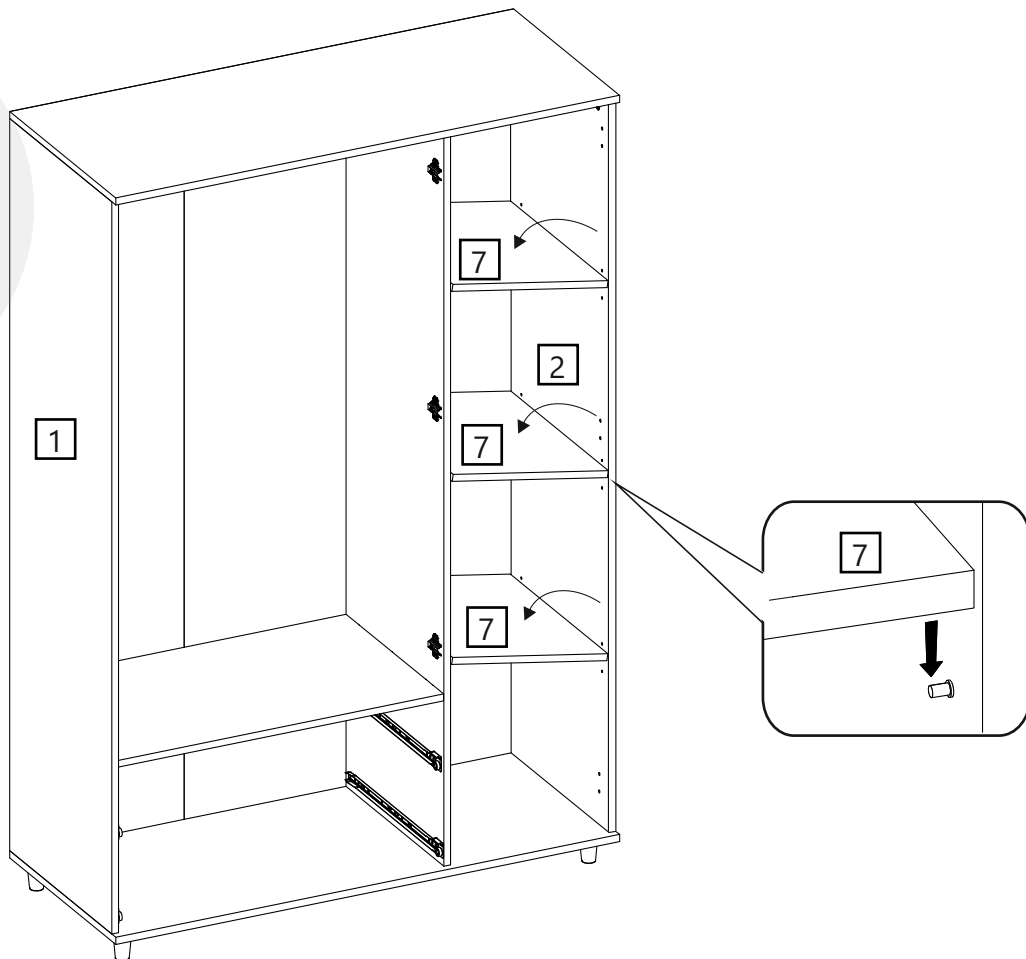




22

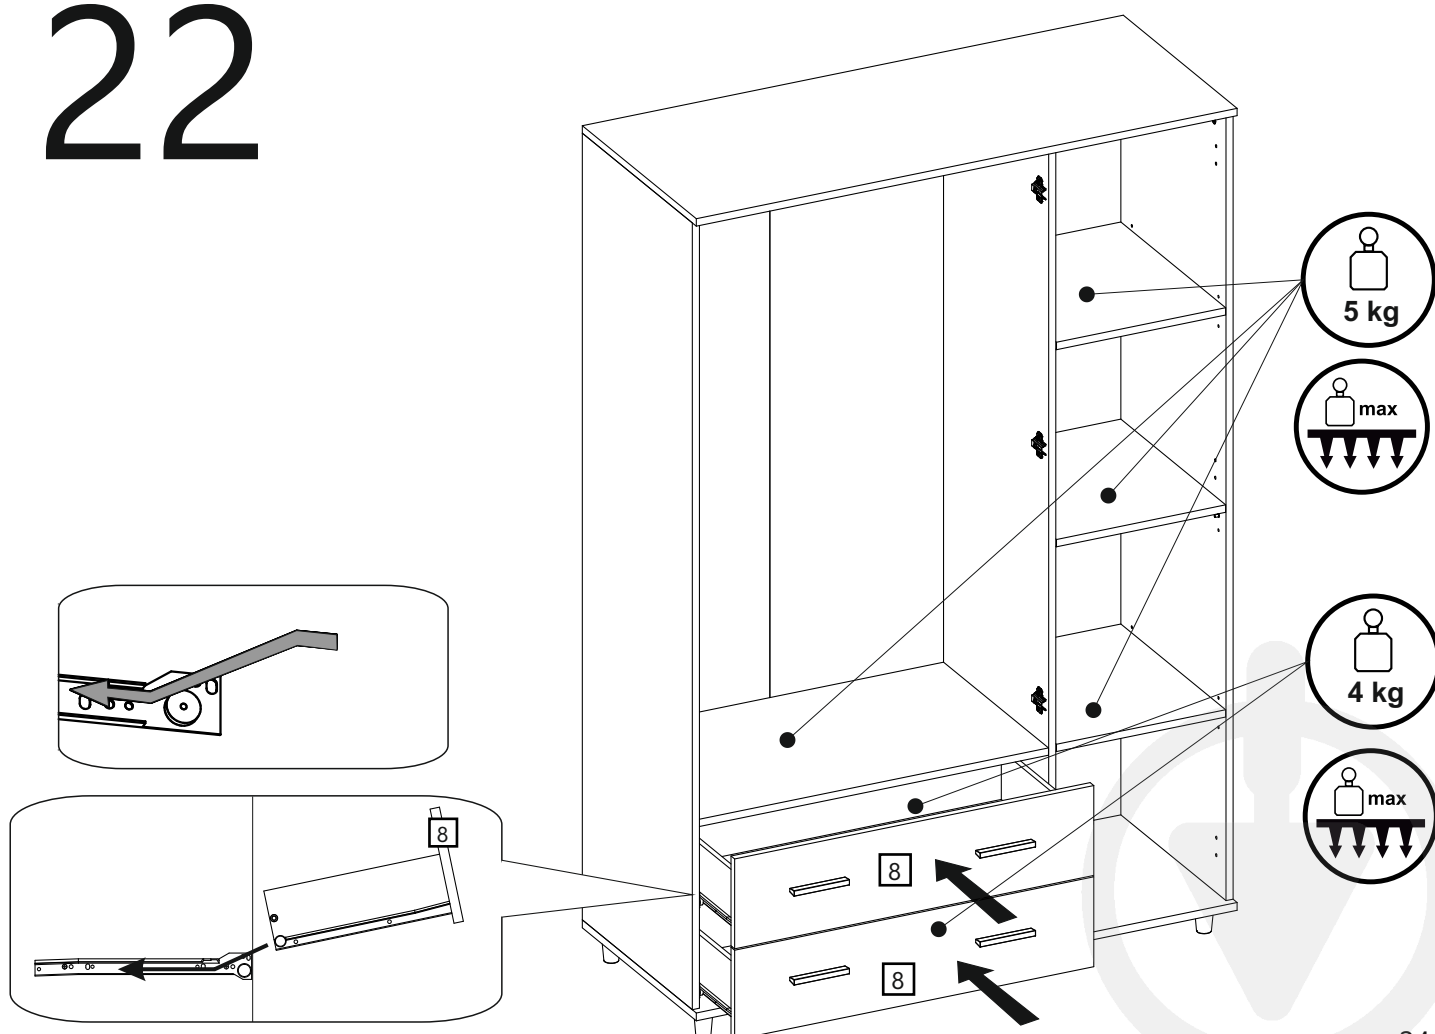



23

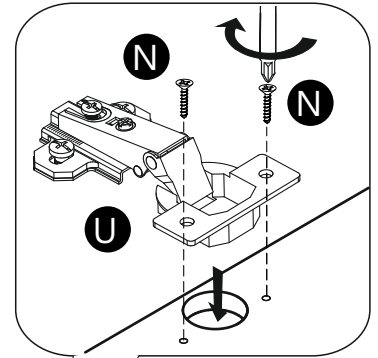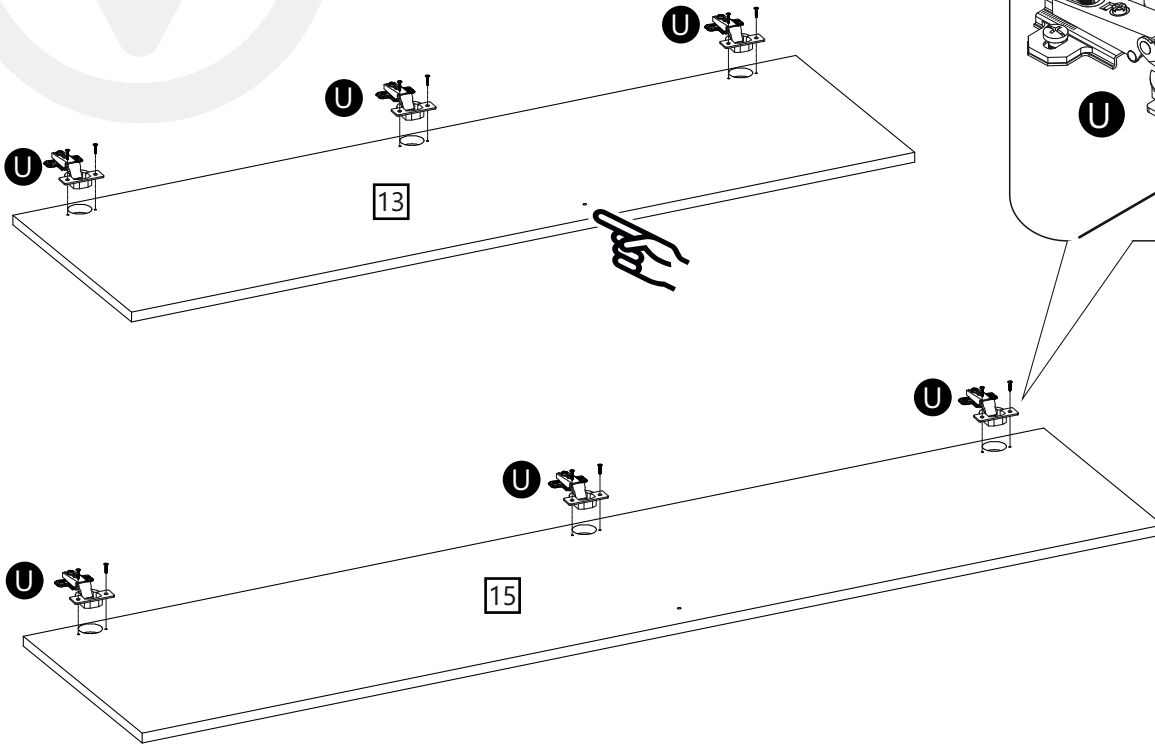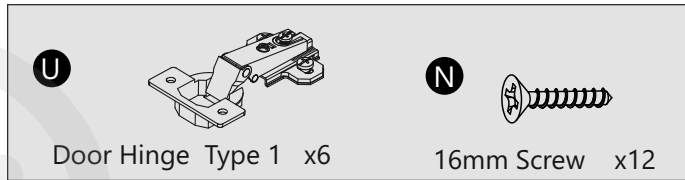


24

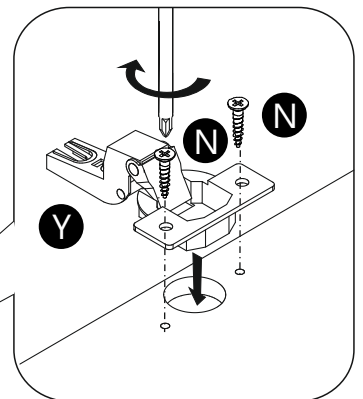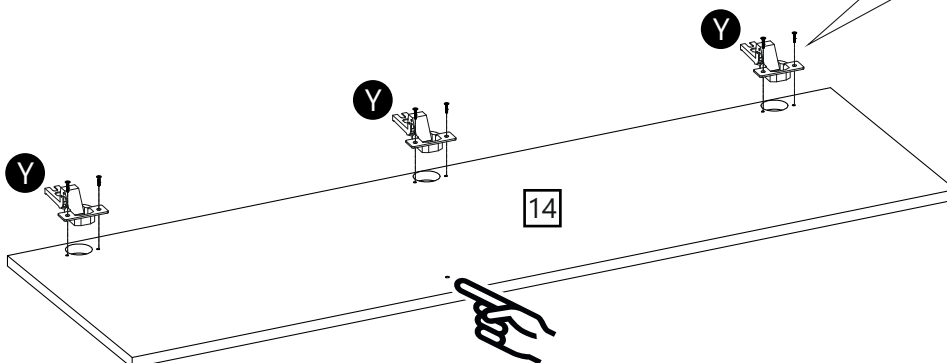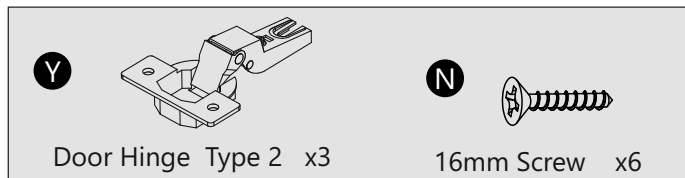


25

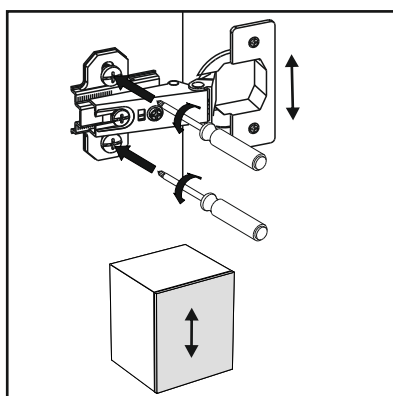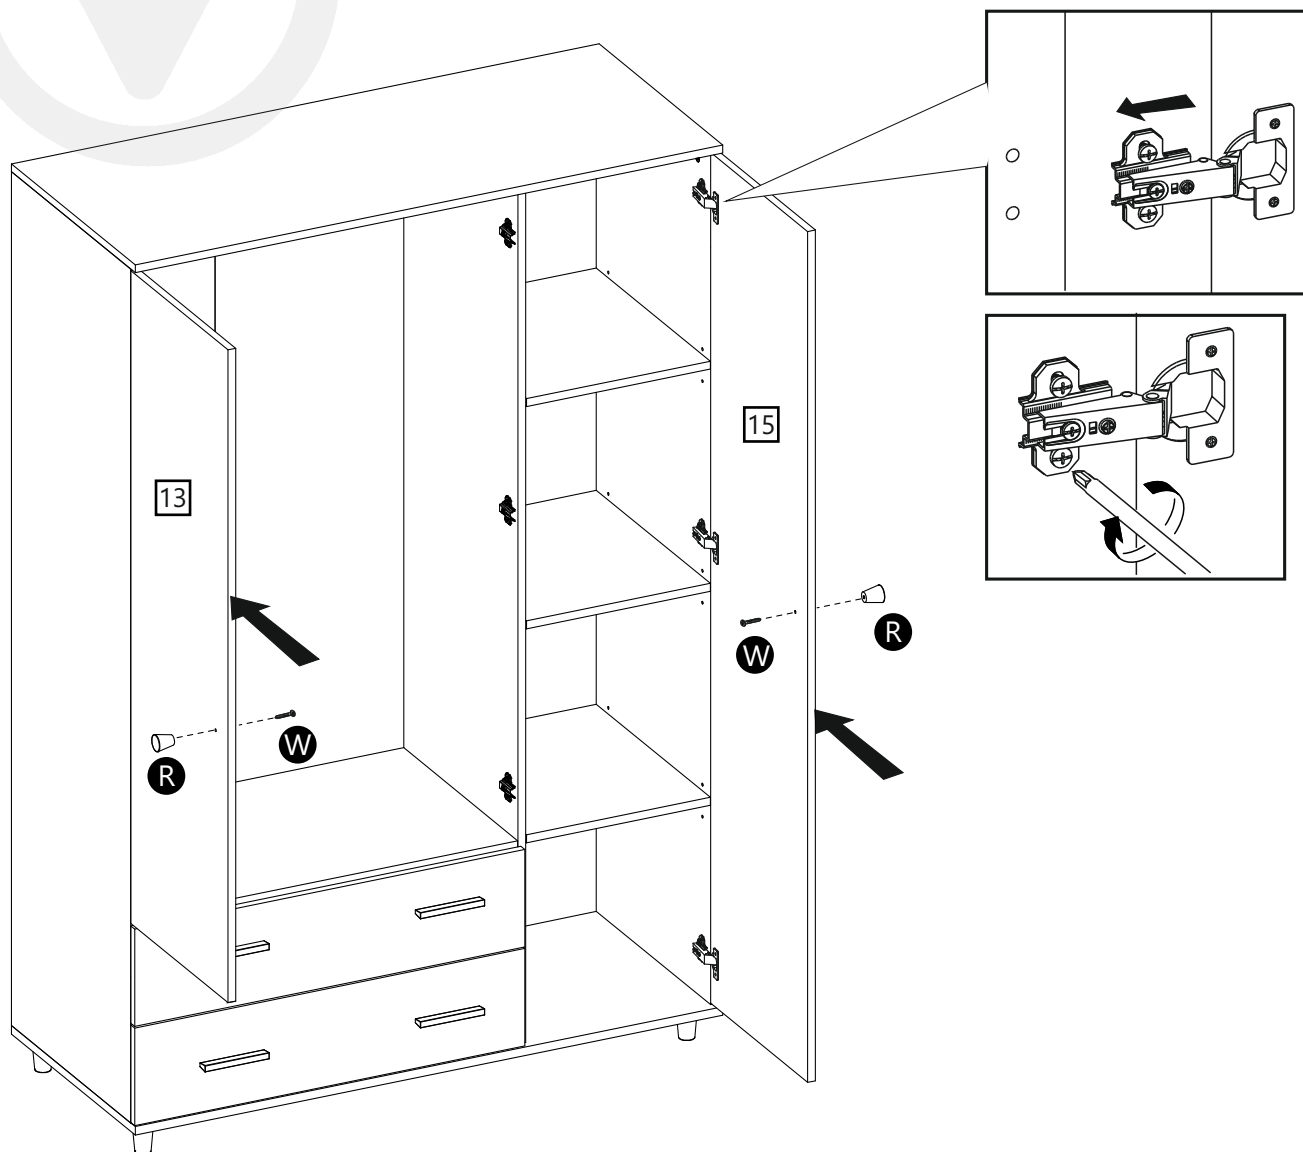

A: Vertical door adjustment (moving the door up-down) via the slots in the hinge mounting plate.




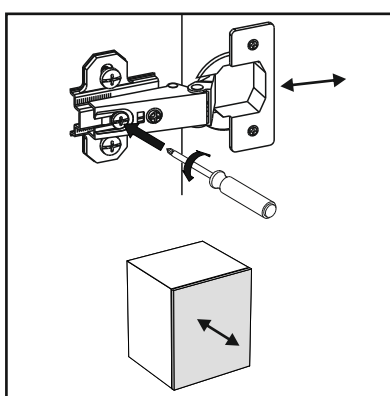


B: Front to back door adjustment (spacing the door off the frame) by slackening the hinge arm fixing screw.

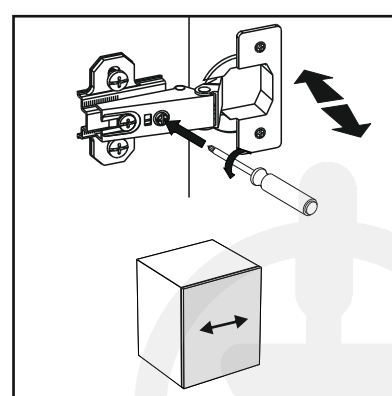


C: Lateral door adjustment (moving the door left or right) by turning the screw shown on the arm in or out.


26

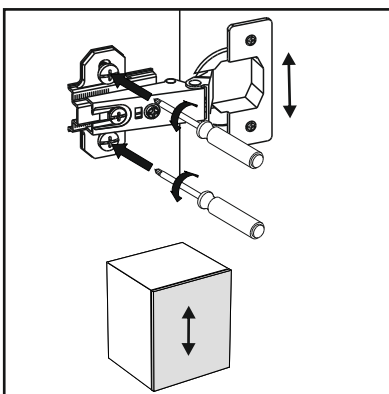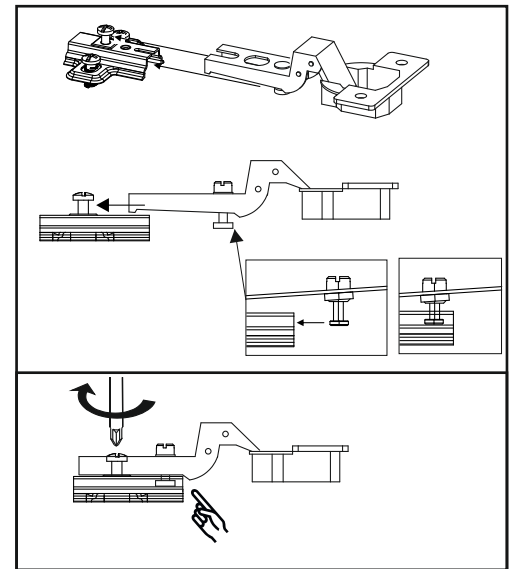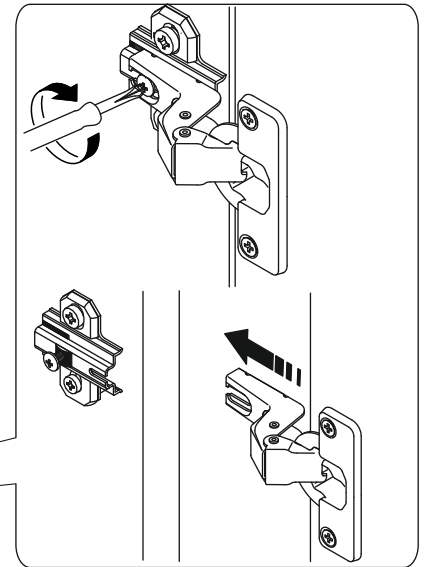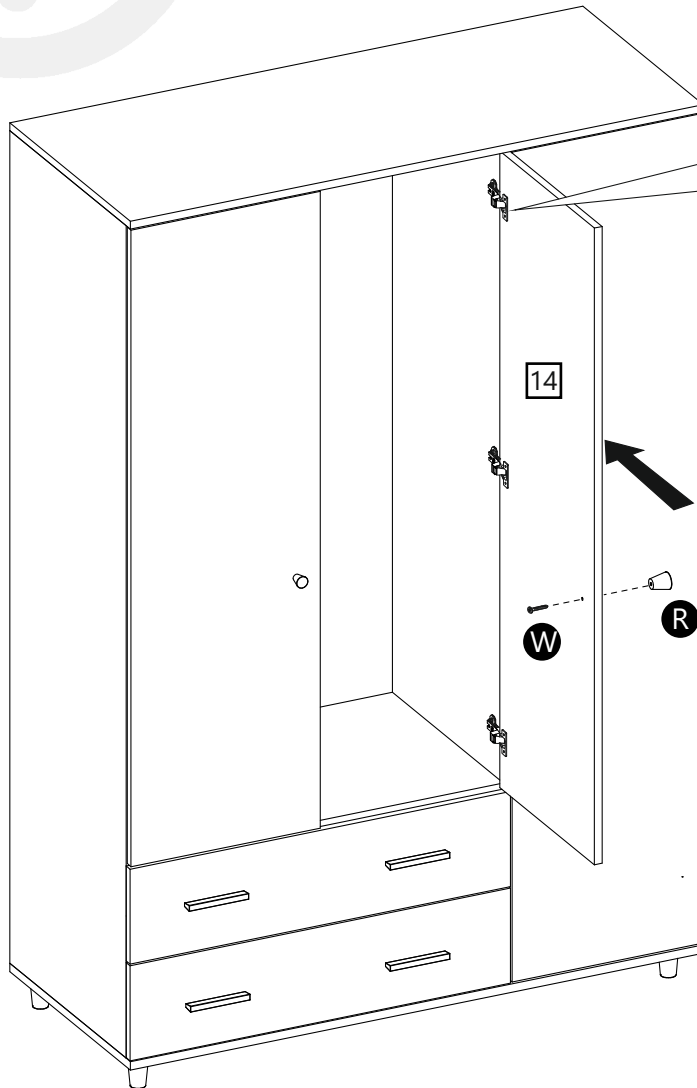

A: Vertical door adjustment (moving the door up-down) via the slots in the hinge mounting plate.

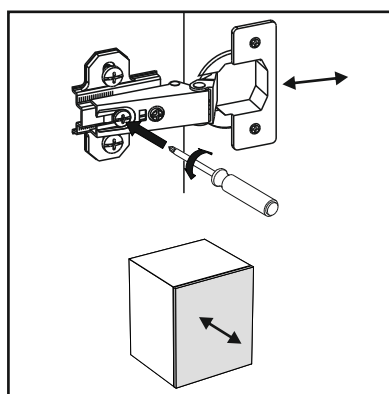

B: Front to back door adjustment (spacing the door off the frame) by slackening the hinge arm fixing screw.

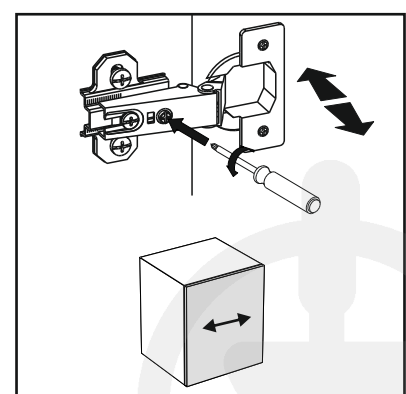

C: Lateral door by adjustment (moving the door left or right) by turning the screw shown on the arm in or out.